

WORK-BENCH™

ASSEMBLY INSTRUCTIONS

COMPONENTS: 2-Panel System




Panels: (2) 2'x3'

Legs: (4) 12"

(4) 24"


Internal Stackers: (4)

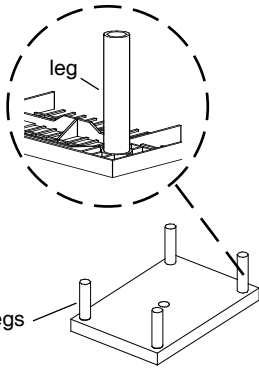


Step 1

W3624 and WT3624


Available in Grid or Solid Top

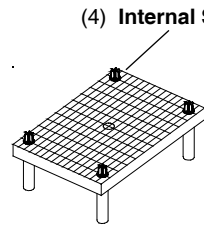

Step 2

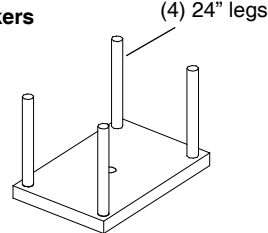


Step 3

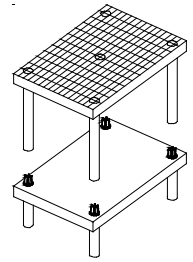

Step 4

COMPONENTS: 2-Panel System




Panels: (2) 2'x4'


Legs: (6) 12"

(6) 24"


Internal Stackers: (6)

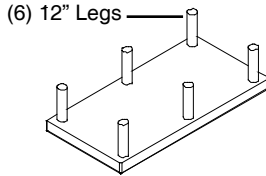


Step 1

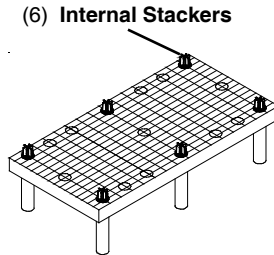

Step 2

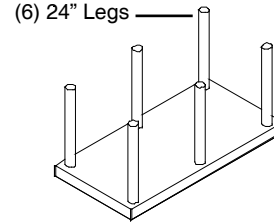


Step 3

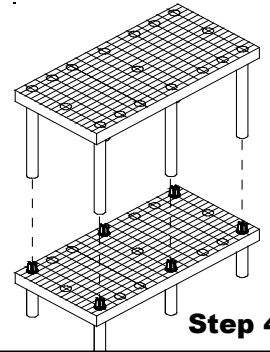

Step 4

W6624 and WT6624

COMPONENTS: 2-Panel System




Panels: (2) 2'x5.5'


Legs: (6) 12"

(6) 24"


Internal Stackers: (6)

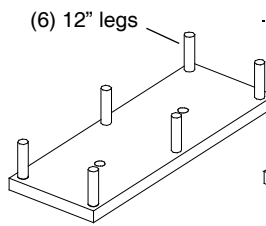


Step 1

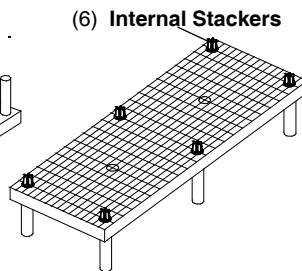

Step 2

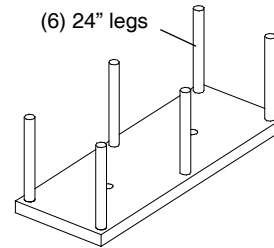

Step 3

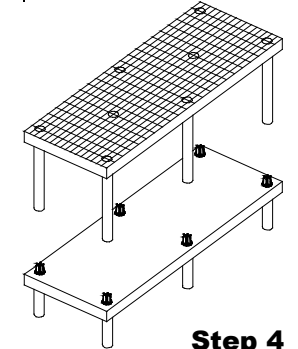

Step 4

W9624 and WT9624

COMPONENTS: 2-Panel System




Panels: (2) 2'x8'


Legs: (8) 12"

(8) 24"


Internal Stackers: (8)

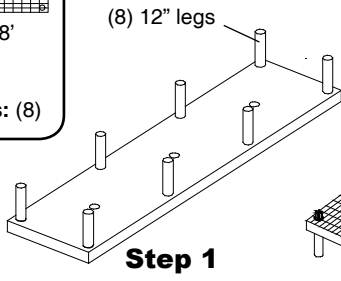


Step 1

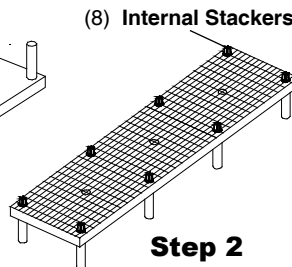

Step 2

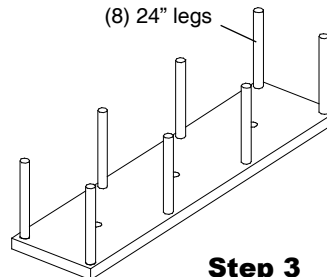

Step 3

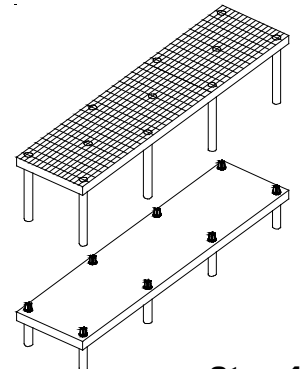

Step 4

Step 1

Lay one of the work-bench panels up-side-down on the floor and insert either 12" or 24" posts into sockets as shown. Return to upright position.

Step 2

Insert **Leg Stackers** over the outside sockets of the previously completed panel as shown.

Step 3

Invert the next level work bench panel and insert the remaining posts into the sockets as shown.

Step 4

Return the second work bench panel to the upright position. Align posts over the leg stackers and push all the way down until the leg stackers are inserted into the posts.

WORK-BENCH™ ASSEMBLY INSTRUCTIONS

W3636 and WT3636

Available in Grid or Solid Top

COMPONENTS: 2-Panel System





Panels: (2) 3'x3'


Legs: (4) 12"

(4) 24"


Internal Stackers: (4)

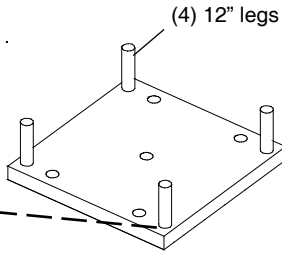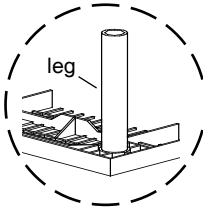


Step 1

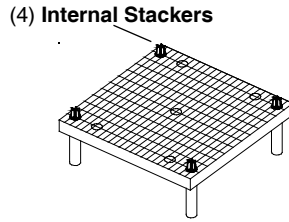

Step 2

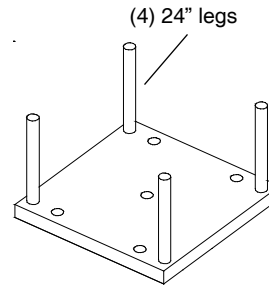


Step 3

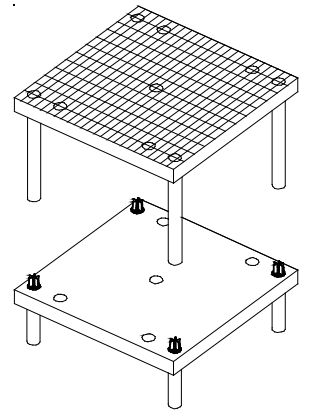

Step 4

W6636 and WT6636

COMPONENTS: 2-Panel System




Panels: (2) 3'x5.5'


Legs: (6) 12"

(6) 24"


Internal Stackers: (6)

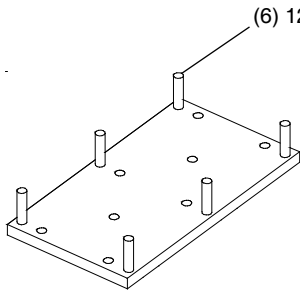


Step 1

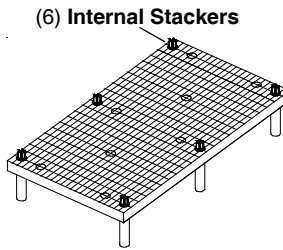

Step 2

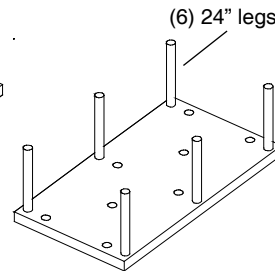


Step 3

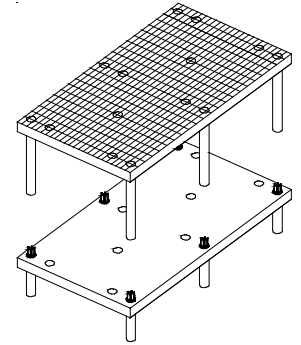

Step 4

W9636 and WT9636

COMPONENTS: 2-Panel System




Panels: (2) 3'x8'


Legs: (8) 12"

(8) 24"


Internal Stackers: (8)

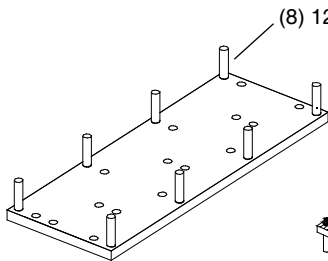


Step 1

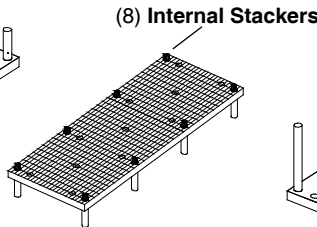

Step 2

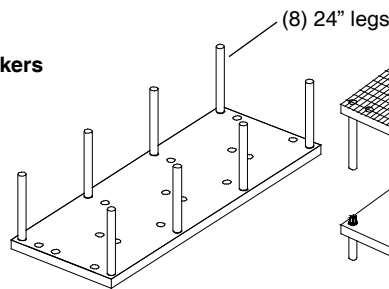

Step 3

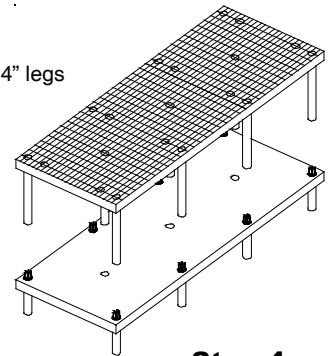

Step 4

Step 1

Lay one of the work-bench panels up-side-down on the floor and insert either 12" or 24" posts into sockets as shown. Return to upright position.

Step 2

Insert **Leg Stackers** over the outside sockets of the previously completed panel as shown.

Step 3

Invert the next level work bench panel and insert the remaining posts into the sockets as shown.

Step 4

Return the second work bench panel to the upright position. Align posts over the leg stackers and push all the way down until the leg stackers are inserted into the posts.