

INSTALLATION GUIDE

STAINLESS STEEL
**COMMERCIAL WORK TABLE WITH
UNDERSHELF AND OVERSHELF,
DRAWER, AND POT RACK** 600WT2436KIT, 600WT2448KIT



03/2022

REGENCYTABLESANDSINKS.COM


INSTALLATION GUIDE

DRAWER ASSEMBLY INSTRUCTIONS

- 1 Set the tabletop upside down on a surface that won't scratch it before assembling the drawer.

2

Attach the Z bracket to the top of the frame with screws. Make sure that the top of the bracket goes outward and the bracket extends a bit further back than the rear of the frame (holes get mounted to the drawer).

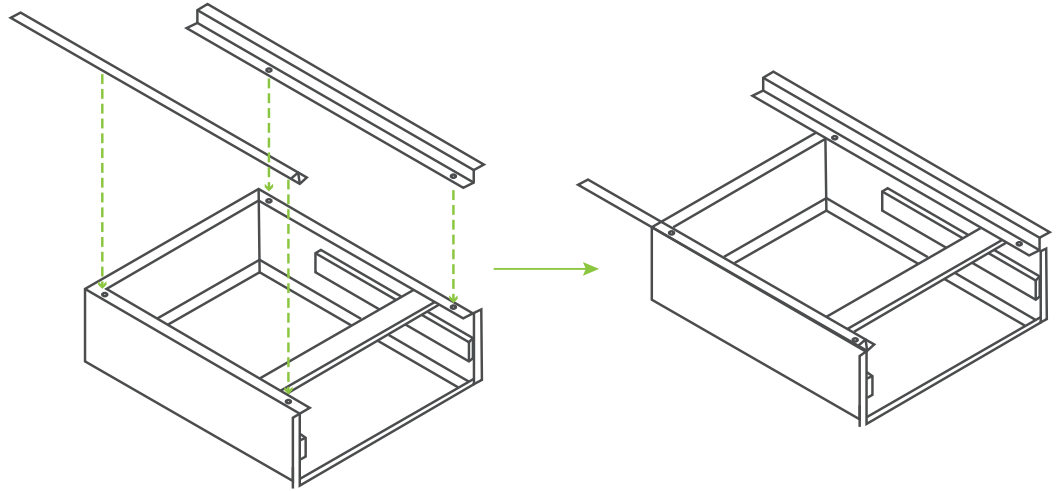


- 3 Flip the drawer over and align it where you want to mount it.

- 4 Try this once with the drawer in the frame to make sure the door will clear the lip of the table. If it doesn't, you'll need to shim with some nuts between the hat channel and the brackets.

5

Drill holes in the hat channels and attach the drawer to the table with self-tapping sheet metal screws.

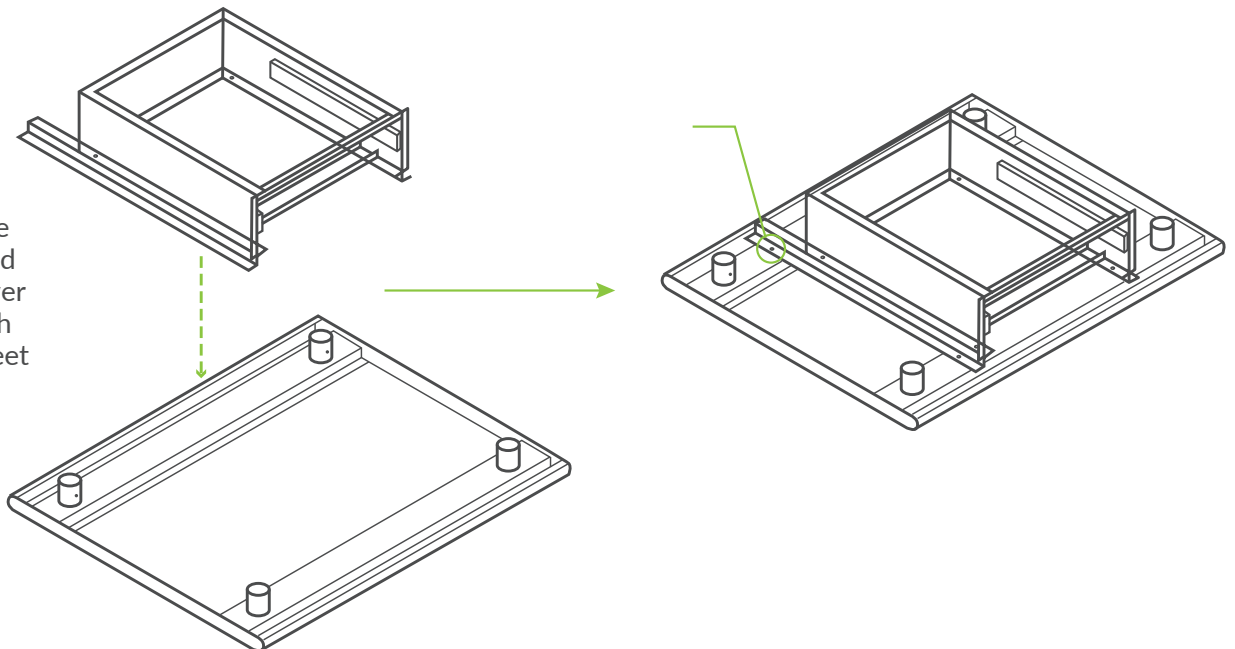


INSTALLATION GUIDE

WORK TABLE ASSEMBLY INSTRUCTIONS


1

Insert the legs into the tabletop gussets. You may need to loosen the set screw if one struggles to go in.

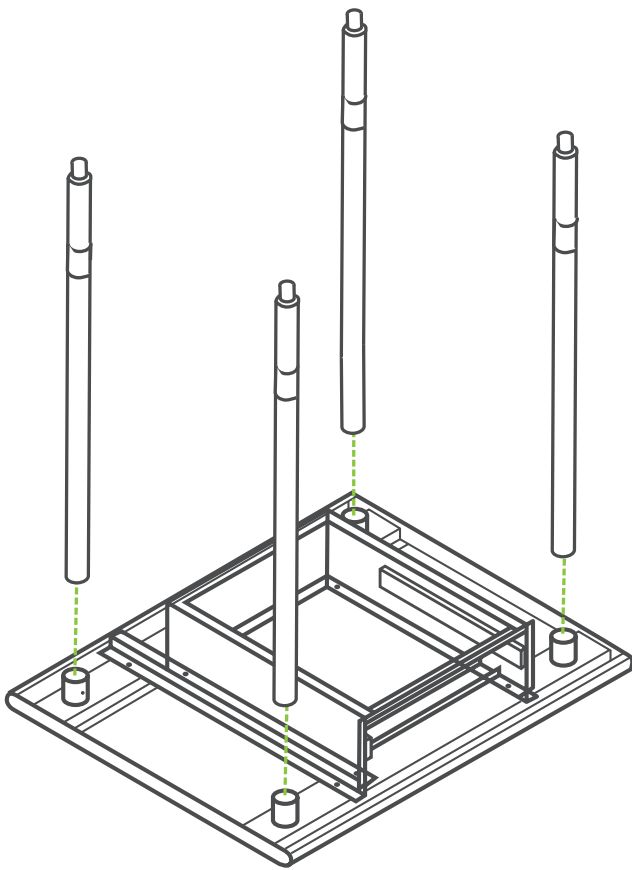

2

Partially tighten the set screws. Full tightening will come later.

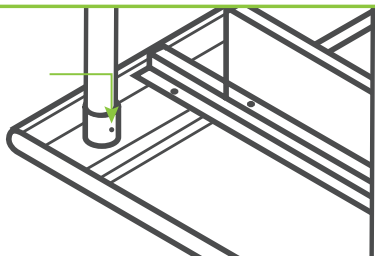


3

On each of the legs, mark the height where you'll be installing your undershelf. It should be at least 6 inches off the ground for food safety.


4

Once marked, slide the shelf onto the legs and fully tighten all of the set screws.

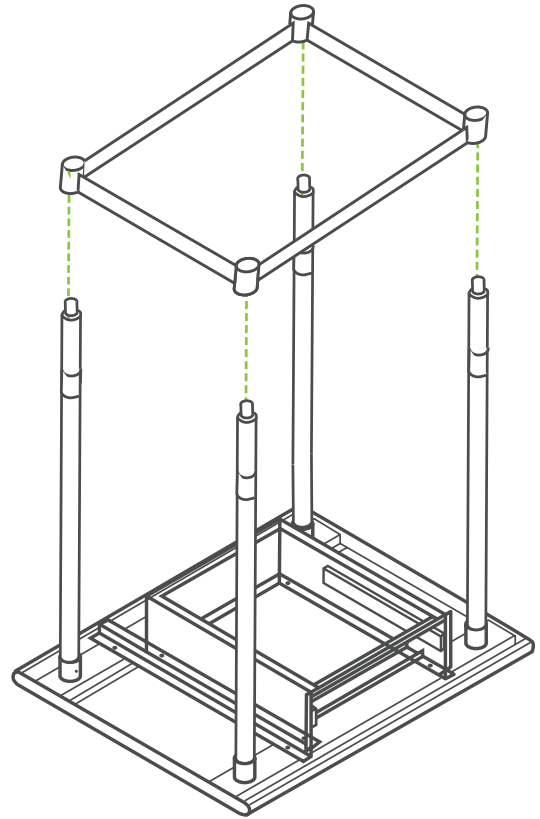

5

Adjust the feet as needed to meet your height requirements or to compensate for uneven flooring.

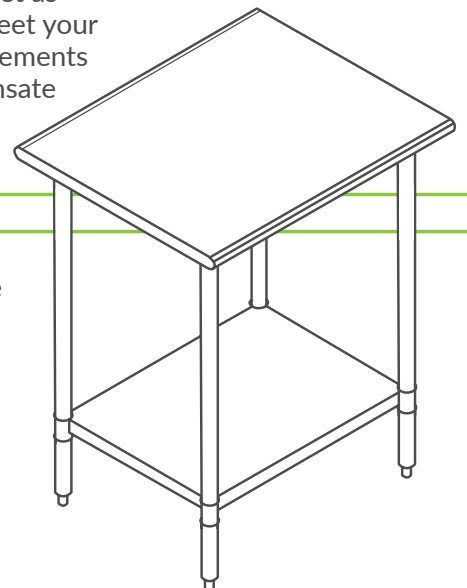

6


Flip the table over and peel off the protective film.

INSTALLATION GUIDE

OVERSHELF ASSEMBLY INSTRUCTIONS


1

Align the two L-brackets (A) with the back of the table and pre-drill holes through the side of the tabletop for screws. Screw L-brackets into the table (screws not included).

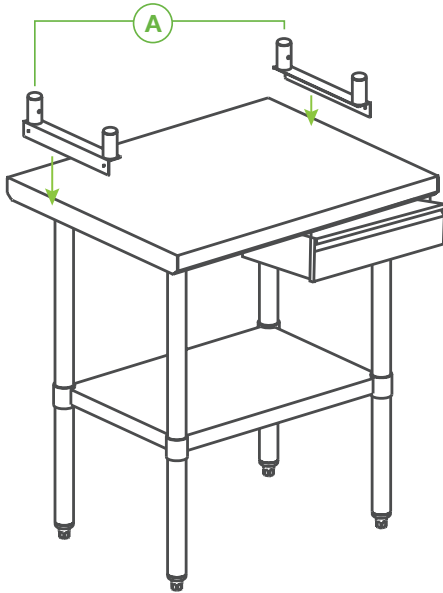


2

Secure the four legs (B) to the L-brackets using the Allen wrench and set screws (C) provided.

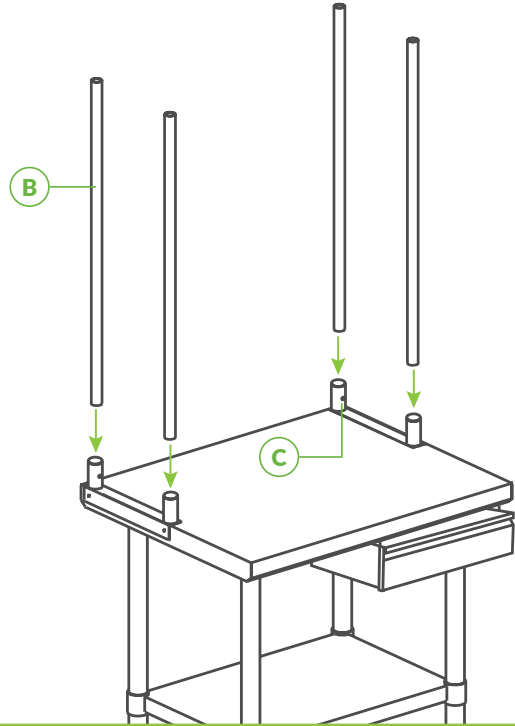

3

Slide the midshelf (D) into place and secure it using the set screws.

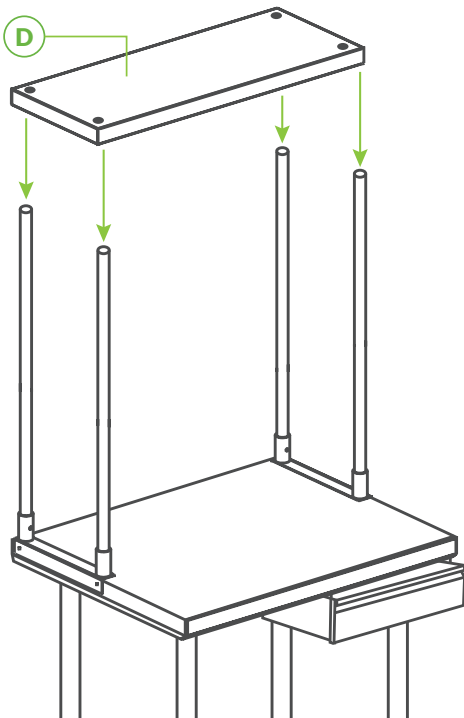

4

Add the overshelf top (E) and secure the legs into the gussets with the set screws. You may need to loosen a set screw if one struggles to go in.

