

Countertop Rotisserie Ovens



351CROE48D, 351CROE415D

REVISED 01/2025

Contents

Safety Precautions.....	2
Parts Diagram: 351CROE48D.....	3
Parts List: 351CROE48D	4
Parts Diagram: 351CROE415D.....	5
Parts List: 351CROE415D	6
Circuit Diagram: 351CROE48D.....	7
Circuit Diagram: 351CROE415D.....	8

Safety Precautions

CAUTION

- Failure to comply with the following operation instructions could lead to potential hazards and/or unsafe practice and could result in injury and damage to product and property.

WARNING

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other equipment.
- Improper installation, adjustment, alteration, service, or maintenance could lead to property damage, injury, or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing CPG equipment. This manual must be retained for future reference.
- A fully licensed installer must handle all maintenance and repair.

NOTICE

- Local codes regarding installation vary greatly from one area to another. The National Fire Protection Association, Inc., states in its NFPA96 latest edition that local codes are “Authority Having Jurisdiction” when it comes to requirement for installation of equipment. Therefore, installation should comply with all local codes.
- This product is intended for commercial use only. Not for residential use.




Conforms to UL STD. 197
Conforms to NSF/ANSI STD. 4

Parts Diagram

351CROE48D

MAIN BODY

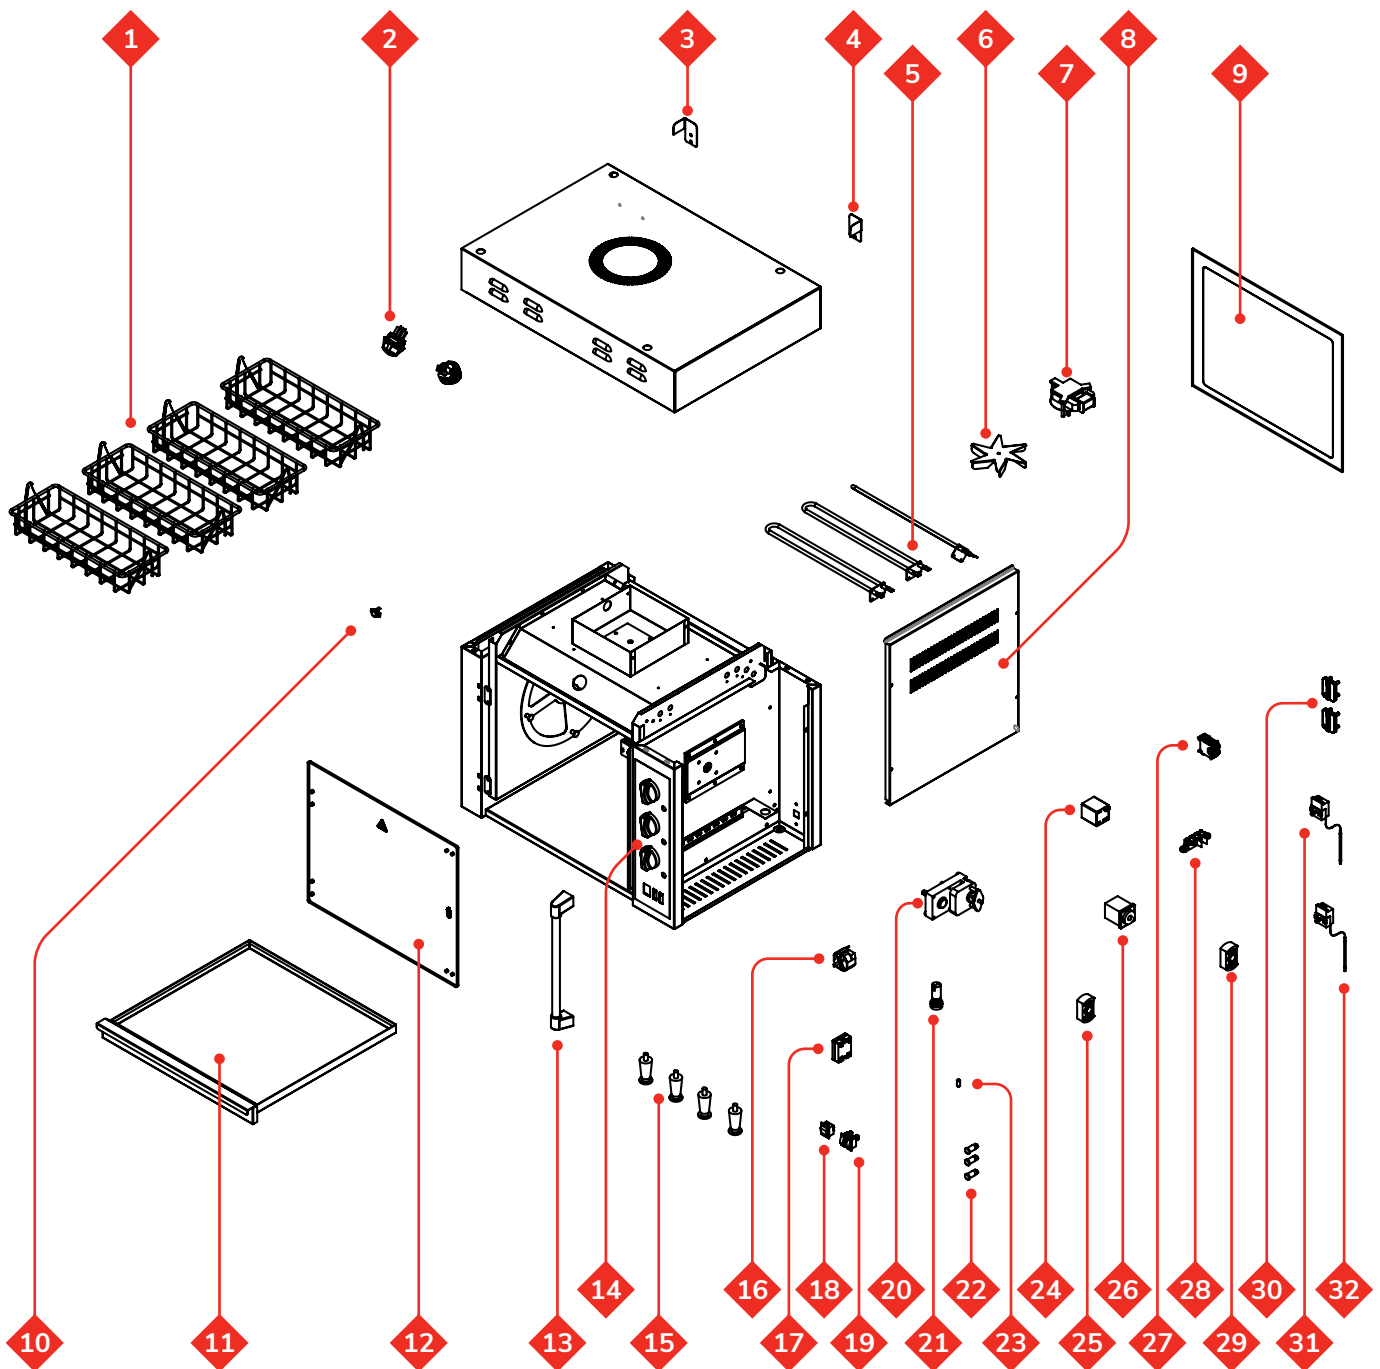

Parts List

351CROE48D


MAIN BODY

#	DESCRIPTION	ITEM #	QTY
1	WIRE BASKET	351CROP121	4
2	HALOGEN CAVITY LAMP	351CROP105	2
3	STACKING BRACKET RHS	—	3
4	STACKING BRACKET LHS	—	1
5	HEATING ELEMENT	351CROP124	3
6	FAN IMPELLER	351CROP103	1
7	FAN MOTOR	351CROP104	1
8	RIGHT SIDE PANEL	—	1
9	DOUBLE GLAZED REAR GLASS	—	1
10	SAFETY THERMOSTAT	351CROP135	1
11	FAT TRAY	351CROP122	1
12	FRONT GLASS DOOR	351CROP125	1
13	DOOR HANDLE BRACKET	351CROP126	2
14	CONTROL/TIMER KNOB	351CROP120	3
15	ADJUSTABLE FOOT	351CROP101	4
16	2-HOUR EXTERNAL TIMER	351CROP109	1
17	SOLID STATE RELAY	351CROP111	1
18	ILLUMINATED ROCKER SWITCH	351CROP110	1
19	ROCKER SWITCH	351CROP137	2
20	MOTOR	351CROP123	1
21	BUZZER	351CROP116	1
22	RED PILOT LIGHT	351CROP107	3
23	DOOR BALL SPRING PLUNGER	351CROP102	1
24	RELAY	351CROP115	1
25	RELAY BASE 11 PIN	351CROP112	1
26	TIMER	351CROP114	1
27	TERMINAL	351CROP113	4
28	CONNECTOR BLOCK	351CROP106	1
29	RELAY BASE 8 PIN	351CROP118	1
30	DOOR HINGE	351CROP117	2
31	COOKING THERMOSTAT, 120-480°F	351CROP108	1
32	HOLDING THERMOSTAT, 90-230°F	351CROP119	1

Parts Diagram

351CROE415D

MAIN BODY

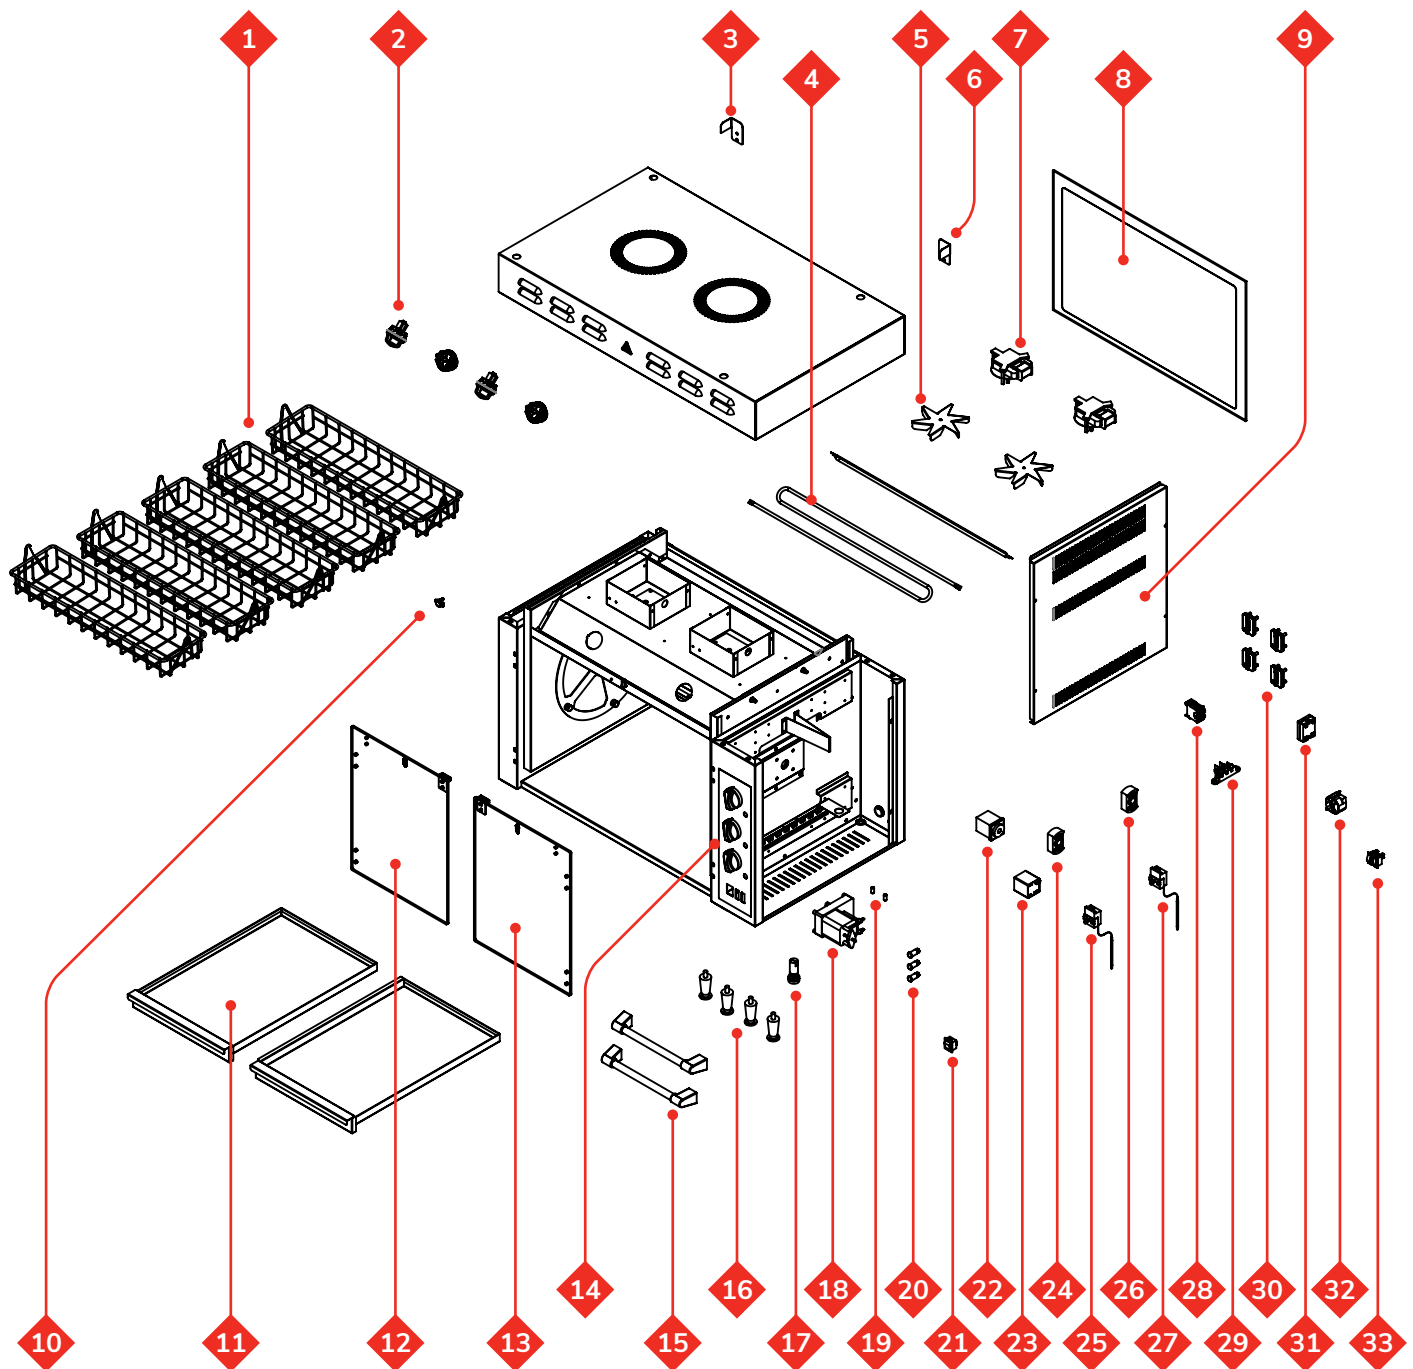

Parts List

351CROE415D


MAIN BODY

#	DESCRIPTION	ITEM #	QTY
1	WIRE BASKET	351CROP128	5
2	HALOGEN CAVITY LAMP	351CROP105	4
3	STACKING BRACKET RHS	—	3
4	HEATING ELEMENT	351CROP132	2
5	FAN IMPELLER	351CROP103	2
6	STACKING BRACKET LHS	—	1
7	FAN MOTOR	351CROP104	2
8	DOUBLE GLAZED REAR GLASS	—	1
9	RIGHT SIDE PANEL	—	1
10	SAFETY THERMOSTAT	351CROP135	1
11A	LEFT FAT TRAY	351CROP129	1
11B	RIGHT FAT TRAY	351CROP136	1
12	FRONT GLASS LEFT DOOR	351CROP130	1
13	FRONT GLASS RIGHT DOOR	351CROP133	1
14	CONTROL/TIMER KNOB	351CROP120	3
15	DOOR HANDLE BRACKET	351CROP126	4
16	ADJUSTABLE FOOT	351CROP101	4
17	BUZZER	351CROP116	1
18	GEAR MOTOR	351CROP131	1
19	DOOR BALL SPRING PLUNGER	351CROP102	2
20	RED PILOT LIGHT	351CROP107	4
21	ILLUMINATED ROCKER SWITCH	351CROP110	1
22	TIMER BUZZER	351CROP114	1
23	RELAY	351CROP115	1
24	RELAY BASE 11 PIN	351CROP112	2
25	COOKING THERMOSTAT, 120-480°F	351CROP108	1
26	RELAY BASE 8 PIN	351CROP118	1
27	HOLDING THERMOSTAT, 90-230°F	351CROP119	1
28	TERMINAL	351CROP113	4
29	CONNECTOR BLOCK	351CROP106	1
30	DOOR HINGE	351CROP117	4
31	SOLID STATE RELAY	351CROP111	1
32	2-HOUR EXTERNAL TIMER	351CROP109	1
33	ROCKER SWITCH	351CROP137	2

Circuit Diagram

351CROE48D

#	DESCRIPTION
B1	GRILL THERMOSTAT
E1/E2/E3	ELEMENT - 900W/240V
H1	PILOT LIGHT FOR TIMER
H2	PILOT LIGHT FOR THERMOSTAT
L1/L2	INTERIOR LIGHT
S1	MAIN SWITCH
S2	ROTISSERIE SWITCH
T	2HR TIMER
M1	ROTISSERIE MOTOR
M2/M3	FAN MOTOR
C1	CONTACTOR 32A

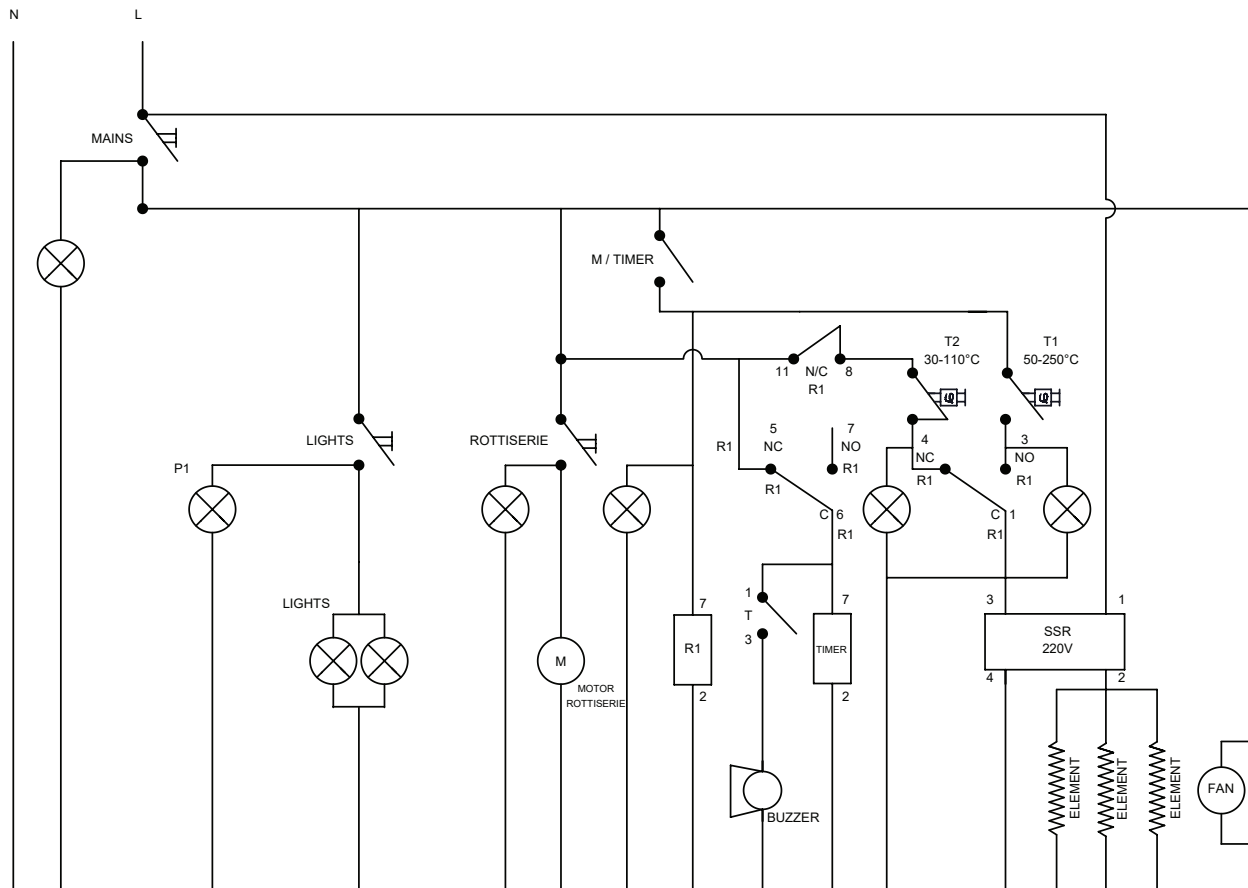

Circuit Diagram

351CROE415D

#	DESCRIPTION
B1	GRILL THERMOSTAT
E1/E2	ELEMENT - 2500W/240V
H1	PILOT LIGHT FOR TIMER
H2	PILOT LIGHT FOR THERMOSTAT
L1/L2	INTERIOR LIGHT
S1	MAIN SWITCH
S2	ROTISSERIE SWITCH
T	2HR TIMER
M1	ROTISSERIE MOTOR
M2/M3	FAN MOTOR
C1	CONTACTOR 32A

