

# Hoshizaki Top Kit

## HS-2129, HS-2130, HS-2131, HS-2132, HS-2153

### Installation Instructions

Check to ensure that all parts are included in your HS-Kit:

Index No.	Description	Part Number	Qty.	HS-Kit No.
1	Extension Bracket (22" Wide Bin)	3A5783G01	1	HS-2153
	Extension Bracket (30" Wide Bin)	3A4929G01	1	HS-2129
	Extension Bracket (44" Wide Bin)	3A4931G01	1	HS-2130
	Extension Bracket (48" Wide Bin)	3A4930G01	1	HS-2131
	Extension Bracket (52" Wide Bin)	3A4932G01	1	HS-2132
1a	Self-Tapping Hex Head Screw (#12, 3/4)	7P1111234	5	All
2	Foam Tape (L=559)	4A0808L01	2	HS-2153
	Foam Tape (L=762)			HS-2129
	Foam Tape (L=1118)			HS-2130
	Foam Tape (L=1220)			HS-2131
	Foam Tape (L=1321)			HS-2132
3	Mounting Bracket	4A4546-01	2	All
3a	Hex Head Bolt (5x12, SS)	7B02-0512	2	All

### Installation

- Unpack the storage bin, and attach the 4 adjustable legs provided (bin accessory) to the bottom of the storage bin.
- Place the rear channel of the extension bracket over the back of the bin. See Fig. 1.
- Make sure the rectangular holes in the back of the extension bracket are aligned to allow free access to the slots in the bin. Secure the extension bracket to the bin using the 5 self-tapping hex head screws provided.
- Cut a piece of foam tape to the length of the extension bracket, then peel off the backing and adhere the foam tape to the top of the extension bracket towards the front.
- Remove the foam tape at the front of the bin. Cut a piece of foam tape to match the length of the foam tape at the front of the bin. Trim the side pieces of foam tape to accommodate the new piece. See the table below and Fig. 2. Peel off the backing and adhere the foam tape to the top of the bin where the front of the icemaker will sit.

Model	Depth Including Front Panel	Depth of Base Contacting the Bin	Measurement from Rear of Foam Tape on Extension Bracket to End of Side Piece of Foam Tape ("D" on illustration)
KMD	24 $\frac{1}{4}$ " (617 mm)	22 $\frac{3}{4}$ " (577 mm)	21 $\frac{1}{2}$ " (547 mm)
KMD	24 $\frac{5}{8}$ " (625 mm)	23 $\frac{1}{2}$ " (597 mm)	22 $\frac{1}{4}$ " (567 mm)
KMS	24" (614 mm)	23" (585 mm)	21 $\frac{3}{4}$ " (555 mm)

- Position the storage bin in the selected permanent location.
- To prevent damage to the icemaker's panels, remove them before installation. See the icemaker's instruction manual for details.
- Place the icemaker on top of the storage bin.
- Secure the icemaker to the storage bin using the 2 mounting brackets and the hex head bolts provided with this kit. See Fig. 3.
- Level the icemaker and storage bin in both the left-to-right and front-to-rear directions. Adjust the storage bin legs to make the icemaker level.
- See the icemaker's instruction manual for further icemaker and bin installation/connection instructions.

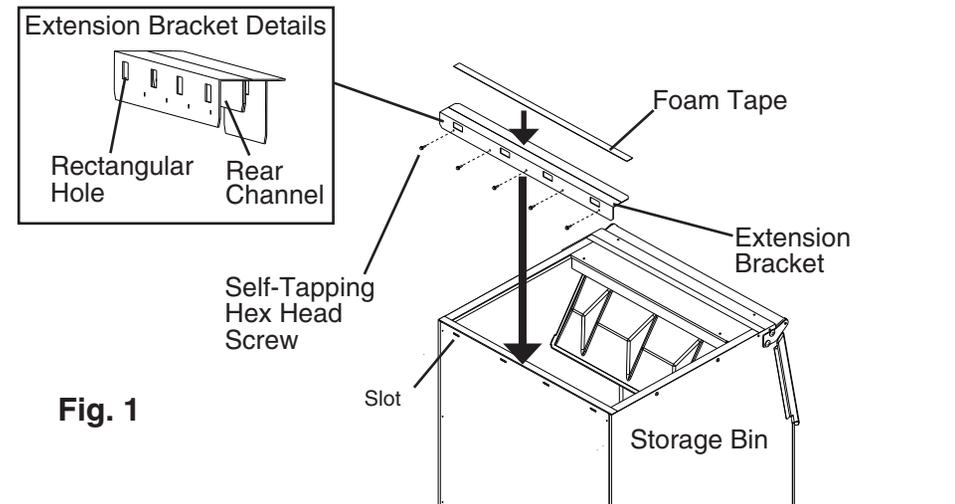


Fig. 1

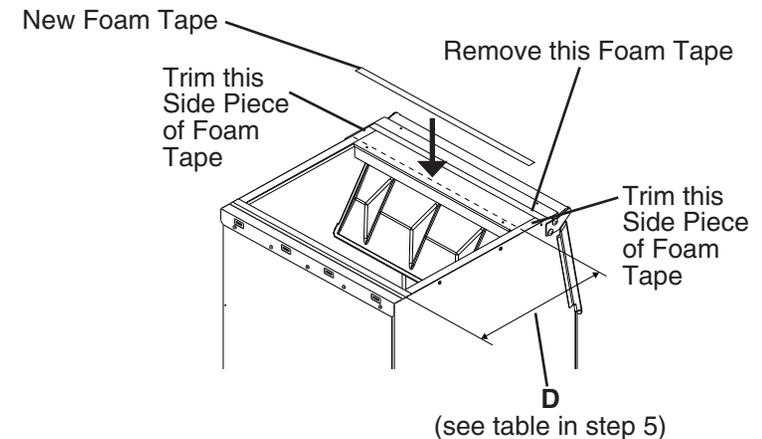


Fig. 2

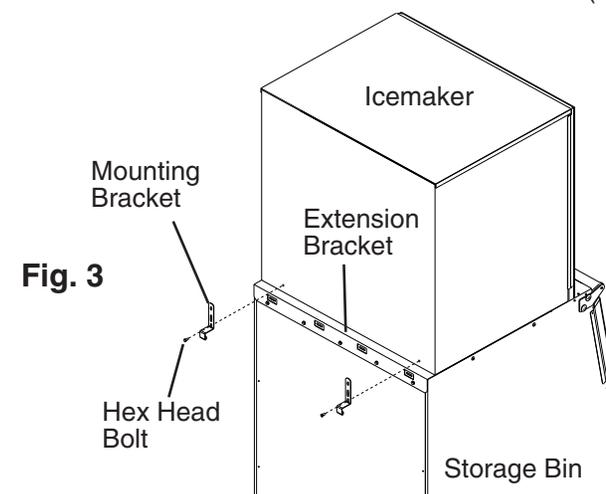


Fig. 3