

VITO FT CONNECT

Quick guide

Your starting value:

_____ %TPM

Measure in fresh oil during initial setup and note the TPM reference value ($\pm 2.0\%$ TPM). This value serves as a benchmark for future tests.




Preparation

Important! To ensure accurate measurements, allow the oil to rest for about 20 minutes after frying. Do not fry any food during the measurement process.




Turning on

Press ON/OFF and use the arrow buttons to select the fryer which you want to measure. Confirm by pressing ON/OFF briefly.

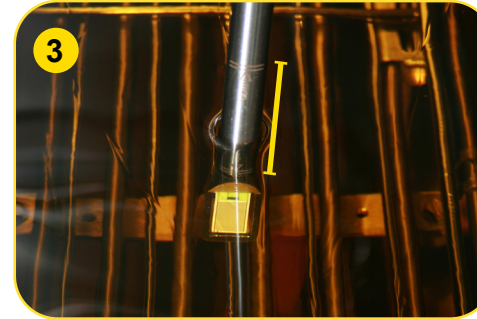

Start measurement

Dip the sensor into the oil, ensuring it is between the MIN/MAX markings. The NextStep indicator recommends starting to stir.

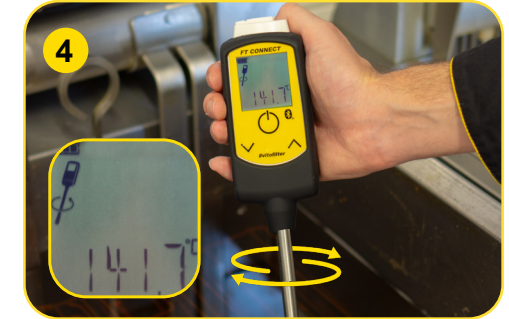

Stirring

Stir gently until the displayed temperature matches that of the oil. This takes about 20 seconds.



End measurement

The measurement is complete when the TPM value on the display stops blinking and the NextStep indicator recommends stopping the stirring. Save the measurement by briefly pressing the down arrow button.



Evaluation

Green (flashing): Good oil quality
Yellow (flashing): Medium oil quality
Red (flashing): Poor oil quality → Change needed



Cleaning

Remove the sensor from the oil and wipe it with a soft cloth. For heavy contamination, you can also apply high-proof alcohol or spirits to the cloth.



Next fryer / end

The tester is ready for a new measurement immediately after saving. Simply repeat steps 3-8 or store the tester in the case until the next measurement.

3 - 8



Learn more:
handling.vito.ag

VITO AG
+49 7461 96289-0
info@vito.ag
www.VITO.ag

VITO FTCONNECT

Before the first use


VITO[®]
oil filter system

MADE IN GERMANY




VITOconnect Bridge

Connect the bridge to your router or a free LAN port using a LAN cable, and plug it into a power source. Turn on the FT CONNECT – the bridge will automatically connect and transmit measurements as long as both devices are within range.

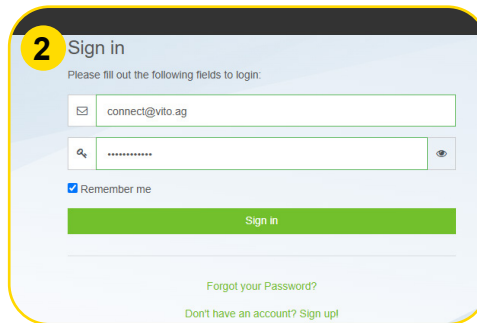


Login to CONNECT.VITO.AG

If you already have a registered account, log in to the platform. If not, create a new account by clicking “Sign in”.

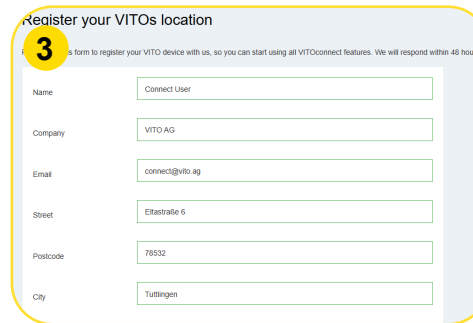


Register your FT CONNECT

Go to the “Register Device” section in the dashboard and enter all required device information.

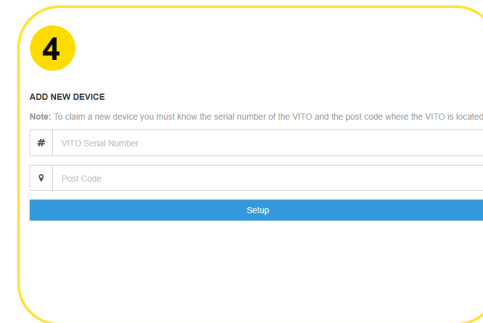


Link device to your account

In the dashboard, go to “Manage Devices” and click on “Add New Device” to link your FT CONNECT to your user account.

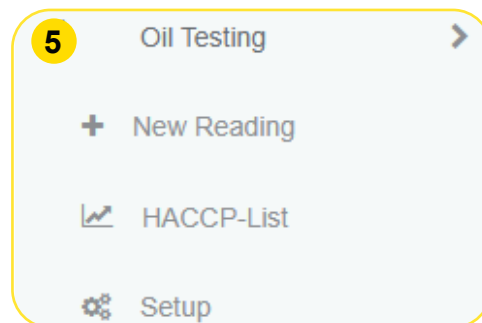


Configure report function

Open the setup section under the “Oil Testing” tab to configure the reporting functionality.

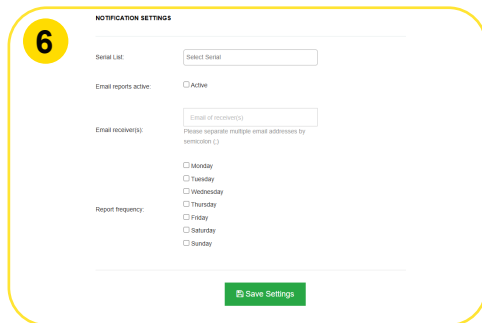


Set up notifications

Select the serial number of your tester under “Notification Settings” and complete the form to configure email notifications for automatic reports.

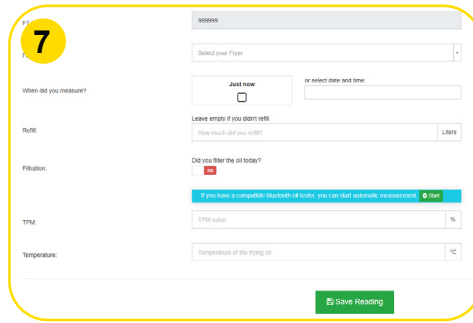

Capture measurements

In addition to Bluetooth functionality, you can also manually enter the measured values. To do this, go to the “New Measurement” section under the “Oil Testing” menu and enter the required data.

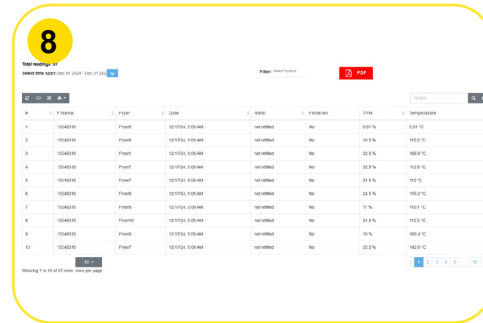

View HACCP Reports

To view your HACCP list, go to the “HACCP List” section under the “Oil Testing” tab. There, you can filter the data by fryer or date and export the measurements as a PDF.



Learn more:
handling.vito.ag

VITO AG
+49 7461 96289-0
info@vito.ag
www.vito.ag