

USER MANUAL





Compact Digital Portion Control Scale

334PC32

2 lb.

334PC10

10 lb.

334PC20


20 lb.



SPECIFICATIONS

	334PC32	334PC10	334PC20
MAX CAPACITY	LB unit: 2lb x 0.001lb OZ unit: 32oz x 0.001oz LB:OZ unit: 2lb x 0.1oz KG unit: 1kg x 0.001kg G unit: 1000g x 0.5g	LB unit: 11lb x 0.001lb OZ unit: 176oz x 0.001oz LB:OZ unit: 11lb x 0.1oz KG unit: 5kg x 0.001kg G unit: 5000g x 0.5g	LB unit: 22lb x 0.001lb OZ unit: 352oz x 0.01oz LB:OZ unit: 22lb x 0.1oz KG unit: 10kg x 0.001kg G unit: 10000g x 0.5g
WEIGHING MODES	lb:oz, lb, oz, kg, g		
DISPLAY	60 x 23mm LCD display with white backlight		
OPERATING TEMP.	41 - 104°F (5 - 40°C)		
POWER	Alkaline Batteries: (2) "AAA" (not included) Adapter: 6V adapter (included)		
FUNCTIONS	Weighing, Tare, Unit Switching, Low Battery & Overload Indication, Auto-Off Function		
AUTO-OFF TIME	5 minutes with battery, none with adapter		
TARE RANGE	Up to full capacity		
PLATFORM SIZE	152 x 152mm / 6" x 6" (L x W)		
BASE DIMENSIONS	222 x 155 x 28mm / 8.75" x 6.1" x 1.1" (L x W x H)		

CONTROL PANEL

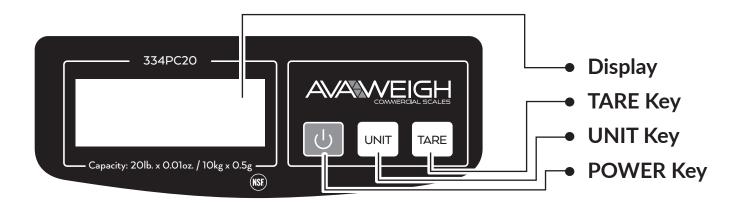

SETUP & USAGE

BATTERY INSTALLATION & POWER SUPPLY

• The scale can be powered with (2) "AAA" batteries or an external power supply.

Note: Batteries and power supply can be used at the same time. If used simultaneously, the external power supply will be prioritized. The power supply will not charge the batteries.

POWER ON

- Place the scale on a hard, flat, and level surface.
- Press the **POWER** key to power it on. It will display "-188888", then "0.000lb."

NORMAL WEIGHING

- Place the object on the center of the platform.
 The scale will display the weight of the object when reading is stable.
- Press the **UNIT** key to switch between metric and imperial units.

TARE FUNCTION

- Place an item on the scale and wait for a stable weight.
- Press the **TARE** key to zero out the weight of the item.

POWER OFF

- When the scale is powered by batteries, it turns off automatically after (5) minutes of inactivity.
- When the scale is powered by an adapter, press the POWER key to power it off.

CLEANING & STORAGE

- Dampen a cloth with a mild soap solution to clean the scale
- Do not use any harsh chemical cleaners.
- Do not wash down or immerse the scale. Any liquid inside the scale can cause permanent damage.
- Remove batteries from the scale when it will not be used for an extended period of time.

NOTE: Save these instructions for future reference.



AVAWEIGH LIMITED WARRANTY

AvaWeigh warrants its equipment to be free from defects in material and workmanship for a period of 1 year. This is the sole and exclusive warranty made by AvaWeigh covering your AvaWeigh brand equipment. A claim under this warranty must be made within 1 year from the date of purchase of the equipment. Only the equipment's original purchaser may make a claim under this warranty. AvaWeigh reserves the right to approve or deny the repair or replacement of any part or repair request. The warranty is not transferable. AvaWeigh Equipment installed in/on a food truck or trailer will be limited to a period of 30 days from the original date of purchase.

For Warranty Inquiries:

To obtain warranty information or make a claim against this warranty, please contact the location where you purchased the product.

- www.WebstaurantStore.com
 Call 717-392-7472. You must have your order number ready when contacting.
- The Restaurant Store
 Please contact your local store directly.
- www.TheRestaurantStore.com
 Call 717-392-7261. You must have your order number ready when contacting.
- Clark Food Service Equipment, PRO Marketplace, Hometown Provisions

Please contact your account manager directly. If you do not know your account manager, please call 717-392-7363 for CFSE and Pro Marketplace or 717-464-4165 for Hometown Provisions

Failure to contact the designated location prior to obtaining equipment service may void your warranty.

AvaWeigh makes no other warranties, express or implied, statutory or otherwise, and **HEREBY DISCLAIMS ALL**

IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

This Limited Warranty Does Not Cover:

- Equipment sold or used outside the Continental United States.
- AvaWeigh has the sole discretion on wearable parts not covered under warranty.
- Equipment not purchased directly from an authorized dealer.
- Equipment used for residential or other noncommercial purposes.
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency.
- Equipment for which a valid purchase cannot be verified. Please have your order number or receipt, and serial number (if available) when making a claim.
- Damage or failure due to improper installation, improper utility connection or supply, and issues resulting from improper ventilation or airflow.
- Defects and damage due to improper maintenance, wear and tear, misuse, abuse, vandalism, or Act of God.

Any action for breach of this warranty must be commenced within 1 year of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. AvaWeigh shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.

