

5999ELT-INSTRUCTION





Table of Contents (select step to go to page)	Page	
General Notes and Tools Required	3	
STEP 1: Establish Floor Bracket Locations	4	
STEP 2: Fasten Floor Brackets	4 & 5	
STEP 3: Erect Panels	6	
STEP 4: Erect Wall Pilaster	7 & 8	
STEP 5: Prepare Pilaster for Door	8 & 9	
STEP 6: Fasten "U" Channels to Pilaster	10	
STEP 7: Erect Pilaster	10 & 11	
STEP 8: Prepare Door for Hanging	11 & 12	
STEP 9: Hang Door	12 & 13	
STEP 10: Erect Remaining Compartments	13	
STEP 11: Secure Headrail Brackets	14	
STEP 12: Place Headrail	14 & 15	
Appendix A: Alcove Units	16	
Appendix B: Stirrup Brackets	17 & 18	
Appendix C: Indicator Latch	19	
Appendix D: Continuous Hinge	20	
Appendix E: Concealed Hinge	21	
Appendix F: Ceiling Hung Mounted Partitions	22	
Appendix G: Floor Mounted Partitions	23	
Appendix H: Floor to Ceiling Mounted Partitions	24	
Appendix I: Panel Support Pedestal	25	
Appendix J: Post Mount Headrail Braced	26	
Appendix K: Post Mount Floor Mounted	27	
Appendix L: Post Mount Ceiling Hung	28	
Appendix M: Post Mount Floor to Ceiling	29	
Appendix N: Transom Paneis	30	

www.hadrian-inc.com



General Notes

The following installation instructions are based on headrail braced compartments in the most common unit arrangement. Other arrangements will be encountered, i.e. units contained between two walls or between two free-standing panels. For details on ceiling hung and floor to ceiling connections, refer to the appendix. Always adhere to applicable building codes.

Ceiling hung and floor to ceiling toilet partitions require an overhead structural member (normally a channel). This member is supplied, installed and drilled by others. Stud assemblies are available from Hadrian, but Hadrian does not install them. Stud assemblies should be in place prior to application of finished ceiling.

FINAL LAYOUT DRAWINGS. For dimensional information, refer to your plan layout and dimensional details. Note in particular the relationship of the panels to the pilasters (panels do not necessarily fall on the center line of the pilaster).

Recommended Safety Equipment

Safety Glasses

Safety Gloves

Safety Shoes

Hard Hat









Tools Required

4 ft. level

Chalk line

Tape Measure

Hammer

Hammer drill

5/16" (8mm) masonry bit

Miscellaneous drill bits, including 4mm (5/32" & 8mm (5/16")

6mm (1/4") masonry bit

11mm (7/16") & 13mm (1/2") wrench

Miscellaneous screw driver bits

Adjustable wrench

Hacksaw

318mm (12") shim block to rest panels on for easier installation

6-lobe security driver bits

"C" Clamp




STEP 1: Establish Floor Bracket Locations

Establish the front centerline by taking the overall compartment dimension and deducting 16mm (5/8").

Use final layout drawings to determine locations.


See page 16 for Alcove Partitions instructions.

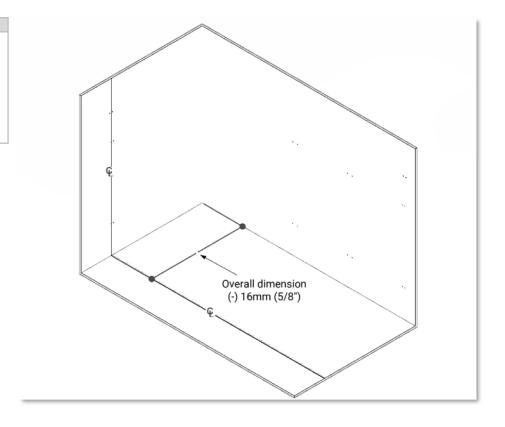

STEP 2: Fasten Floor Brackets

Drill holes for the floor brackets 22mm (7/8") in from edge of pilaster locations as indicated on the layout drawing.


See page 21 for ceiling hung mounted partition instructions.
See page 22 for floor mounted partition instructions.
See page 23 for floor to ceiling mounted partition instructions.
See page 24 for panel support pedestals instructions.

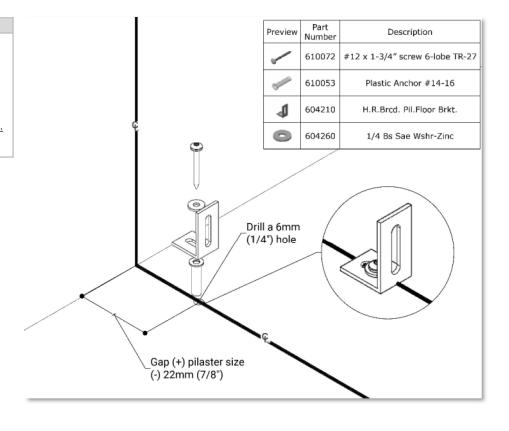




STEP 2.1: Fasten Floor Brackets

Follow the layout drawings for pilaster locations.

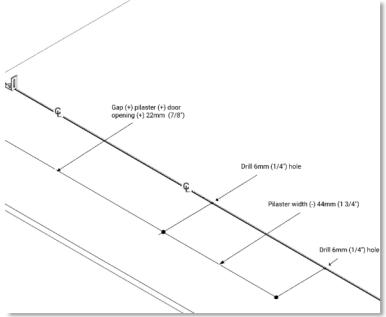


STEP 2.2: Fasten Floor Brackets

Fasten floor brackets to the floor.

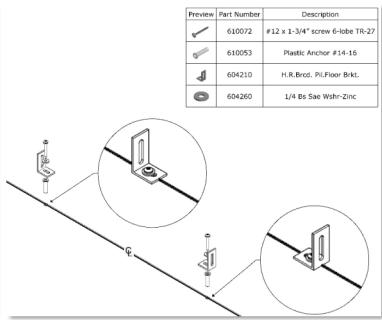


STEP 2.3: Fasten Floor Brackets

Follow the layout drawings for pilaster locations.

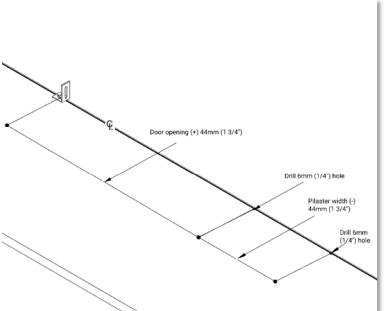

STEP 2.4: Fasten Floor Brackets

Fasten floor brackets to the floor. Repeat steps $2.3\ \&\ 2.4$ if needed.

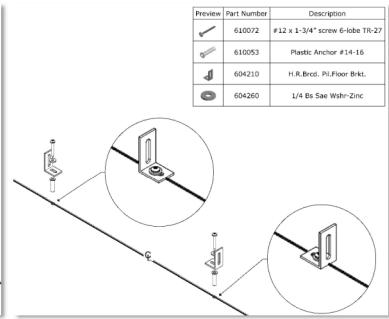



STEP 3: Erect Panel

Using your centerline locations, fasten continuous panel channels to wall.


For a 102mm (4") above finish floor elevation, the bottom of the channel is to be mounted 111mm (4 3/8") from the finished floor*.

For a 152mm (6") above finish floor elevation, the bottom of the channel is to be mounted 162mm (6 3/8") from the finished floor*.

For a 229mm (9") above finish floor elevation, the bottom of the channel is to be mounted 238mm (9 3/8") from the finished floor*.

*Adjust based on masonry lines as necessary

See page 17 & 18 for stirrup bracket mounting instructions.

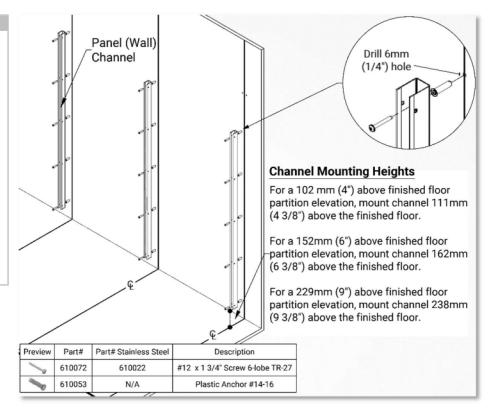

STEP 3.1: Erect Panel

For a 102mm 4" above finished floor elevation, rest panel on 102mm (4") block and position the panel in the continuous channels.


For a 152mm 6" above finished floor elevation, rest panel on 152mm (6") block and position the panel in the continuous channels.

For a 229mm 9" above finished floor elevation, rest panel on 229mm (9") block and position the panel in the continuous channels.

Drill two holes through top channel and fasten. Keep panel on stabilizer block until pilaster has been installed.

See page 24 for panel support pedestals instructions.

See page 30 for transom panel instructions.

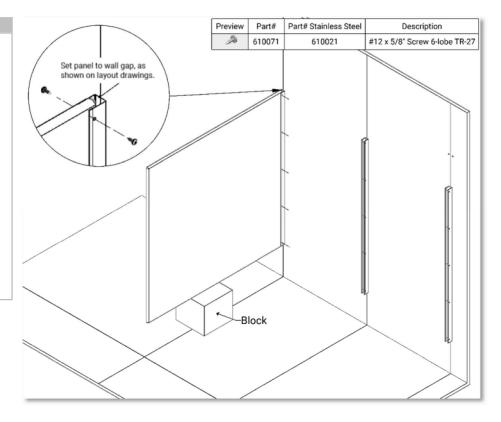



STEP 4: Erect Wall Pilaster

Using your centerline locations, fasten continuous pilaster channels to wall.


For a 102mm (4") above finished floor elevation, mount the channel 111mm (4 3/8") above the finished floor*.

For a 152mm (6") above finished floor elevation, mount the channel 162mm (6 3/8") above the finished floor*.

For a 229mm (9") above finished floor elevation, mount the channel 238mm (9 3/8") above the finished floor*.

*Adjust based on masonry lines as necessary


See page 17 & 18 for stirrup bracket mounting instructions.

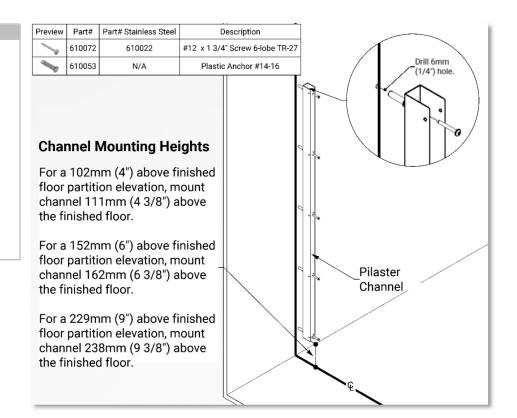

STEP 4.1: Erect Wall Pilaster

Slide shoe onto the pilaster. Position the pilaster in wall brackets and over floor brackets. Install levelling device.


Note: For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel.

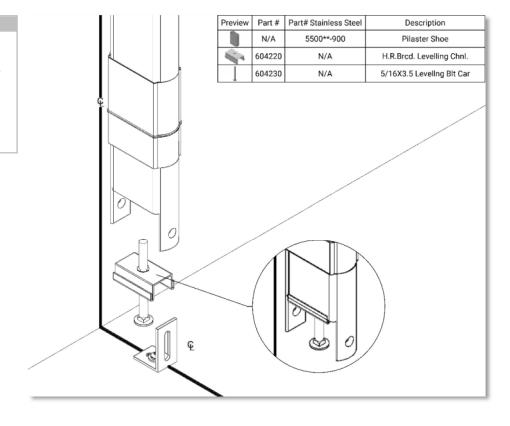




STEP 4.2: Erect Wall Pilaster

Install the floor bracket hardware and tighten.

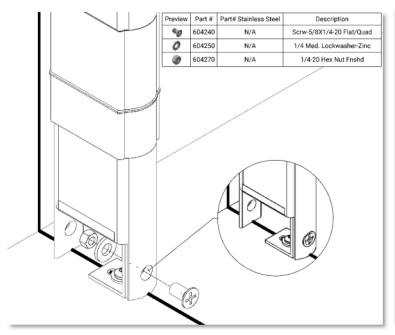

STEP 4.3: Erect Wall Pilaster

Plumb pilaster and fasten to the pilaster channel.

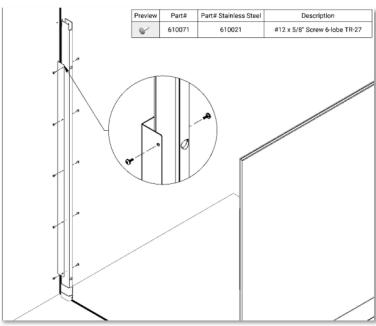


STEP 5: Prepare Pilaster For Door

Install lower hinge by lining up the guide pins with the predrilled hinge hole on the pilaster and fasten.

Note:

Stainless Steel pilaster will have two small guide holes vs powder coated, which has a 7/8" hinge hole.


See page 19 for Continuous Hinge instructions. See page 20 for Concealed Hinge instructions.

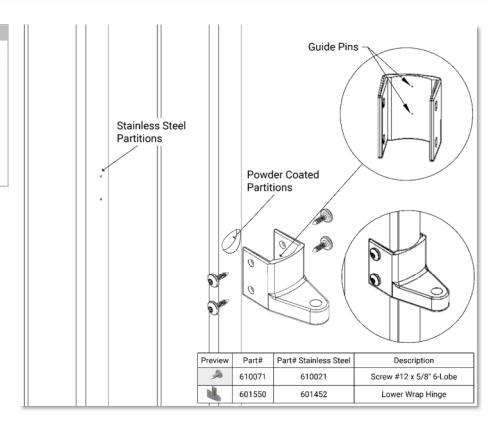




STEP 5.1: Prepare Pilaster For Door

Install and fasten the male cam to lower hinge.

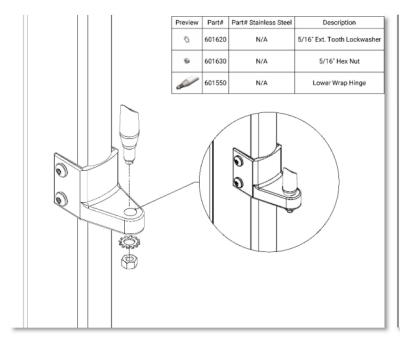


STEP 5.2: Prepare Pilaster For Door

Fasten the upper hinge to pilaster.

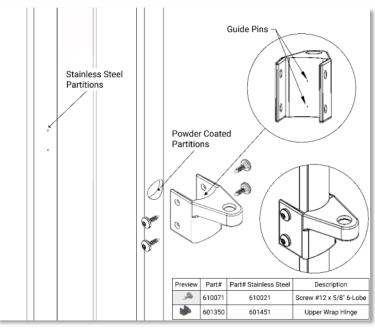

STEP 5.3: Fasten Hinge Side Filler To Pilaster

Place hinge side filler between hinges, pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

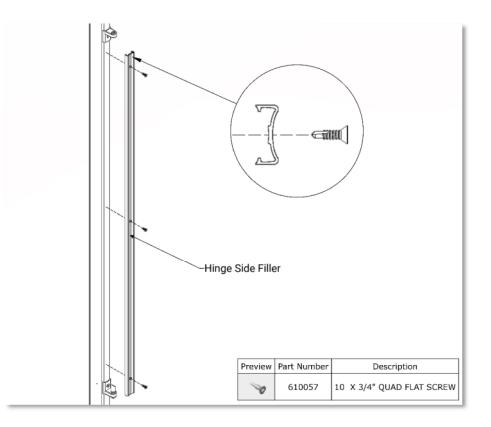



STEP 6: Fasten Channel To Pilaster

Place next pilaster on floor brackets and mark centerline of panel on the back of the pilaster.


Using your centerline location, fasten continuous panel channel to the pilaster.

For a 102mm (4") above finished floor elevation, mount the channel 111mm (4 3/8") above the finished floor.

For a 152mm (6") above finished floor elevation, mount the channel 162mm (6 3/8") above the finished floor.

For a 229mm (9") above finished floor elevation, mount the channel 238mm (9 3/8") above the finished floor.


See page 17 & 18 for stirrup bracket mounting instructions.

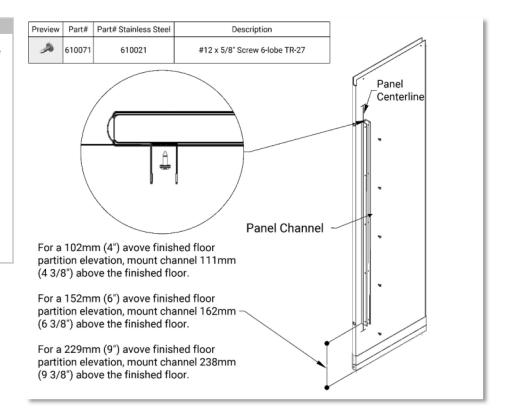

STEP 7: Erect Pilaster

Slide shoe onto the pilaster. Position pilaster over the floor brackets. Adjust pilaster location so the alcove channel grasps panel. Install floor bracket hardware, levelling device and tighten.


Note: For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel.

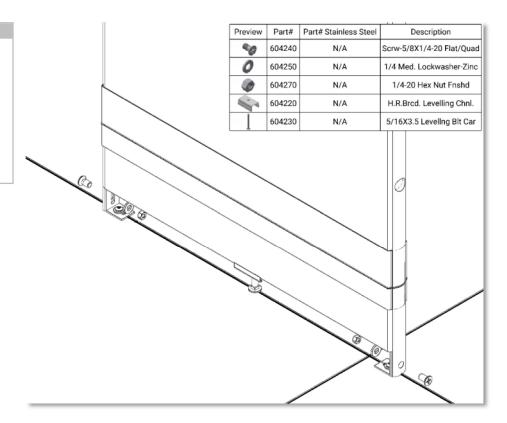




STEP 7.1: Erect Pilaster

Plumb panel and pilaster. Secure panel to the pilaster channel.

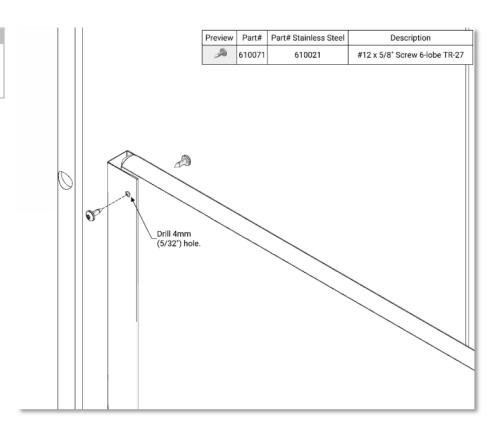

STEP 8: Prepare Door For Hanging


Insert female cam into the bottom-door hinge casting.

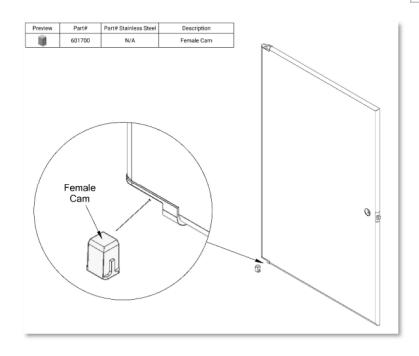

STEP 8.1: Prepare Door For Hanging

Install inner and outer knobs on the door. See page 19 for Indicator Latch instructions

NEW Threaded Inner / Outer Knob

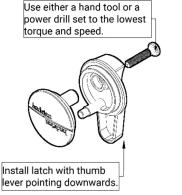


Pr	eview	Part#	Part# Stainless Steel	Description
		601150	901150	Kit Inner / Outer Knob
	9	601150	901150	Kit Inner / Outer Knob




STEP 8.2: Prepare Door For Hanging

Install the door pulls. For outswing & accessible doors only.

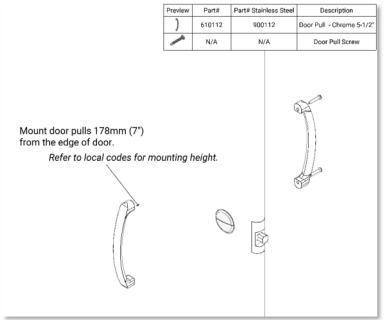


STEP 8.3: Prepare Door For Hanging

Fasten coat hook and bumper to door.

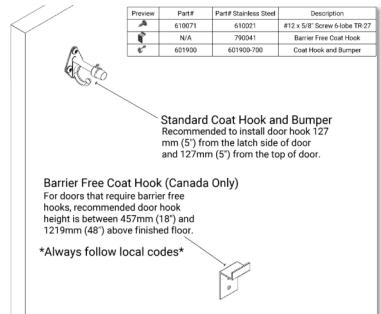

STEP 9: Hang Door

Lower door onto the male cam of the lower hinge. Install threaded upper hinge pin. To set door at required angle, loosen the nut of the male cam assembly, set door at required angle and tighten nut.

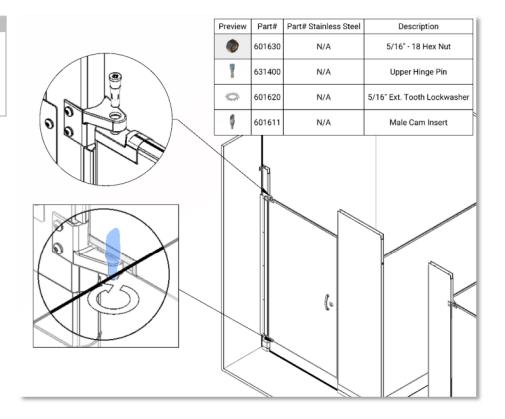




STEP 9.1: Hang Door

Place continuous stop on pilaster, ensuring the top lines up with the locking bar (trim) seam on the top of the door.

Pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

Note: The arrow on the Stop Keeper **must** point upwards for the latch to line up with the keeper.


See page 19 for Indicator Latch instructions

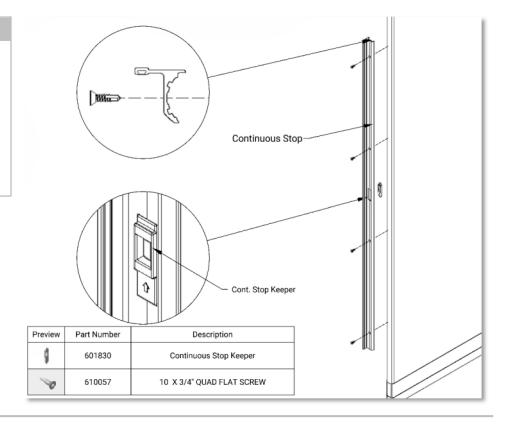


STEP 10: Erect Remaining Compartments

Ensure all pilasters are fastened to floor brackets, add all remaining fasteners and repeat steps 3-10 (as necessary) for all remaining compartments.

Note: Hadrian recommends installing one compartment (including door) at a time.

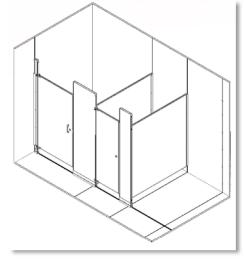

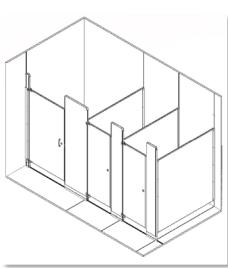




STEP 11: Secure Headrail Brackets

Fasten Headrail brackets to the wall approximately 2070mm (81 1/2")* above floor (some adjustments may be necessary due to varying floor conditions).


*For Elite Plus partitions mounted 229mm (9") above finished floor, fasten Headrail brackets 2146mm (84 1/2") above floor.

*For Elite Max partitions, refer to elevation drawing.

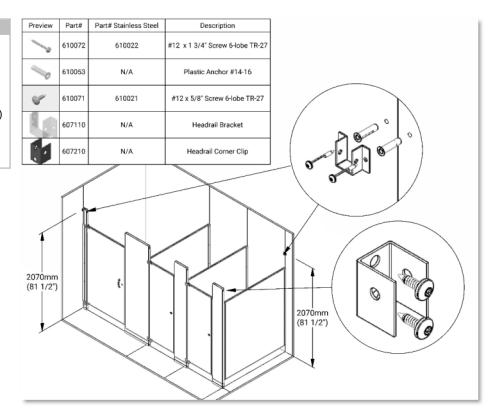

STEP 12: Place Headrail

Place Headrail into tops of pilasters and slide into Headrail brackets. Due to the width of some configurations, two or more pieces of Headrail may be required. Splice sections of Headrail on top of pilaster.

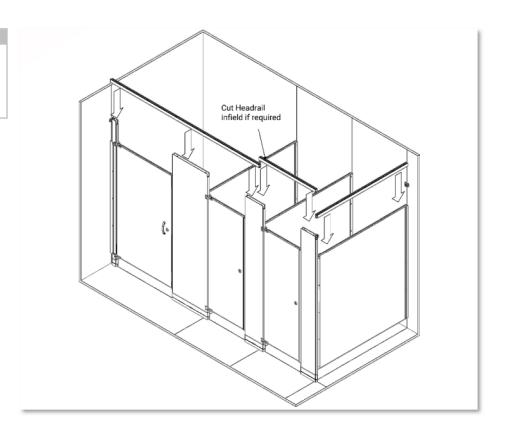




STEP 12.1: Place Headrail


Fasten Headrail to the Headrail wall brackets. Install Headrail end cap if required.

Adjust levelling devices to level all compartment components and tighten.

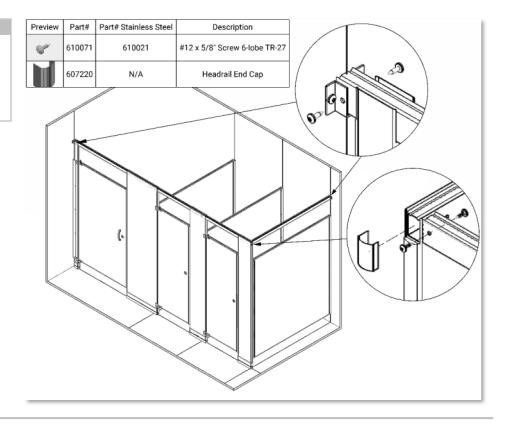


STEP 12.2: Place Headrail

Fasten Headrail to pilasters. Use one screw for pilasters under 8" wide and two screws for pilasters over 8" wide. Fasten the screws on the interior of the partitions only.

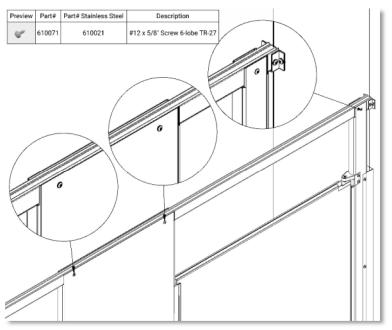

STEP 12.3: Place Headrail


Drill all remaining panel and pilaster holes and fasten to brackets.

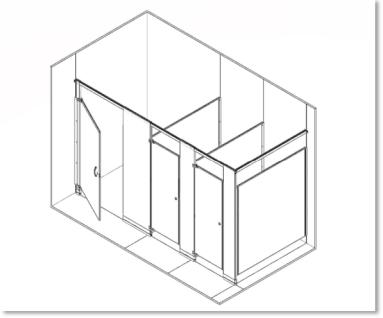



Appendix A-1 - Alcove Unit


Rest panel on a block and position in channel. Drill two holes through top and fasten. Keep the panel on stabilizer block until middle pilaster has been installed.

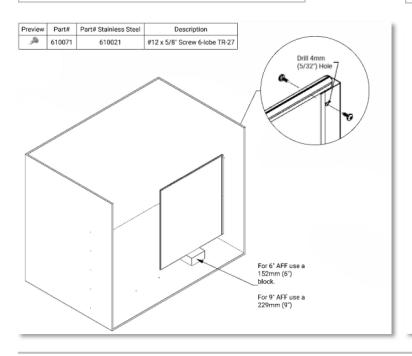

Appendix A-2 - Alcove Unit


Position concave side of alcove channel to pilaster. Secure with a minimum of three screws.

Follow Step 7 for pilaster mounting instructions.

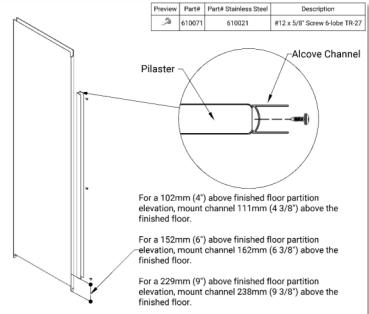


Appendix A-3 - Alcove Unit

Plumb panel and pilaster. Secure panel to the alcove channel with a minimum of three screws on the inside of the unit.

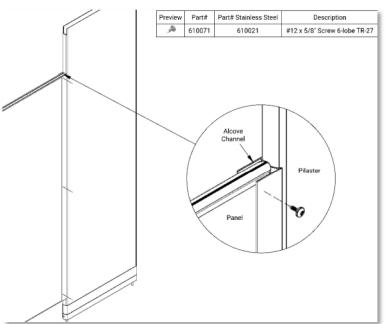

Appendix A-4 - Alcove Unit

Fasten Headrail to the Headrail wall brackets. Adjust levelling devices to level all compartment components and tighten. Follow Steps 4, 5, 8 and 9 for pilaster and door mounting instructions.

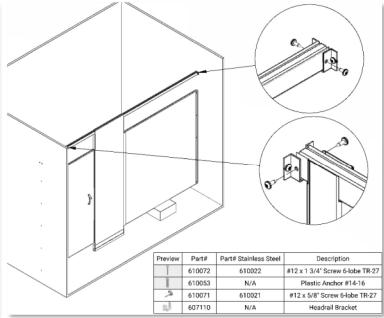




Appendix B-1 - Stirrup Bracket Option

Using your centerline locations, measure, pre-drill and install plastic anchors.*

For a 152mm (6") above finished floor elevation, mount the stirrup brackets 305mm (12") & 1626mm (64") above the finished floor.


For a 229mm (9") above finished floor elevation, mount the stirrup brackets 381mm (15") & 1702mm (67") above the finished floor.

*Adjust based on masonry lines as necessary

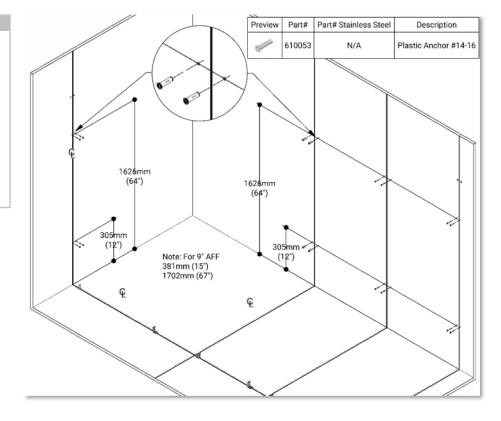

Appendix B-2 - Stirrup Bracket Option


Fasten stirrup brackets to wall.

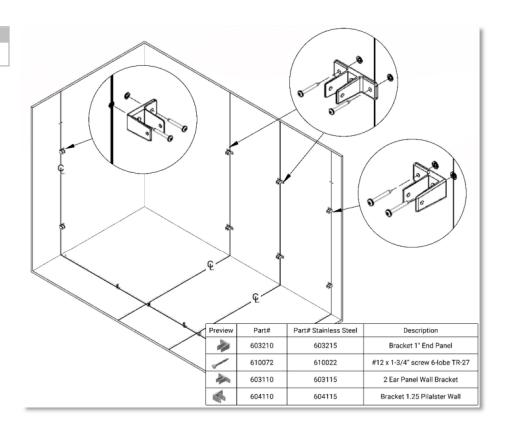



Appendix B-3 - Continuous Channel Option

Fasten stirrup brackets to wall pilaster and panel.

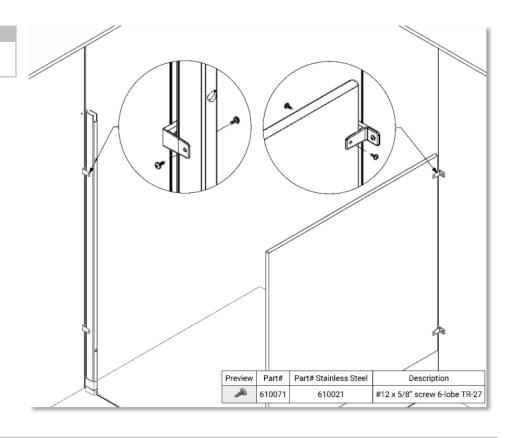


Appendix B-4 - Continuous Channel Option

Place pilaster on floor brackets and mark centerline of panel on the back of the pilaster and fasten "U" brackets.

For a 152mm (6") above finished floor elevation, mount the stirrup brackets 305mm (12") & 1626mm (64") above the finished floor.

For a 229mm (9") above finished floor elevation, mount the stirrup brackets 381mm (15") & 1702mm (67") above the finished floor.

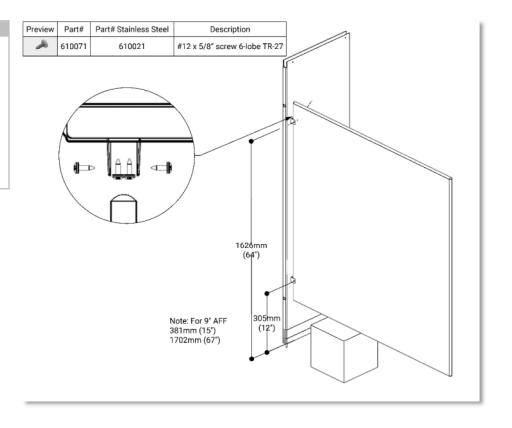




Appendix E-1 - Indicator Latch

Install indicator latch keeper as shown below. When installing indicator face plate to the pin, set the indicator plate to show red in the window and have the latch in the locked position.

Appendix C-2 - Indicator Latch (Out-swing)


Out-swing doors will use the continuous stop as the keeper. Out-swing spacer to be installed to allow the latch to clear the continuous stop.

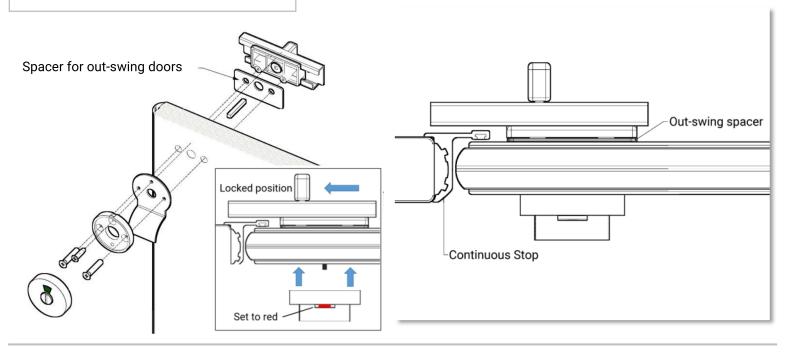

Appendix C-3 - Indicator Latch (In-swing)

Line up the in-swing keeper with the latch.

Before fastening the keeper to the pilaster, ensure the door does not hit the keeper when opening. The door should clear the keeper by 1/32".

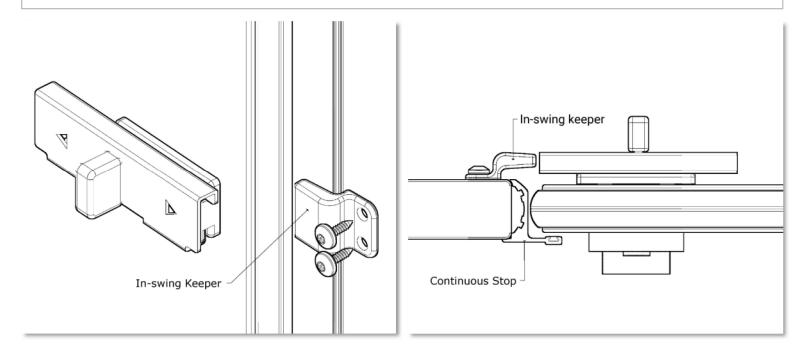



Appendix D-1 - Continuous Hinge


For a 152mm (6") above finished floor elevation, mount hinge to pilaster 159mm (6 ¼") above the finished floor.

For a 229mm (9") above finished floor elevation, mount hinge to pilaster 235mm (9 ¼") above the finished floor.

Align the hinge notch with the seam edge of pilaster. Plumb the hinge and fasten.

Note:

Fasten the screws starting at the top of the hinge and finish at the bottom. The hinge must be installed plumb to work correctly.

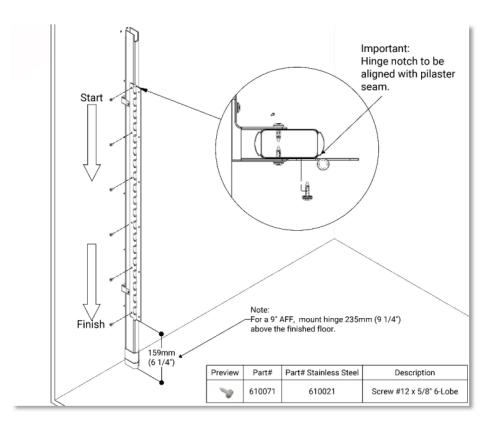

Appendix D-2 - Continuous Hinge


For a 152mm (6") above finish floor elevation, use a 152mm (6") block to position the door.

For a 229mm (9") above finish floor elevation, use a 229mm (9") block to position the door.

Align the top of the hinge 6mm (1/4") from the top of the door edge and 3mm (1/8") from the pilaster edge. Plumb door and fasten the door to the hinge.

Note:

The hinge must be installed plumb to work correctly.

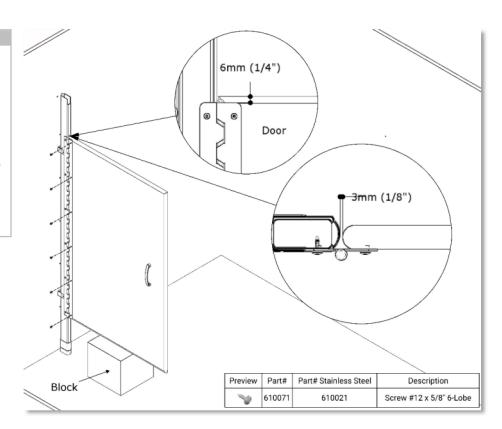




Appendix E-1 - Concealed Hinge (Powder Coated Only)

Fasten lower hinge to pilaster.

Part# Part# Stainless Steel Description Preview Z601330 Wing Nut Z601320 #10-24 Screw N/A Z610050 N/A #10 External Lock Washer 601500 601452 Lower Hinge Assembly Slowly tighten the hinge screw.


Appendix E-2 - Concealed Hinge (Powder Coated Only)

Install and fasten the male cam to lower hinge.

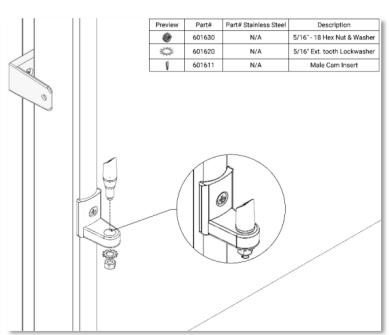


Appendix E-3 - Concealed Hinge (Powder Coated Only)

Fasten the upper hinge to pilaster

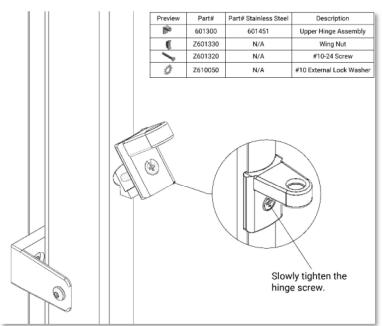

Appendix E-4 - Concealed Hinge (Powder Coated Only)


Fasten the upper hinge to pilaster

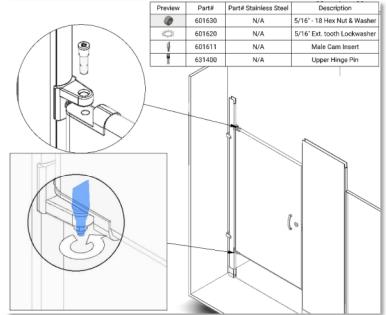




Appendix F-1 - Ceiling Hung Pilaster Establish Ceiling Stud Locations

Establish front centerline by taking the overall compartment dimension and deducting 16mm (5/8"). Use final layout drawings to determine locations.

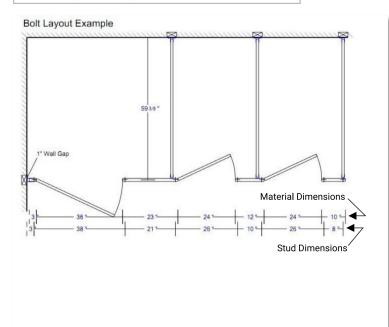


Appendix F-2 - Ceiling Hung Pilaster Establish Ceiling Stud Locations

Drill holes for ceiling studs 25mm (1") in from edge of pilaster locations as indicated on layout drawings.

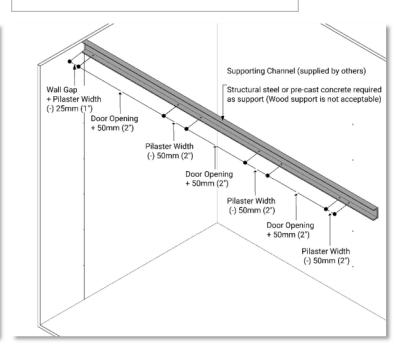


Appendix F-3 - Ceiling Hung Pilaster - Erect Pilaster Install ceiling stud hardware.

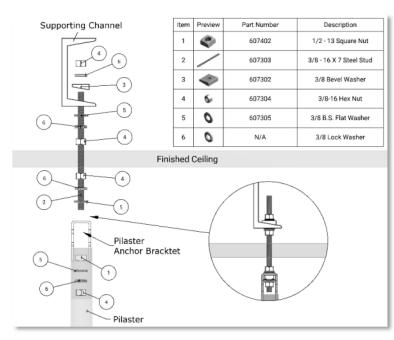

Appendix F-4 - Ceiling Hung Pilaster - Erect Pilaster

Position pilaster on ceiling studs, plumb and tighten. Hadrian recommends the supporting channel should be 25mm (1") above the finished ceiling.

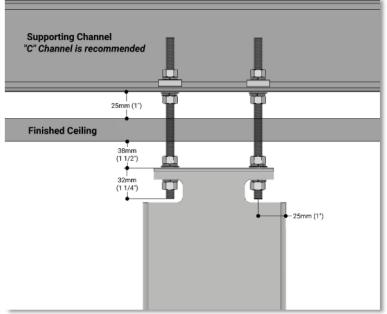




Appendix G-1 - Floor Mounted Pilasters Establish Floor Stud Locations

Establish front centerline by taking the overall compartment dimension and deducting 16mm (5/8"). Use final layout drawings to determine locations.


Appendix G-2 - Floor Mounted Pilasters Establish Floor Stud Locations

Drill 57mm (2 $\frac{1}{4}$ ") deep holes for floor studs and position 25mm (1") in from edge of pilaster locations as indicated on layout drawings.

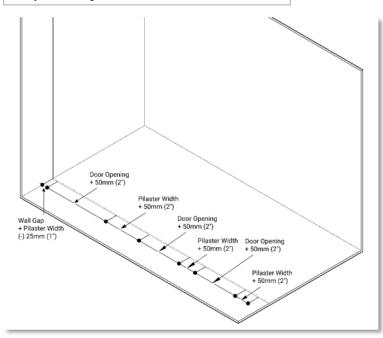


Appendix G-3 - Floor Mount Pilasters - Erect Pilaster

Install floor stud hardware.

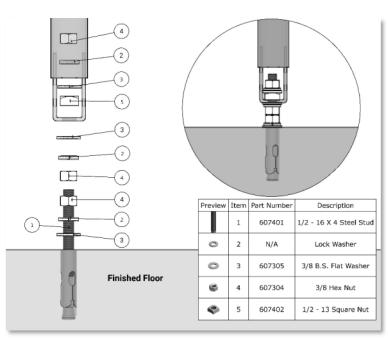

Appendix G-4 - Floor Mount Pilasters - Erect Pilaster


Position pilaster on floor studs 25mm (1") above finished floor, plumb and tighten.

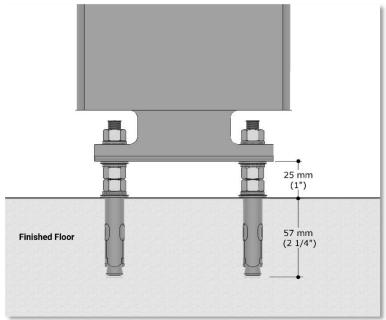




Appendix H-1 - Floor to Ceiling Pilaster Ceiling Connection

Follow Appendix F-1 to F-4 for ceiling connection instructions.

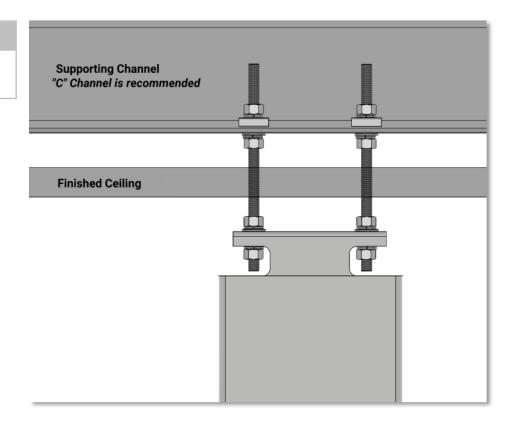

Appendix H-2 - Floor to Ceiling Pilaster Floor Connection


Follow Steps 1, 2 and 7 for floor connection instructions

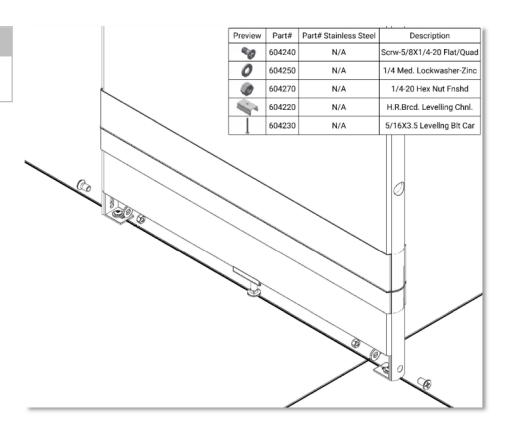




Appendix I-1 - Panel Support Pedestal

Establish the panel support pedestal centerline by taking the pilaster centerline dimension and subtract 152mm (6").

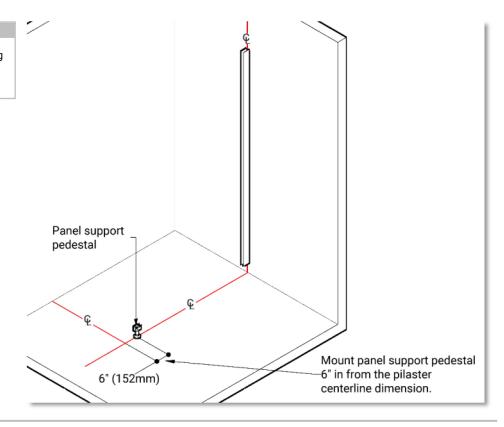


Appendix I-2 - Panel Support Pedestal

Fasten mounting plate to floor, measure and cut post, install press-fit bushing, place shoe over mounting plate and screw the post on to the mounting plate.

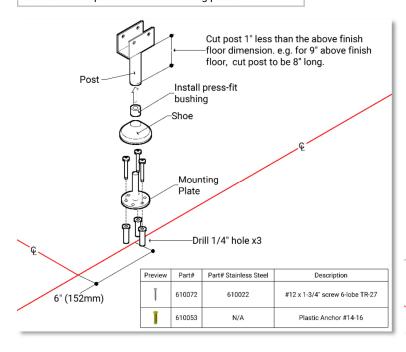


Appendix I-3 - Panel Support Pedestal


Adjust panel support pedestal to desired height and fasten panel to the pedestal post.

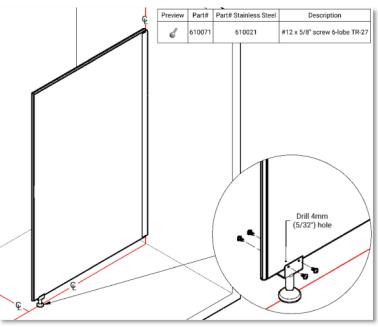




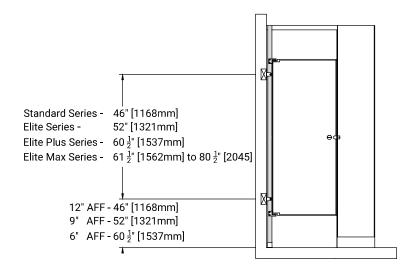



In-Line Mounted Post

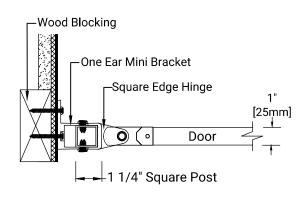

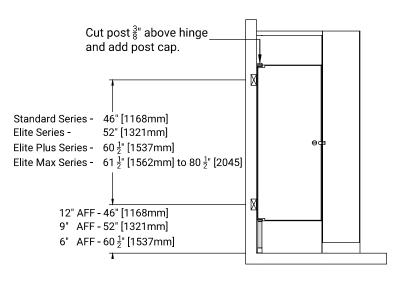


Rear Mounted Post

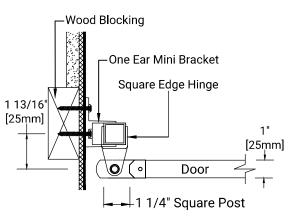

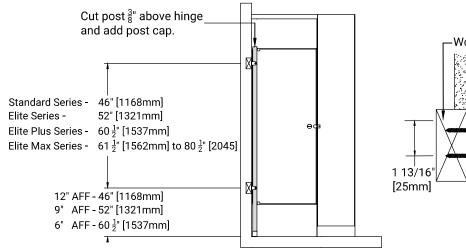



Front Mounted Post




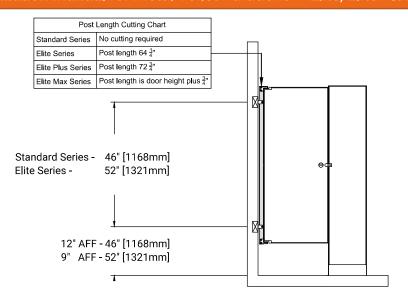

In-Line Mounted Post

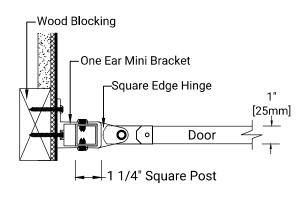

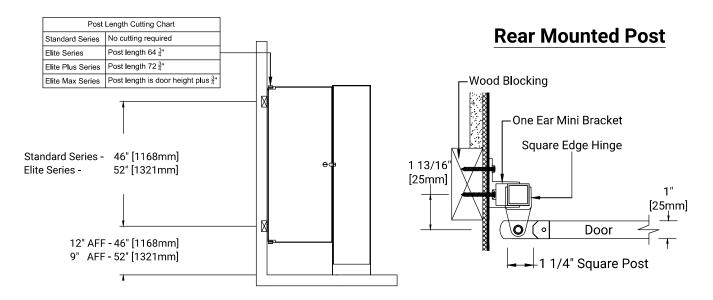


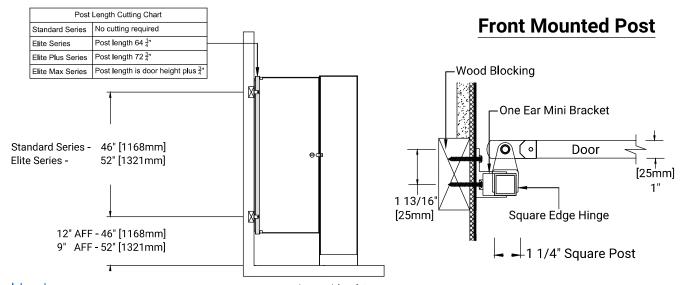





[25mm]


Installation Manual for Metal Toilet Partitions - Elite, Elite Plus & Elite Max Series

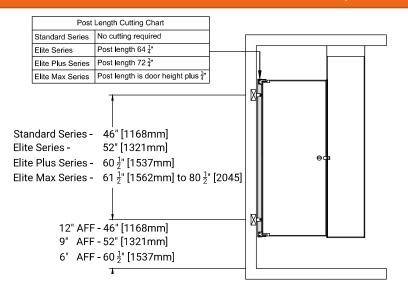


In-Line Mounted Post

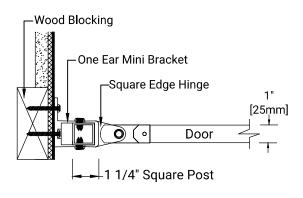

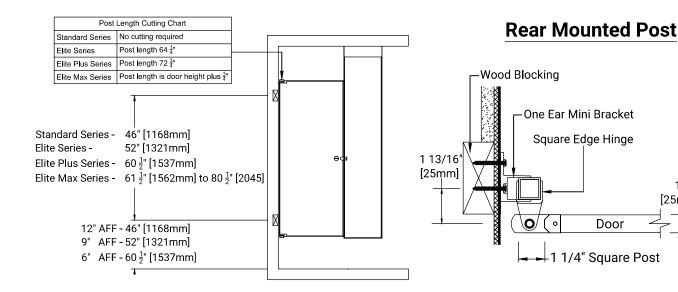


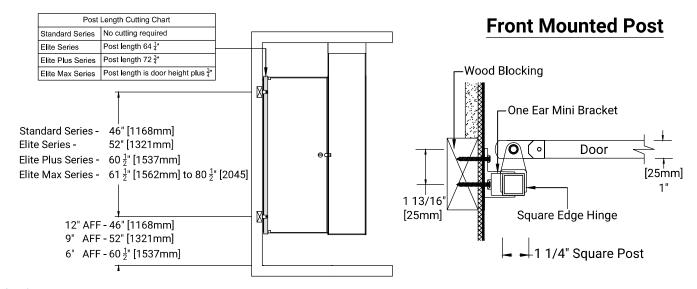





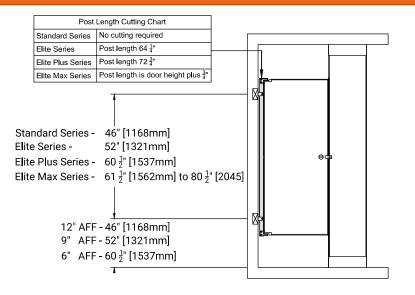

In-Line Mounted Post

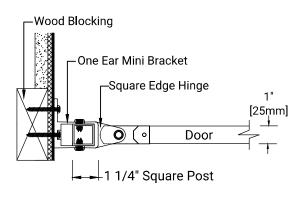

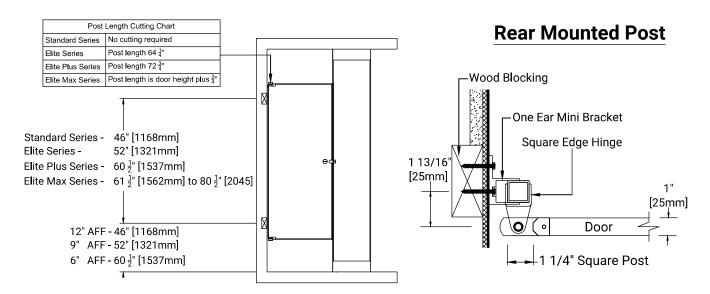


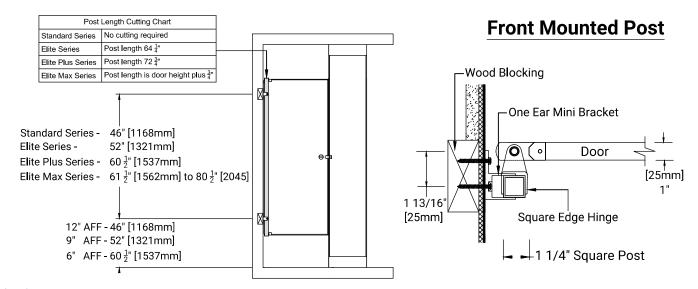




Appendix N-1 - Transom Panel

Follow steps 1-3 on pages 4-6. Place bottom panel on block, level and fasten to channels.

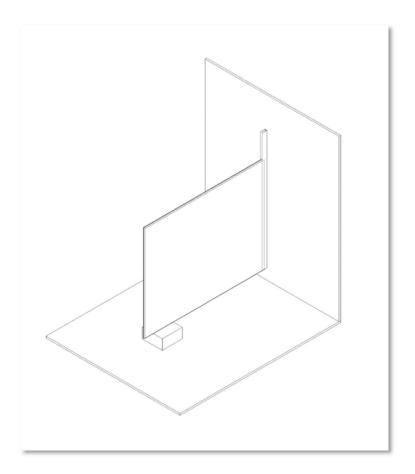

Appendix N-2 - Transom Panel

Place top panel (transom panel) on top of the bottom panel and fasten to channel.

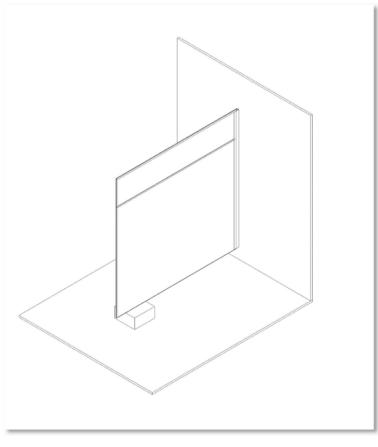

Series	Bottom Panel Size	Top Panel Size (Transom)	Total Height
Elite	57 ½" High x Depth	6" High x Depth	63 ½"
Elite Plus	57 ½" High x Depth	14 ½" High x Depth	72"
Elite Max	57 ½" High x Depth	15 ½" – 34 ½" High x Depth	73" – 92"