

Instruction Sheet

Wall Mounting Brackets for Cubbie File Cart #266015

The Cubbie File Storage Cabinet can either be mounted to the wall or placed on top of a counter.

NOTE: Wall mounting hardware is not included. The keyholes in the back of the cabinet are made for a maximum size of #10 hardware.

The keyhole dimensions center to center are 10" x 16". The keyholes are offset from the top by 2 3/4" and the sides by 5 3/4".

If the cabinet is to be wall mounted, mark the approximate locations for the hardware on the wall. Double check placement before drilling holes.

Mount the cabinet to the wall using appropriate hardware


Using the hardware provided, insert one screw through the hole in shelf as shown in the picture above. Line up the bracket with the threaded hole at top.

NOTE: The other end is not threaded. Thread in only hand tight at this time. Repeat procedure for other side.

Place the end of each bracket against the wall and mark the wall surface through the hole. Move aside and drill hole and use the same type of hardware that was used to mount the cabinet.

Tighten firmly both screws that secure the mounting brackets to the bottom of cabinet. Test the sturdiness of the brackets and cabinet. Make any adjustments as needed.

The cabinet is ready for use

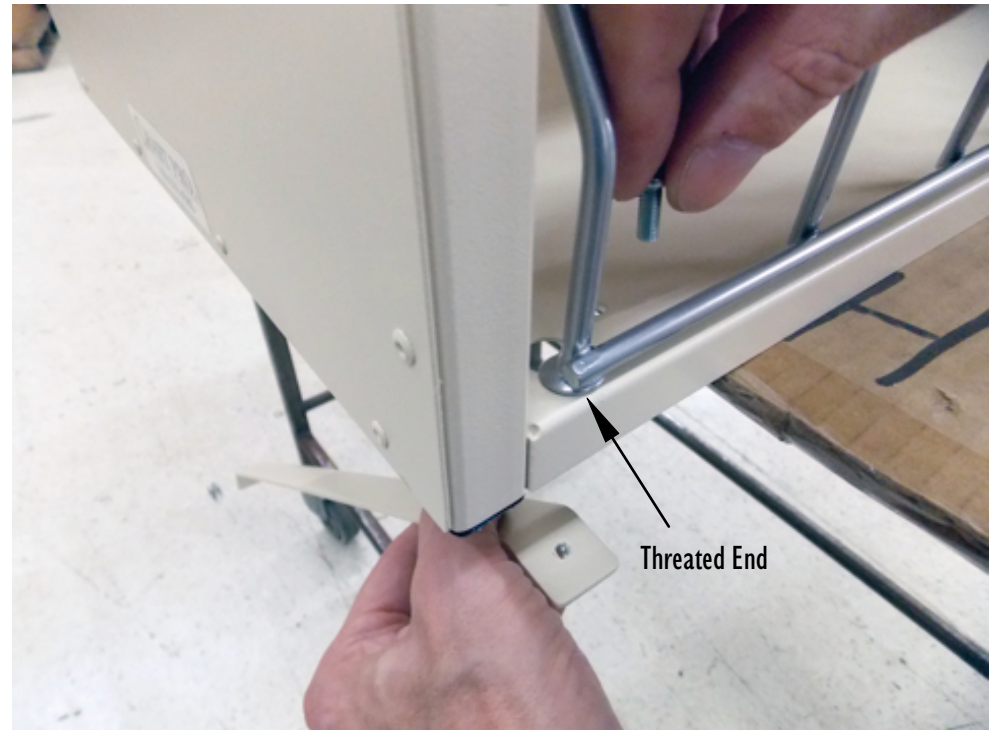

OMNIMED^{INC.} MANUFACTURERS OF **IBeam[®]** PRODUCTS
800 Glen Avenue • Moorestown, N.J. 08057
800.257.2326 • FAX: 856.359.2249
www.omnimedbeam.com