ASSEMBLY INSTRUCTIONS


Valet Delivery Cart

Model Number HVDC2448



List of Components

Item	Qty.	Description
63UP	4	Post
5M	2	Caster
5MB	2	Caster with Brake
PIC-CTN1	1	2-Posts with Foot Plates
2448NC	2	24x48 Shelf
2424NC	3	24x24 Shelf
T24C	1	Coat Hanger Tube
24NC	2	Coat Hanger Brackets
R61NC	12	Rods with Tabs
DD24C	4	Dividers
9985	5	Bag of Split Sleeves

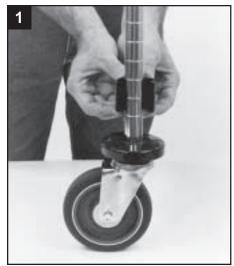



Valet Delivery Cart






Count up fourteen grooves from the bottom shelf and place a pair of split sleeves on only two posts on the same end of the cart.

Take the cut down posts and count up twelve grooves from the bottom and place a pair of split sleeves on each post.

Take one of the small shelves and lower it over the tops of the four posts, with sleeves in place. Fit the shelf onto the previously installed split sleeves and seat the shelf (See Fig. 4).



Being certain that the cut down posts are standing vertically, slip the special foot plates under the leveling leg. Unscrew the leveling bolts until they contact the foot plates. (See Fig. 5).

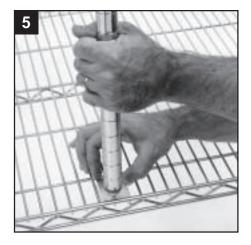

Seat the remaining shelves (See Fig. 6). **NOTE: Count fifteen grooves to equally space the shelves.**





With the top shelf in place, attach the hanger tube.

