

EZ-FIT® HOT LID DISPENSER INSTALLATION INSTRUCTIONS

1. CUT HOLE IN COUNTER SURFACE




L2410



L2210


2. REMOVE TRIM RING TURNING COUNTER CLOCKWISE

3. SECURE LID DISPENSER TO COUNTER WITH SUPPLIED SCREWS

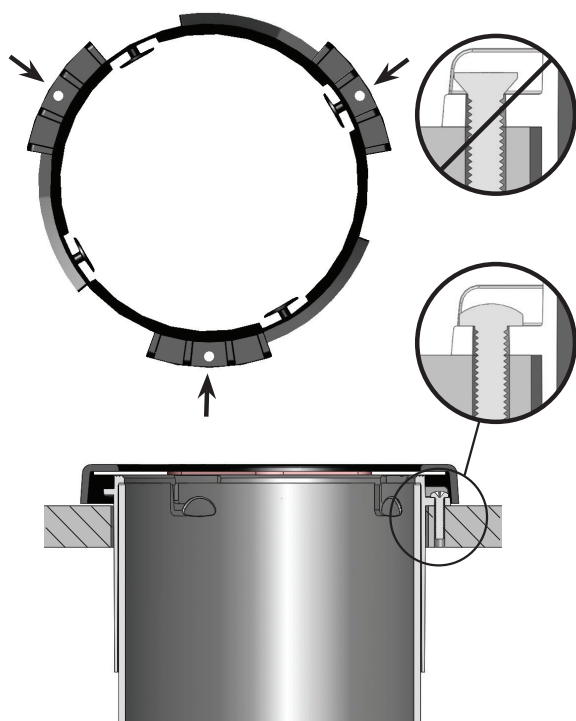


4. SELECT PROPER SIZE GASKET FOR LID (SEE TABLE ON BACK)


5. INSTALL GASKET OVER POSTS IN UNDERSIDE OF RING

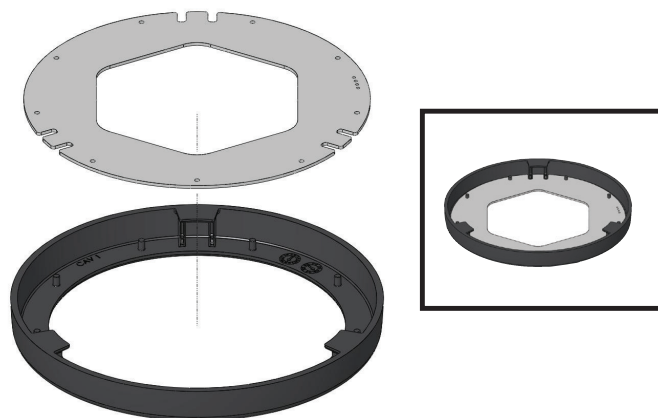

6. REPLACE COVER RING WITH GASKET BY TURNING CLOCKWISE OVER MOUNTING RING UNTIL SECURE

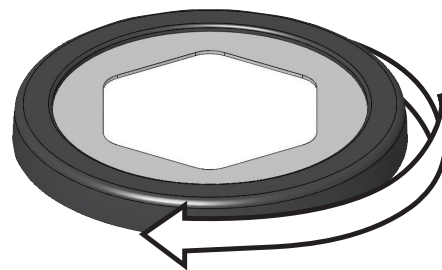

7. LOAD LIDS THROUGH GASKET*

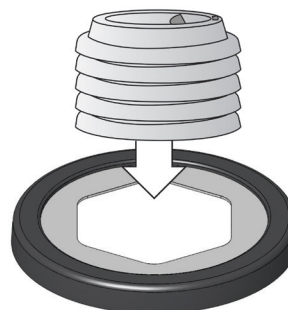

*More delicate lids may need to be loaded into dispenser before replacing cover ring with gasket.

REPLACEMENT PARTS & ACCESSORIES (see reverse side for replacement gaskets)

X24MT
X24TR

Black Mounting Ring (new low profile)
Black Trim Ring (new low profile)

C2413BK End Cap
I00458BK Cup Pusher

C2203BK End Cap
C3426BK Cup Pusher


GASKET SIZING GUIDE

REPLACEMENT GASKET KITS

Gasket Size	Part Numbers		Quantity of Gaskets in Kit
	L2410	L2210	
SMALL	XL2422S	XL2222S	3
MEDIUM	XL2422M	XL2222M	3
LARGE	XL2422L	XL2222L	3
EXTRA LARGE	XL2422XL	XL2222XL	3
	XL2426, XL2226 One each-Small, Medium, Large, Extra Large		4


HOW TO DETERMINE WHICH GASKET TO USE

Gasket should lie within this range for best lid dispensing performance.

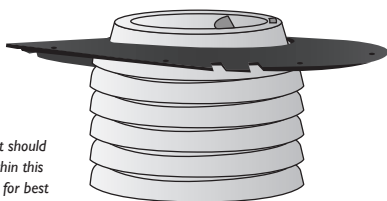

1. Set lid down right side up.
2. Test approximate gasket by partially pulling through the lid.
3. When lid fits appropriately, the outer edges of the lid will be grabbed by the gasket - load lids into dispenser and pull to verify one-at-a-time is being achieved.

SMALL GROUPING OF HOLES ON EDGE INDICATE GASKET SIZE (SEE CHART)

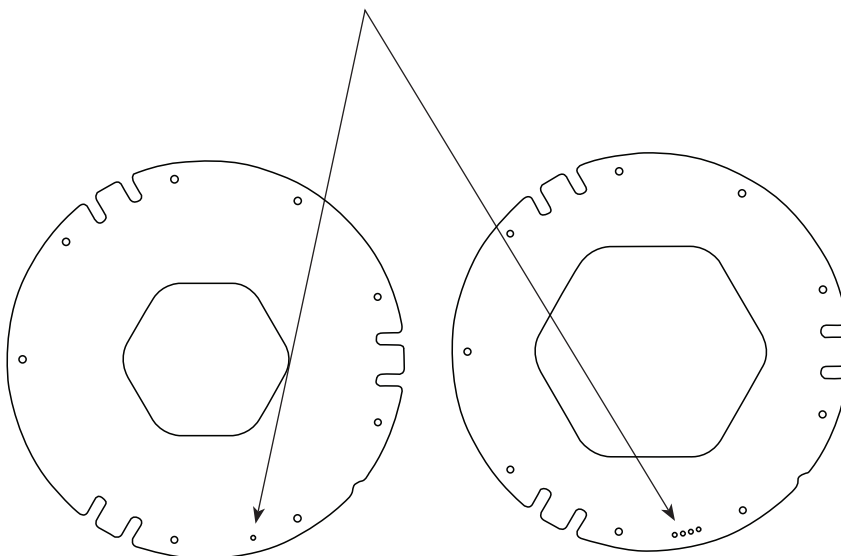

# OF HOLES	GASKET SIZE	PART #	
o	SMALL	XL2422S	XL2222S
o o	MEDIUM	XL2422M	XL2222M
o o o	LARGE	XL2422L	XL2222L
o o o o	EXTRA LARGE	XL2422XL	XL2222XL

San Jamar

555 Koopman Lane
Elkhorn, Wisconsin 53121
USA
T: +1.262.723.6133
F: +1.262.226.8664
info@sanjamar.com
www.sanjamar.com

Canada

3280 Bloor Street West
Suite 1140
11th Floor, Centre Tower
Toronto, ON M8X 2X3
CANADA
T: +1.262.723.6133
F: +1.262.226.8664
canada@sanjamar.com

Europe

Schoorstraat 26a, bus 1
2220 Heist-op-den-Berg
BELGIUM
T: +32 15 22 81 40
F: +32 15 22 81 48
emea@sanjamar.com

México

Av. Paseo de la Reforma No. 350 - 10
Col. Juárez
Deleg. Cuauhtemoc, CP 06600
MEXICO, D.F.
T: +52 (55) 3626 0772
mexico@sanjamar.com

