



## CLEANING INSTRUCTIONS for iMIX POWDER MIX DISPENSERS

**NOTICE** - This guide is for quick reference only and is not intended to replace the information in the Operation Manual!

### RECOMMENDED DAILY CLEANING



1. Empty the Drip Tray and wash components in a mild solution of dish detergent using a bristle brush. Rinse and dry each item thoroughly before reassembling.



2. Rinse out the Whipper Chambers by placing the RINSE/RUN switch in the RINSE position and activating the DISPENSE switch for 5 to 10 second bursts for each hopper.



“S” Silver Series  
shown above



3. Remove Hoppers and refill with product.



3. Pull the Mixing Chamber out of the Whipper Chamber.

4. Twist the Whipper Chamber clockwise and pull it off the Whipper Chamber Receptacle.



1. Open the Cabinet Door.



2. Remove the steam collector by pulling it forward and twisting in a clockwise rotation.



5. Pull the Frother off the Motor Shaft. Notice the flat keyway on the shaft and the matching keyway inside the Frother. It is important that these two keyways are lined up when reassembling.



6. Twist Whipper Chamber Receptacle clockwise and pull it off the Motor Shaft.



7. Slip the O-ring off the Whipper Chamber Receptacle and remove the shaft seal.



8. Wash components in a mild solution of dish detergent using a bristle brush. Rinse and dry each item thoroughly before reassembling.

**THOROUGH CLEANING OF THE HOPPER (Once a week)**

1. Open the Cabinet Door.



2. Remove the Hopper Assembly from the Cabinet. Remove the Cover and empty the contents.



3. Pull the Ejector Elbow off the Hopper Base.




4. Remove the Agitator Disk and Mixing Blades by spreading the hopper walls slightly, and pulling one, then the other Agitator disk shaft end from the hopper wall pivots.



5. Firmly hold Auger with one hand, and remove Auger Drive Coupling by turning it clockwise.



6. Remove the Auger and Auger Drive Shaft by pulling them out the front of the hopper.

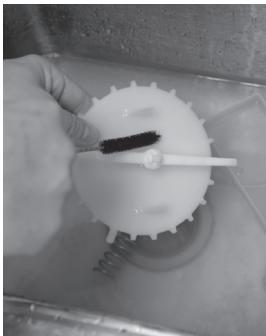

7. Wash all components in a mild solution of dish detergent using a bristle brush when needed. Rinse and dry each item thoroughly before reassembling.



8. Thoroughly wipe all surfaces with a clean wash cloth that has been dampened with hot water. Wipe dry with a clean dry cloth before reassembling the dispenser.