



MSN01-1000 MiniSan Hand Foam Dispenser Assembly Instructions

General Overview

The MSN01-1000 - MiniSan™ Hand Foam Dispenser is designed for use where hand washing is not available such as festivals, food service locations, petting zoos, construction sites, etc., to be used indoors or out. The base can be filled with water or sand to provide additional stability. It includes a large flat area for advertising.

Specifications

Dimension	Imperial	Metric
Base/Top/Dispensing Pipe	15"x15"x58"	38x38x147 cm
Maximum Hand Foam Dispensers	67.5 fl oz (2-1000 ml refill bags)	
Number of Single Foam Dispenses	2,666 (2000-.75 ml dispenses)	
Weight Empty	8 lb	3.63 kg
Base Capacity	2.2 gal	8.3 ltr
Advertising Area	8" x 10.5"	20.3 x 26.7 cm

*Shown with FD01-1000
Dispensers (Sold Separately)*

POLYJOHN USA

PolyJohn Enterprises Corp
2500 Gaspar Ave.
Whiting, IN 46394
Phone: 800-292-1305
Fax: 219-659-0625
www.polyjohn.com
info@polyjohn.com



POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.
Equinox 1 Audby Lane
Wetherby, England LS22 7RD
Phone: 44 (0) 1937-583333
Fax: 44 (0) 1937-583322
sales@polyjohn.co.uk

POLYJOHN CANADA

PolyJohn Canada
P.O. Box 2300
199 Forest Plain Rd.
Orillia, Ontario LV3 6S2
Phone: 800-465-9590
Fax: 705-325-8250
info@polyjohncanada.ca

Exploded View

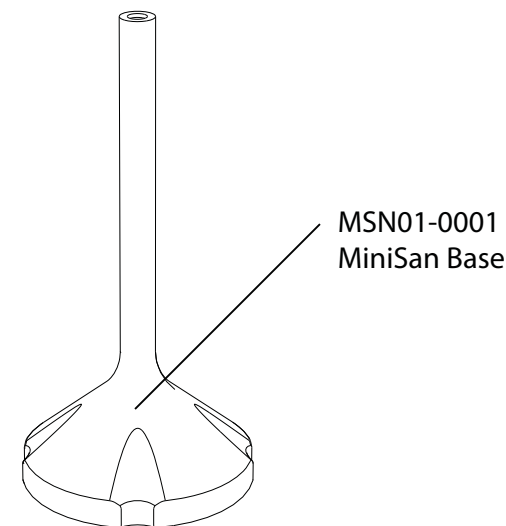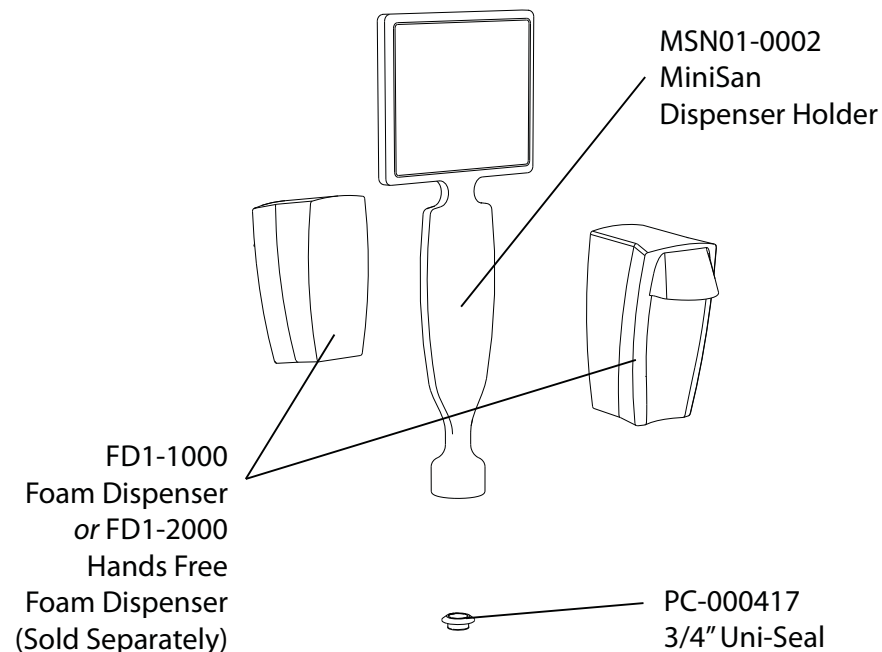

Assembly Instructions

Step 1. Fill the MSN01-0001 base with water or sand through the hole in the top of the post. If filling with sand, be sure to clean off all sand in and around the top of the post.

Step 2. Insert the PC-000417 Uni-Seal in the hole in top of the Base

Step 3. Liberally apply some dish soap or other suitable lubricant to the inner surface of the Uni-Seal.

Step 4. Insert the stem at the bottom of the MSN01-0002 dispenser holder in the Uni-Seal, and firmly press the dispenser holder down onto the base until seated.

Step 5. Mount the hand sanitizer dispenser (s) using the directions that came with the dispensers. PolyJohn carries two quality dispensers that fit this product. We recommend the use of either the FD1-1000 Dispenser, or the FD1-2000 Hands Free Dispenser. The use of PC-000105 rivets is recommended to mount the dispensers.

General Use and Information

Filling a Dispenser:

If this product is installed with the FD1-1000 or FD1-2000 foam dispensers from PolyJohn (recommended), then push up on the tab from underneath the dispenser and pull down the cover. Fill with **Rid-It™ - Foam Hand Sanitizer** (follow the instructions located on the sticker inside of the foam dispenser). **Order Part #FD1-0004 for a case of 4 refills, available from PolyJohn. If this product is being used in a cold environment such as a winter event, please order part # FD1-0004W. This is a case of 4 winter blend refills available from PolyJohn.**

Draining the Base:

To drain the base if filled with water, pull up on the MSN01-0002 dispenser holder, while holding the base down. Remove the PC-000417 Uni-Seal, and tip the base over into a sink.

CLEANING AND MAINTENANCE

Use a mild soap to clean all surfaces and component parts.

Minor scratches and abrasions can be lightly sanded or scrubbed with a mild abrasive cleaner (*such as "Soft Scrub"*) that contains calcium carbonate, hypochlorate bleach and detergents. Be sure to follow the cleaning product directions since these ingredients may cause hazardous gases when mixed with other chemicals. Rinse the cleaned area and buff with a conventional wax.

Some light scratches may also be hidden by using an industrial hot air gun.

For a source of cleaning, deodorizing and paper products contact:

**COOPER'S OWN
2500 GASPAR AVE.
WHITING, IN 46394-2175
www.polyjohn.com/products/supplies/cooper-s-own**

We highly recommend membership in the Portable Sanitation Association International (PSAI); the worldwide authority on portable sanitation services. The PSAI, "Portable Sanitation Industry Certification Program" manual contains a wealth of information on standards and service procedures. For more information contact the PSAI:

PORTABLE SANITATION ASSOCIATION INTERNATIONAL (PSAI)
7800 METRO PARKWAY, SUITE 104
BLOOMINGTON, MINNESOTA 55425 USA
800-822-3020 / 612-854-8300 FAX 612-854-7560
www.pesai.org

MISSION STATEMENT

"PolyJohn is a family owned, state of the art, plastics manufacturing company dedicated to providing its employees with a work environment committed to excellence, and its customers with innovative products, services and technology that meet or exceed their requirements."

THANK YOU FOR PURCHASING POLYJOHN PRODUCTS!

Look for us on the Web @ www.PolyJohn.com