

SETTING UP YOUR PRODUCT



(a) ITEM # DSL001



(b) ITEM # DSP001



(c) ITEM # DSM001

(d) ITEM # DSC001

(e) ITEM # DSM002



(f) ITEM # DSH001



(g) ITEM # DSM005



(h) ITEM # DSM003

(i) ITEM # DSM007

(l) (SCREWS)

(j) ITEM # DSB003

*TOOL AND BRACKET SCREW NOT INCLUDED

Figure A


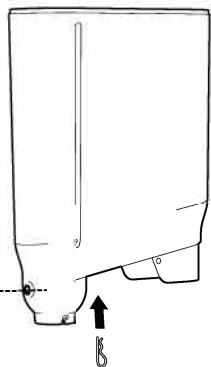



Figure B

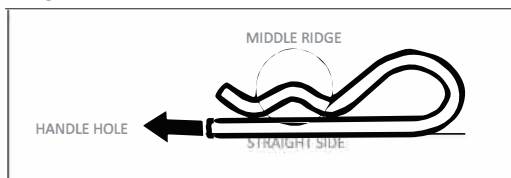

- Before setting up, consult your contractor what screw to use based on your shelf material. Also, make sure that the total weight of all dispensers and products contained is within the shelf's capacity.
- Carefully remove all parts from packaging and poly bags. Before assembling, make sure you have all the parts listed below. If any piece is missing, please call +1 (847) 763 1215.

a. Lid	g. Knob
b. Portion Wheel	h. Funnel
c. False Chamber	i. R Clip
d. Container	j. Shelf Base
e. Label Holder	l. Container Screws
f. Handle	
- If the false chamber (c) is installed in the container, gently pull it out and set aside.
- Refer to **Figure A**. Drop the portion wheel (b) into the allotted space at the front of the container (d). Align all the holes (on container and wheel).
- Push the handle (f) through the front, all the way to the back hole.
- At the tip of the handle is a hole for the R clip. Insert the straight side of the R clip (i) through this hole. See **Figure B**. A portion of the metal handle will rest under the middle ridge.
- Set aside the container. Take the base (j) and bracket (k) to the shelf you are installing onto.
- On the shelf you are installing to, measure the spacing that you want between each container. Use the shelf base (j) as a guide. Refer to **Figure C** for the dimensions.
- Secure the bracket onto the shelf with a single screw.

Figure C

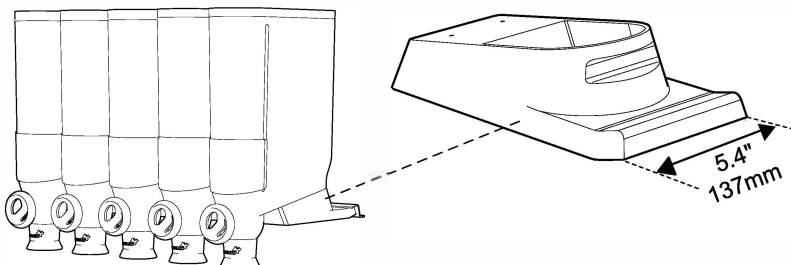

NEED ASSISTANCE?

Please contact customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712

Visit our website at: www.rosseto.com

11. Secure mounting bracket to desired shelf by peeling off the adhesive and applying pressure firmly to the bracket.
12. Lock the shelf base (j) into position by sliding the back portion under the affixed bracket. Use the arrow in **Figure E** as a guide.
13. On the bottom side of the false chamber (c) is a lip that folds outward. Slide the false chamber smoothly into the container, lip-side first. Make sure that the lip touches the inner side of the container's front panel.
14. If you wish, you may pour in the contents into the container at this time. Fill the false chamber first, then the body. Securely place the lid (a) on top.
15. Hook the funnel (h) onto the container by connecting the inner nubs to the notches on the container's spout.

RETENTION BRACKETS AVAILABLE:

- DSM265: HOLDS 2 DS101 DISPENSERS
- DSM400: HOLDS 3 DS101 DISPENSERS
- DSM900: HOLDS 6 DS101 DISPENSERS
- DSM1209: HOLDS 9 DS101 DISPENSERS

Figure E



16. You have two options for label placement:

- Print your label on regular paper and cut to size (3.1" x 5.25" / 78.75mm x 133.35mm).

Place it under the curved label holder (e), with the printed side directly on the plastic piece.

Snap the label holder onto the assembled unit using the allotted ridges. The side edges should latch snugly onto the front of the container, right above the handle.

- Print your label on sticker paper and cut to size (2" Diameter / 50.8mm Diameter).

Peel and stick it onto the flat side of the plastic knob (g) and install the prepared piece onto the metal handle by pushing it through the notches in the middle.


Your dispenser unit is now ready for use! Enjoy!

PRODUCT SPECIFICATIONS

Container Capacity: 3.5 gallons per unit

Assembled Product Weight: 7 lbs

*Also available with table-top leg (DS100) and bamboo shelf base (DS102)

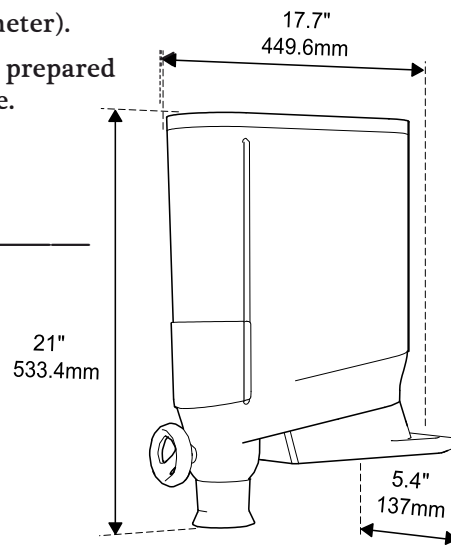

CARE INSTRUCTIONS

1. To maintain the quality of your EZ-SERV® Multi-System dispenser, wash all parts regularly in warm soapy water. Use a non-abrasive sponge.
2. **DO NOT** put any part of the unit through any dishwasher or dryer machines.
3. When disassembling the container, handle all parts gently. Please refrain from using too much force.
4. To keep the handle polished, you may use a commercial metal cleaner - however, remember to only use this on the outer portion and NOT on the shaft.
5. Reassemble the unit only after all parts are completely dry.

NEED ASSISTANCE?

Please contact customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712

Visit our website at: www.rosseto.com