

User's Guide

Vector Wide Stands and Equipment Combinations



EN

QG-49404
Rev 4
08/2026

Manufacturer's Information

Copyright	© Copyright 08/2026 by Alto-Shaam, Inc. All rights reserved. This manual or any portion thereof may not be reproduced or used in any manner whatsoever without the express written permission of Alto-Shaam, Inc.
Trademarks	All trademarks referenced in this documentation are the property of their respective owners.
Manufacturer	Alto-Shaam, Inc. P.O. Box 450 W164 N9221 Water Street Menomonee Falls, WI 53052
Original instructions	The content in this manual is written in American English.

The information in this Guide was current at the time of publication. Scan or click the QR code below for the latest version.



Contents

Bottom Units.....	4
Combinations—23" [584mm] Wide Stands.....	9
Combinations—25-1/2" [648mm] Wide Stands	13
Combinations—29-1/2" [749mm] Wide Stands.....	18
How to Attach the Oven to a Stand.....	24
How to Adjust the Side Racks (if applicable)	25
Stand Dimensions	26

How To Use This Guide


The stands in this guide are designed to accommodate Alto-Shaam Vector H Wide series ovens with various Alto-Shaam units below.
[Note: refer to Stands Guide QG-49403 for Vector H ovens.]

Stands are available in three widths: 23" [584mm], 25-1/2" [648mm], and 29-1/2" [749mm]. There is a section in this guide for each stand width.

Stands can be shipped either preassembled or unassembled (flat-packed). Part numbers in this Guide represent preassembled stands. To order an unassembled version, add an "R" to the part number when ordering.

Popular stands are identified with stars next to the part numbers.

Human figures are provided next to each combination to give a sense of the overall height of the oven on the stand. Detailed dimensional views of each stand can be found on pages 26–34.

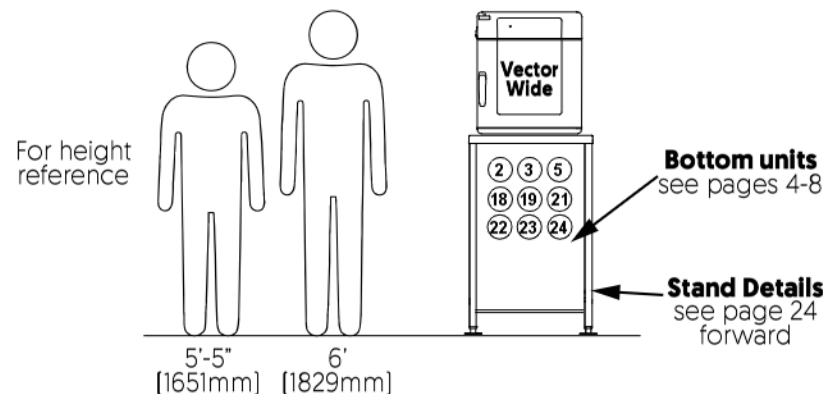

Bottom Units

Note: Bottom units placed on lower shelves must be equipped with legs; not casters.

Number	Image	Model	Description
1		300-S	Low-Temperature Holding Cabinet
2		300-TH	Cook & Hold Oven
3		500-S	Low-Temperature Holding Cabinet
4		500-S [except ovens with 5" [127mm] casters]	Low-Temperature Holding Cabinet
5		500-TH	Cook & Hold Oven

Bottom Units [continued]**Note:** Bottom units placed on lower shelves must be equipped with legs; not casters.

Number	Image	Model	Description
6		750-TH	Cook & Hold Oven
7		750-S	Low-Temperature Holding Cabinet
8		750-S [except ovens with 5" [127mm] casters]	Low-Temperature Holding Cabinet
9		1000-S	Low-Temperature Holding Cabinet
10		1000-S [except ovens with 5" [127mm] casters]	Low-Temperature Holding Cabinet

Bottom Units [continued]

Note: Bottom units placed on lower shelves must be equipped with legs; not casters.

Number	Image	Model	Description
11		1000-TH	Cook & Hold Oven
12		1200-S	Low-Temperature Holding Cabinet
13		500-1D	Drawer Warmer
14		500-2D	Drawer Warmer
15		500-2D [3" [76mm] casters only]	Drawer Warmer

Bottom Units [continued]**Note:** Bottom units placed on lower shelves must be equipped with legs; not casters.

Number	Image	Model	Description
16		500-3D	Drawer Warmer
17		500-2DI	Drawer Warmer
18		500-1DN	Drawer Warmer, Narrow
19		500-2DN	Drawer Warmer, Narrow
20		500-2DN [3" [76mm] casters only]	Drawer Warmer, Narrow
21		500-3DN	Drawer Warmer, Narrow

Number	Image	Model	Description
22		VMC-H2/H2H	Vector Multi-Cook Oven, 2 Chamber
23		VMC-H3/H3H	Vector Multi-Cook Oven, 3 Chamber
24		VMC-H4/H4H	Vector Multi-Cook Oven, 4 Chamber
25		VMC-H2HW	Vector H Series Multi-Cook Oven, 2 Chamber, Wide
26		VMC-H3HW	Vector H Series Multi-Cook Oven, 3 Chamber, Wide

Combinations—23" (584mm) Wide Stands

Notes: The human figures at left are provided for general height reference. They are depicted as 5'-5" [1651mm] and 6' [1829mm] tall. To order an unassembled stand, add an "R" to the part number. A star symbol indicates a popular choice.

OVEN: VECTOR WIDE


STAND NUMBER:	★ 5033305	★ 5033308	5033457	5033460
H3HW:	56-7/8" (1445mm)	60-5/8" (1540mm)	56-7/8" (1445mm)	56-7/8" (1445mm)
H2HW:	48-7/8" (1241mm)	52-5/8" (1334mm)	48-7/8" (1241mm)	48-7/8" (1241mm)

AVAILABLE BOTTOM UNITS

18 500-1DN

Combinations—23" (584mm) Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

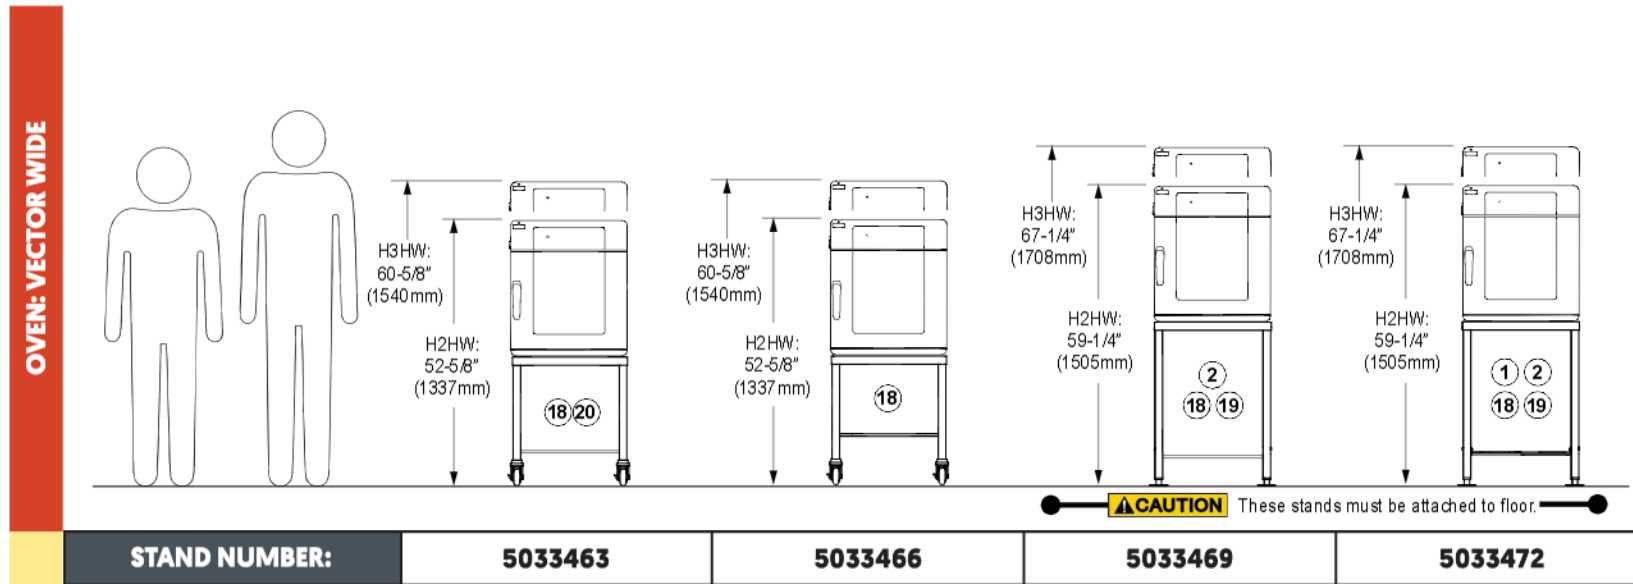

Combinations—23" (584mm) Wide Stands [continued]


Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: CTX

STAND NUMBER:	5033475	5033479	5033482	5033486	
AVAILABLE BOTTOM UNITS	 ① 300-S	 ② 300-TH	 ⑱ 500-1DN	 ⑲ 500-2DN	 ㉑ 500-3DN

Combinations—23" (584mm) Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

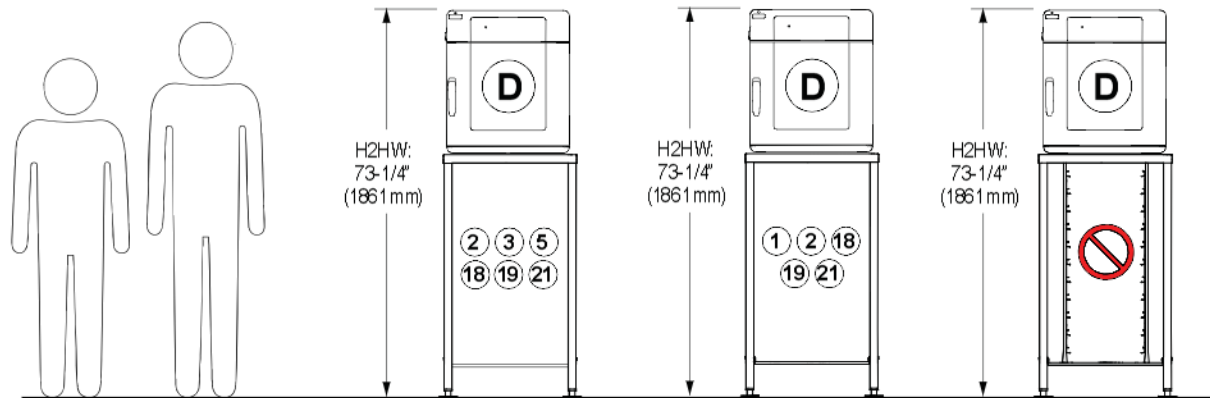

STAND NUMBER:

5033489

5033492

5033495



① 300-S



② 300-TH



③ 500-S



⑤ 500-TH



⑱ 500-1DN





⑲ 500-2DN



⑳ 500-3DN

Combinations—25-1/2" (648mm) Wide Stands

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number. A star symbol indicates a popular choice.

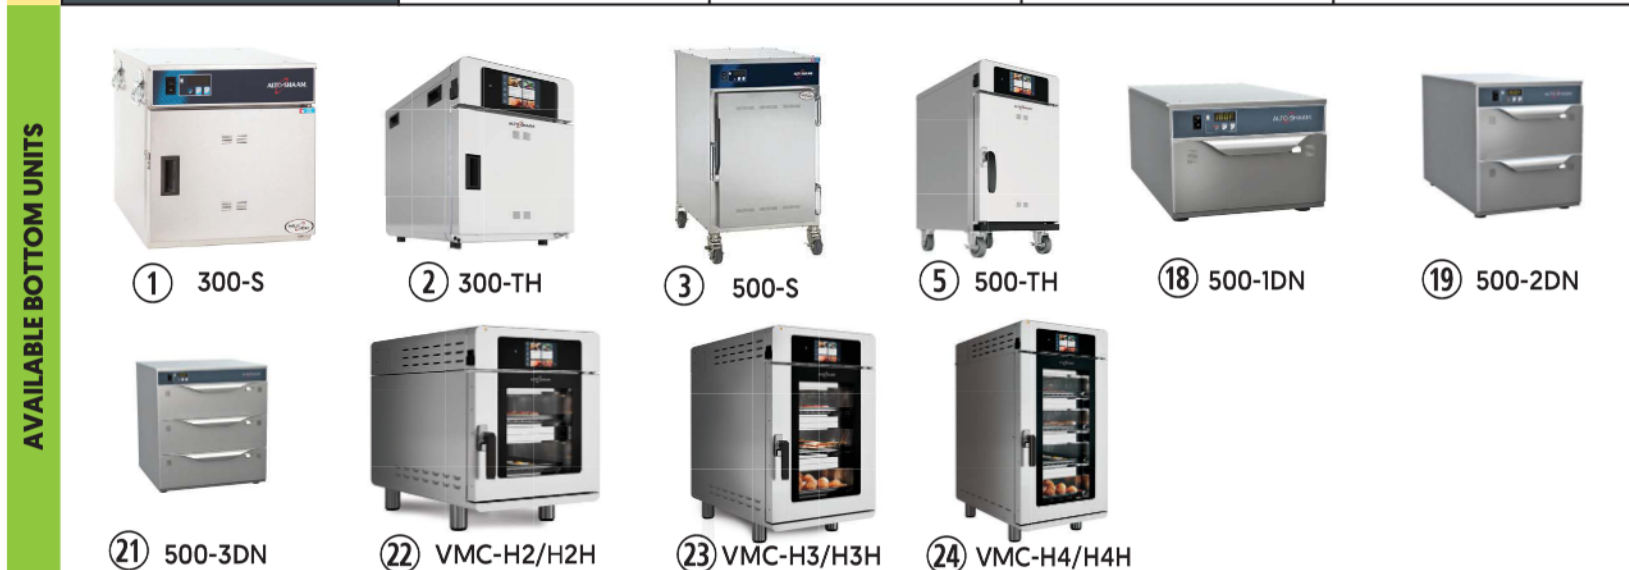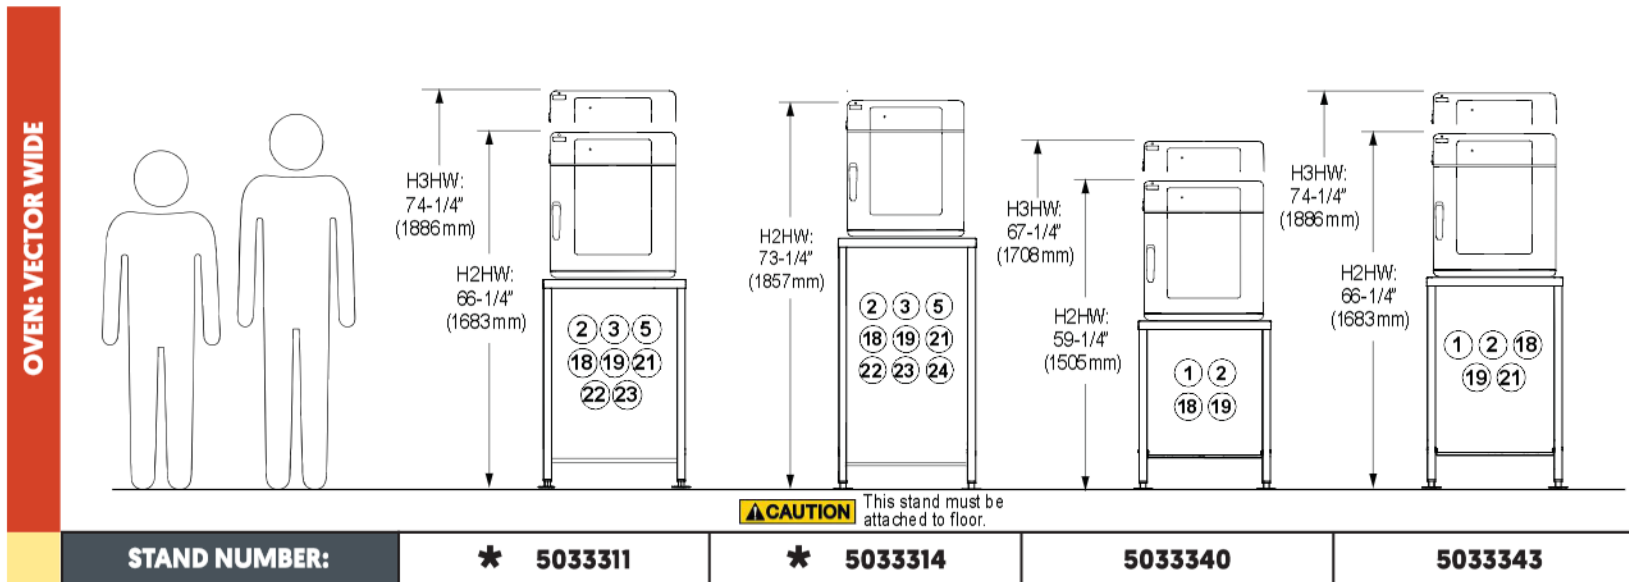

Combinations—25-1/2" (648mm) Wide Stands [continued]

Notes: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR H/HH

STAND NUMBER:	5033337	5033346	5033355	5033498	
AVAILABLE BOTTOM UNITS	 ① 300-S	 ② 300-TH	 ⑱ 500-1DN	 ⑲ 500-2DN	 ㉑ 500-3DN
	 ㉒ VMC-H2 / H2H				

Combinations—25-1/2" (648mm) Wide Stands [continued]


Notes: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR WIDE

STAND NUMBER:	5033501	5033504	5033507	5033510
	AVAILABLE BOTTOM UNITS 18 500-1DN 20 500-2DN with 3" (76mm) casters only			


Combinations—25-1/2" [648mm] Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" [1651mm] and 6' [1829mm] tall. To order an unassembled stand, add an "R" to the part number.

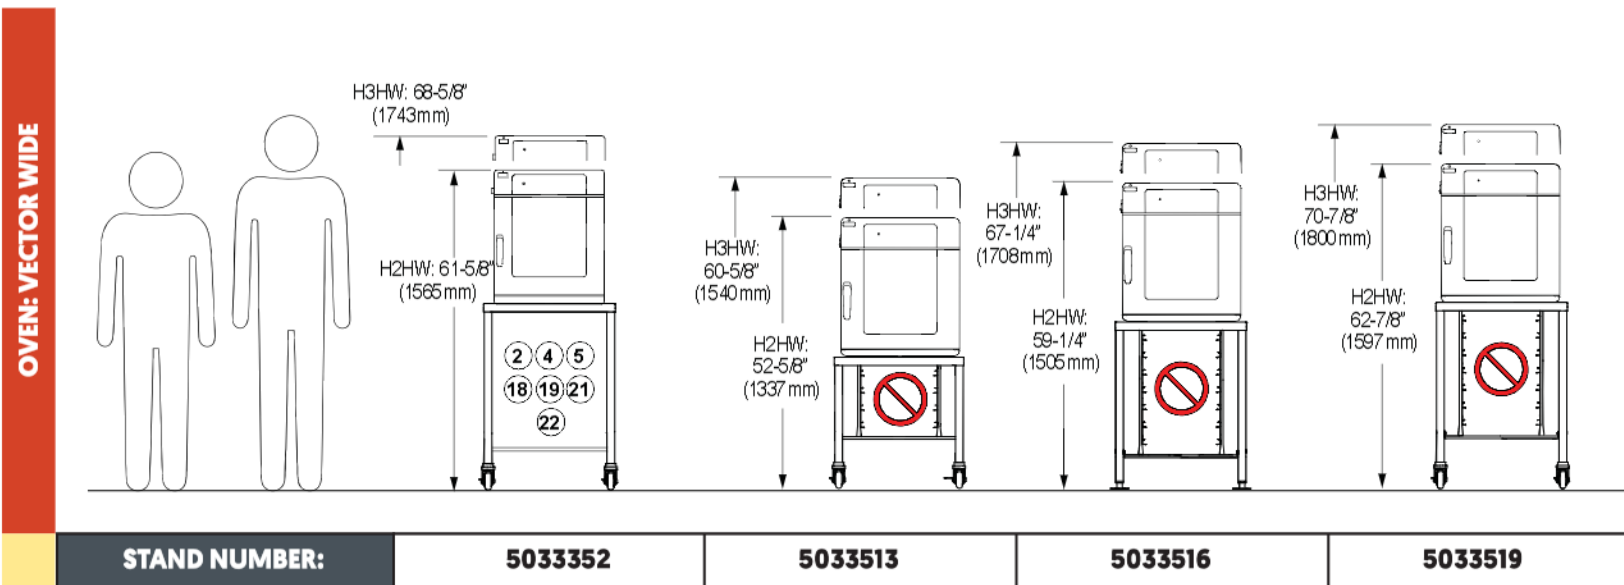

Combinations—25-1/2" (648mm) Wide Stands [continued]


Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

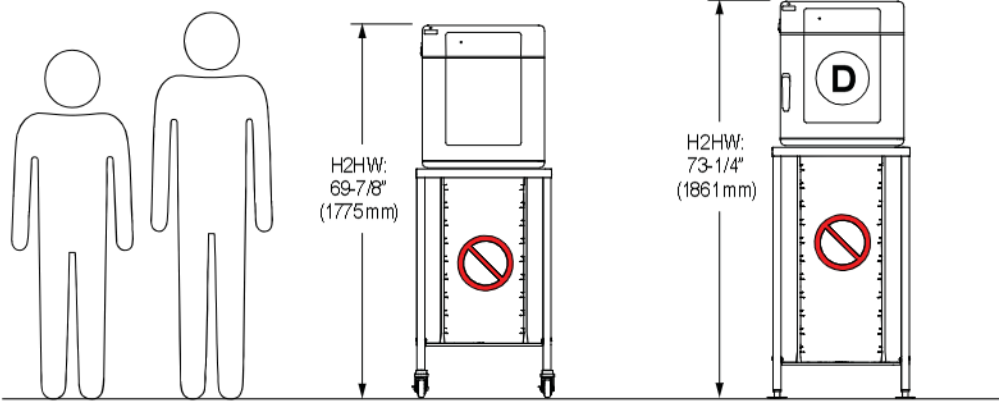OVEN: VECTOR WIDE			
	STAND NUMBER:	5033522	5033525
AVAILABLE BOTTOM UNITS	None		

Combinations—29-1/2" (749mm) Wide Stands

Notes: The human figures at left are provided for general height reference. They are depicted as 5'-5" [1651mm] and 6' [1829mm] tall. To order an unassembled stand, add an "R" to the part number. A star symbol indicates a popular choice.

OVEN: VECTOR WIDE

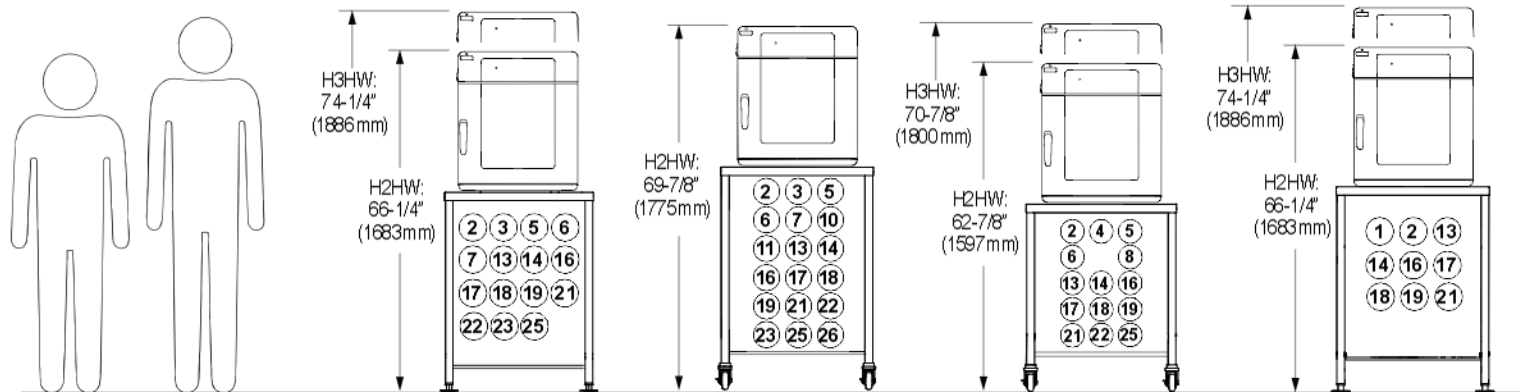

STAND NUMBER:

5033317

5033358

* 5033384

5033394

AVAILABLE BOTTOM UNITS



① 300-S



② 300-TH



③ 500-S



④ 500-S
except ovens with
5" [127mm] casters



⑤ 500-TH



⑥ 750-TH



⑦ 750-S



⑧ 750-S
except ovens with
5" [127mm] casters



⑩ 1000-S
except ovens with
5" [127mm] casters



⑪ 1000-TH



⑬ 500-ID



⑭ 500-2D



⑯ 500-3D



⑰ 500-2DI



⑱ 500-1DN



⑲ 500-2DN



⑳ 500-3DN



㉒ VMC-H2/H2H



㉓ VMC-H3/H3H



㉕ VMC-H2HW




㉖ VMC-H3HW

Combinations—29-1/2" (749mm) Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR WIDE

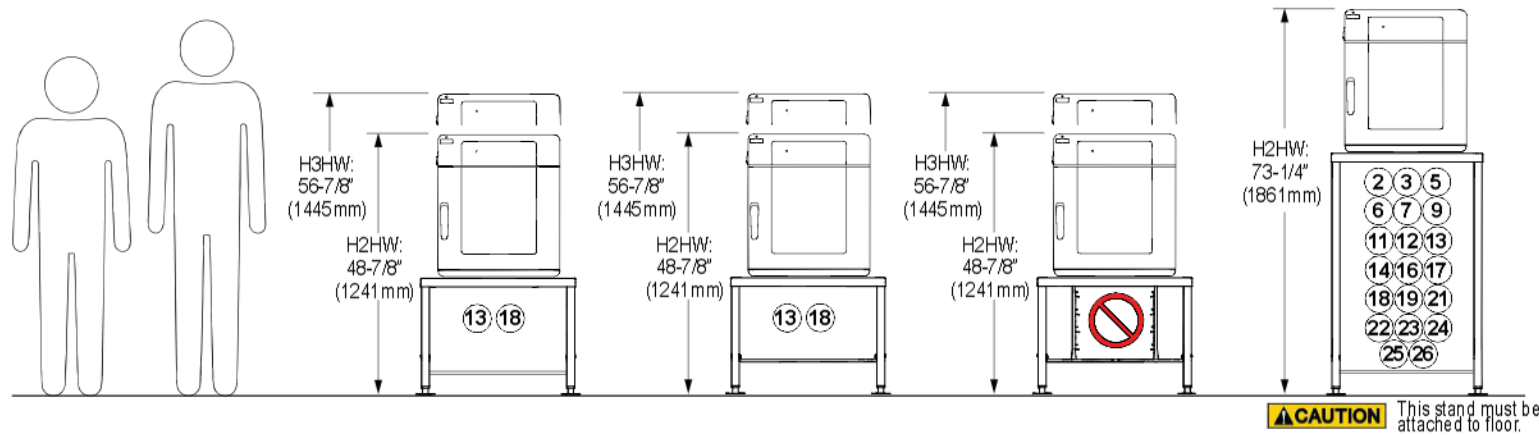

STAND NUMBER:

5033532

5033535

5033538

5033349


AVAILABLE BOTTOM UNITS



Combinations—29-1/2" (749mm) Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR WIDE

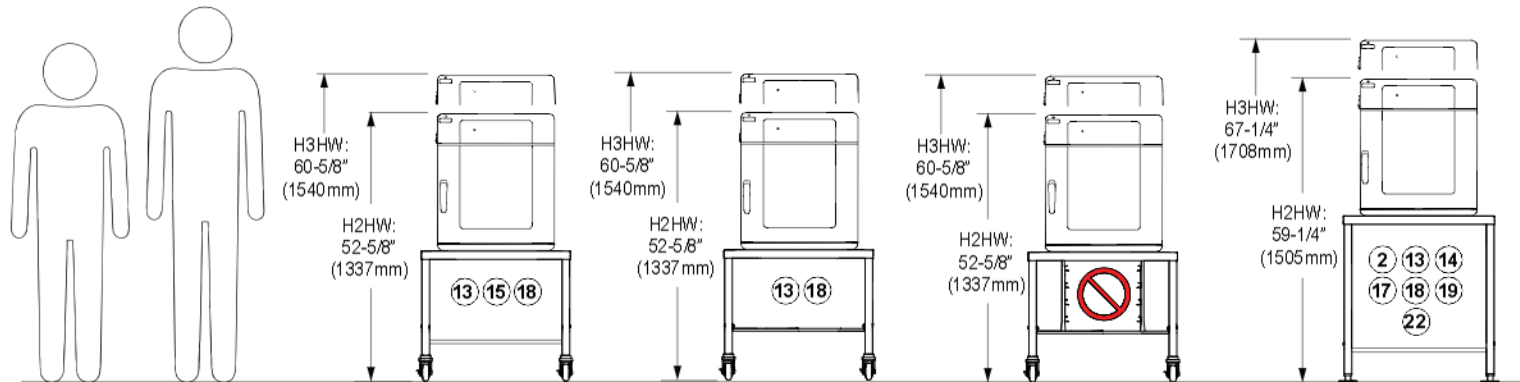

STAND NUMBER:

5033541

5033544

5033547

5033549

AVAILABLE BOTTOM UNITS



② 300-TH



⑬ 500-ID



⑭ 500-2D



⑮ 500-2D
with 3" (76mm)
casters only



⑰ 500-2DI



⑱ 500-IDN



⑲ 500-2DN




⑳ VMC-H2/H2H

Combinations—29-1/2" (749mm) Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" (1651mm) and 6' (1829mm) tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR WIDE

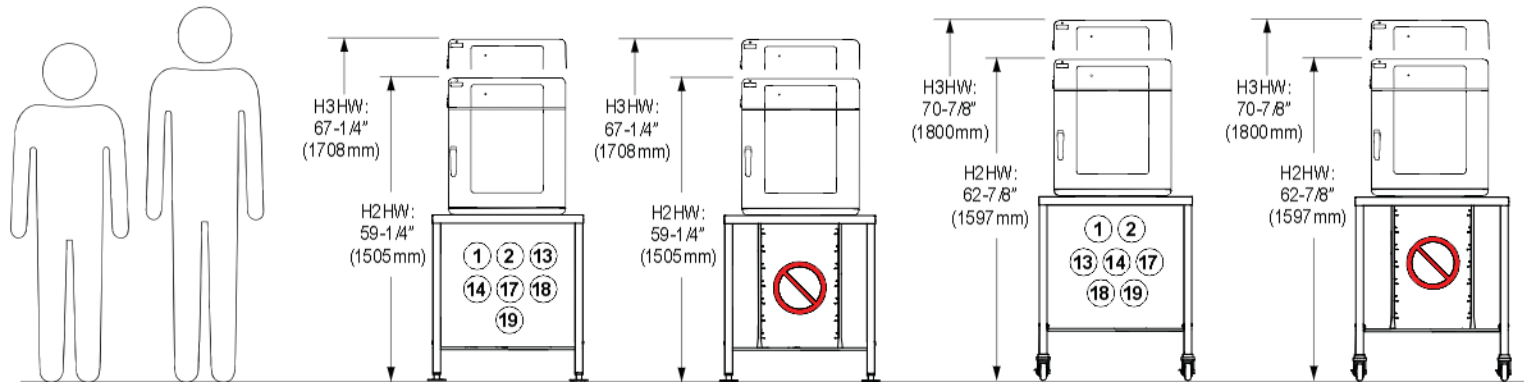

STAND NUMBER:

5033553

5033556

5033559

5033562

AVAILABLE BOTTOM UNITS



① 300-S



② 300-TH



⑬ 500-1D



⑭ 500-2D



⑰ 500-2DI



⑱ 500-1DN




⑲ 500-2DN

Combinations—29-1/2" [749mm] Wide Stands [continued]

Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" [1651mm] and 6' [1829mm] tall. To order an unassembled stand, add an "R" to the part number.

OVEN: VECTOR WIDE

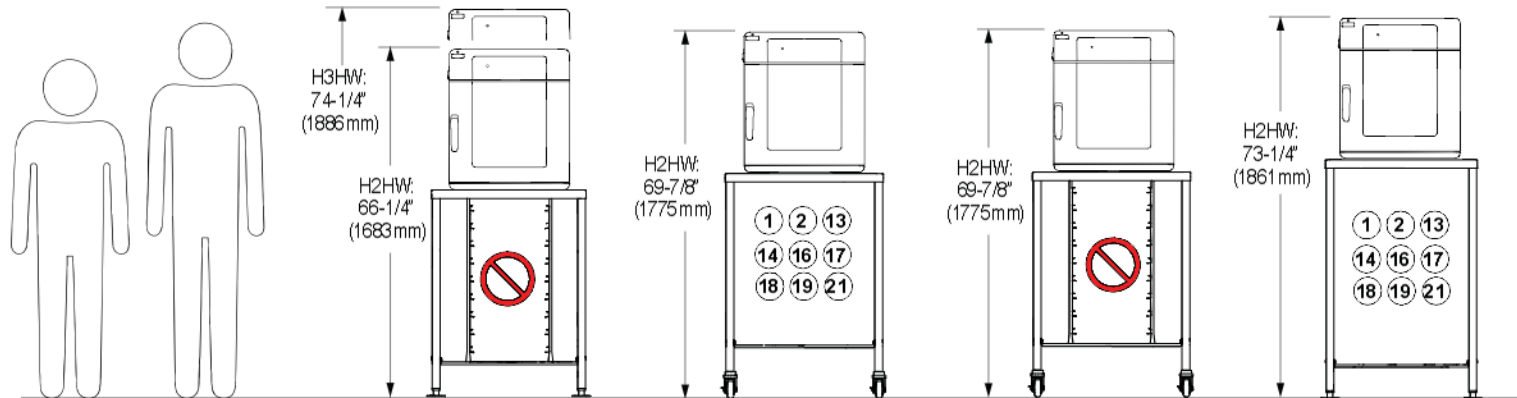

STAND NUMBER:

5033565

5033568

5033571

5033574

AVAILABLE BOTTOM UNITS



① 300-S



② 300-TH



⑬ 500-ID



⑭ 500-2D



⑯ 500-3D



⑰ 500-2DI



⑱ 500-1DN




⑲ 500-2DN



⑳ 500-3DN

Combinations—29-1/2" (749mm) Wide Stands [continued]


Note: The human figures at left are provided for general height reference. They are depicted as 5'-5" [1651mm] and 6' [1829mm] tall. To order an unassembled stand, add an "R" to the part number.

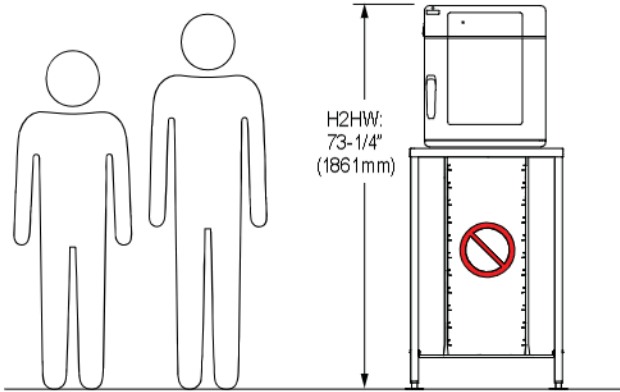OVEN: VECTOR WIDE			
	STAND NUMBER:	5033577	
AVAILABLE BOTTOM UNITS	None		

How to Attach the Oven to the Stand

Each Vector Wide oven stand kit includes the stand itself and four mounting screws required to attach the oven to the stand. Service document SRV-20196 contains detailed information about mounting ovens to stands.

- Unscrew and remove the oven legs before attaching to the stand.
- Mounting screw holes align with existing threaded holes on the underside of the Vector Wide oven.
- The stand top panels feature etched letters identifying the mounting screw knockout locations. As shown below, use the holes labeled "W" to properly mount the oven.

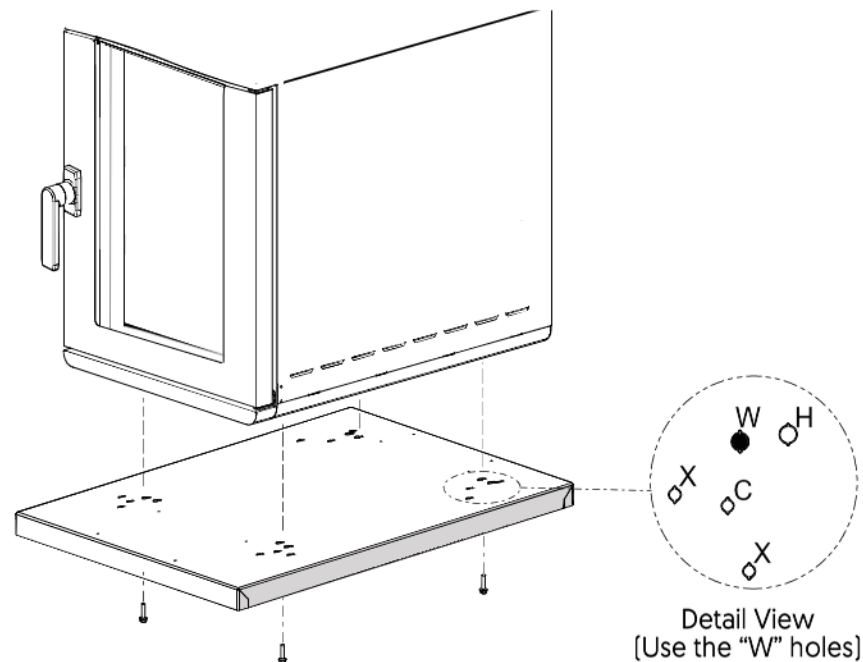


How to Adjust the Side Racks [if applicable]

Stands equipped with side racks allow the user to set the side racks at two different widths to accommodate pans or Vector Wide multi-cook oven jet plates. The right side rack can be moved 2" [51mm] inward if desired. See the illustration below.

To move the right side rack:

- 1) Raise the rack above the lower shelf and rotate it toward the center of the stand until the top tabs are free.
- 2) Shift the top tabs to the inner slots on the underside of the top panel. Insert the top tabs into the inner slots.
- 3) Finally, rotate the rack back to the vertical position and lower it into the inner slots on the lower shelf.

Refer to service document SRV-20196 for additional help if necessary.

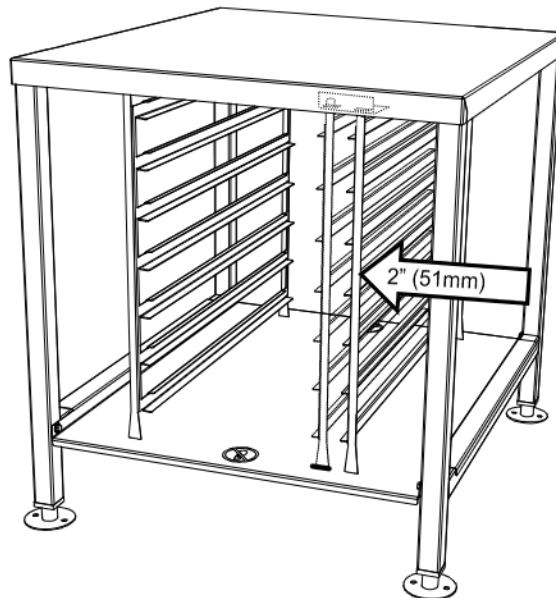


Stand Dimensions


Dimensional views of each stand are provided below and on the following pages.

NOTES: Length and width dimensions at the base refer to stand "footprints"; in other words, the overall floor space required.


Height dimensions refer to the maximum distance from the floor to the top of the stands because flanged feet are adjustable.

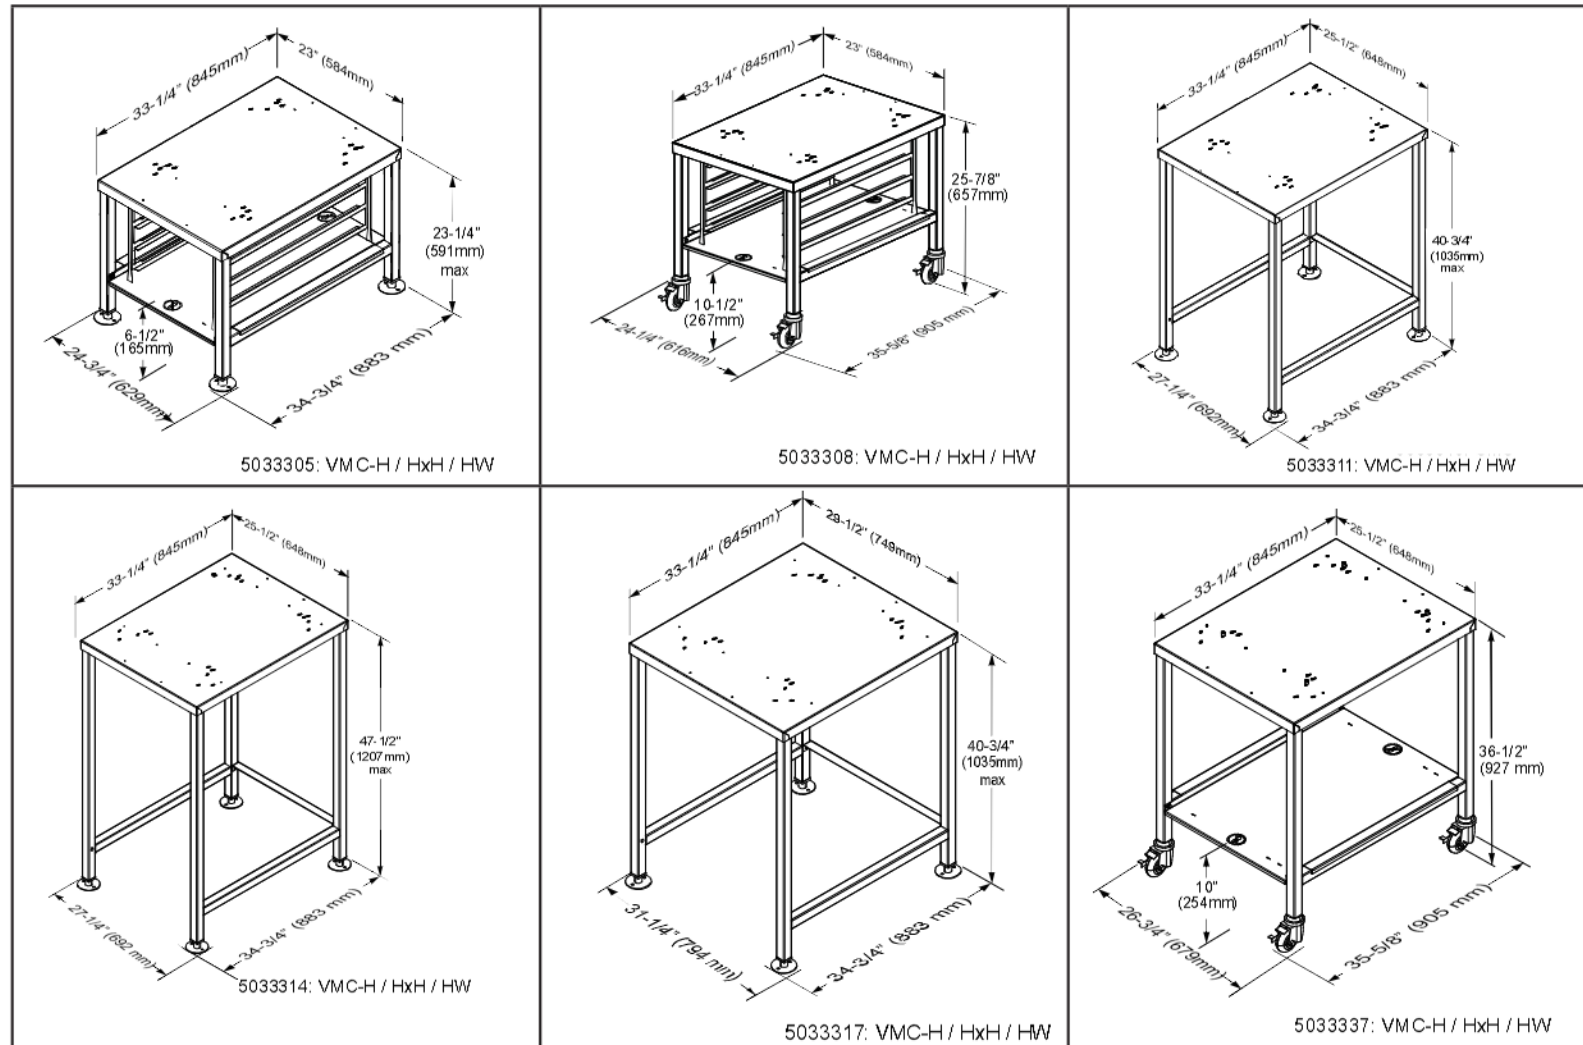


Stand Dimensions [continued]

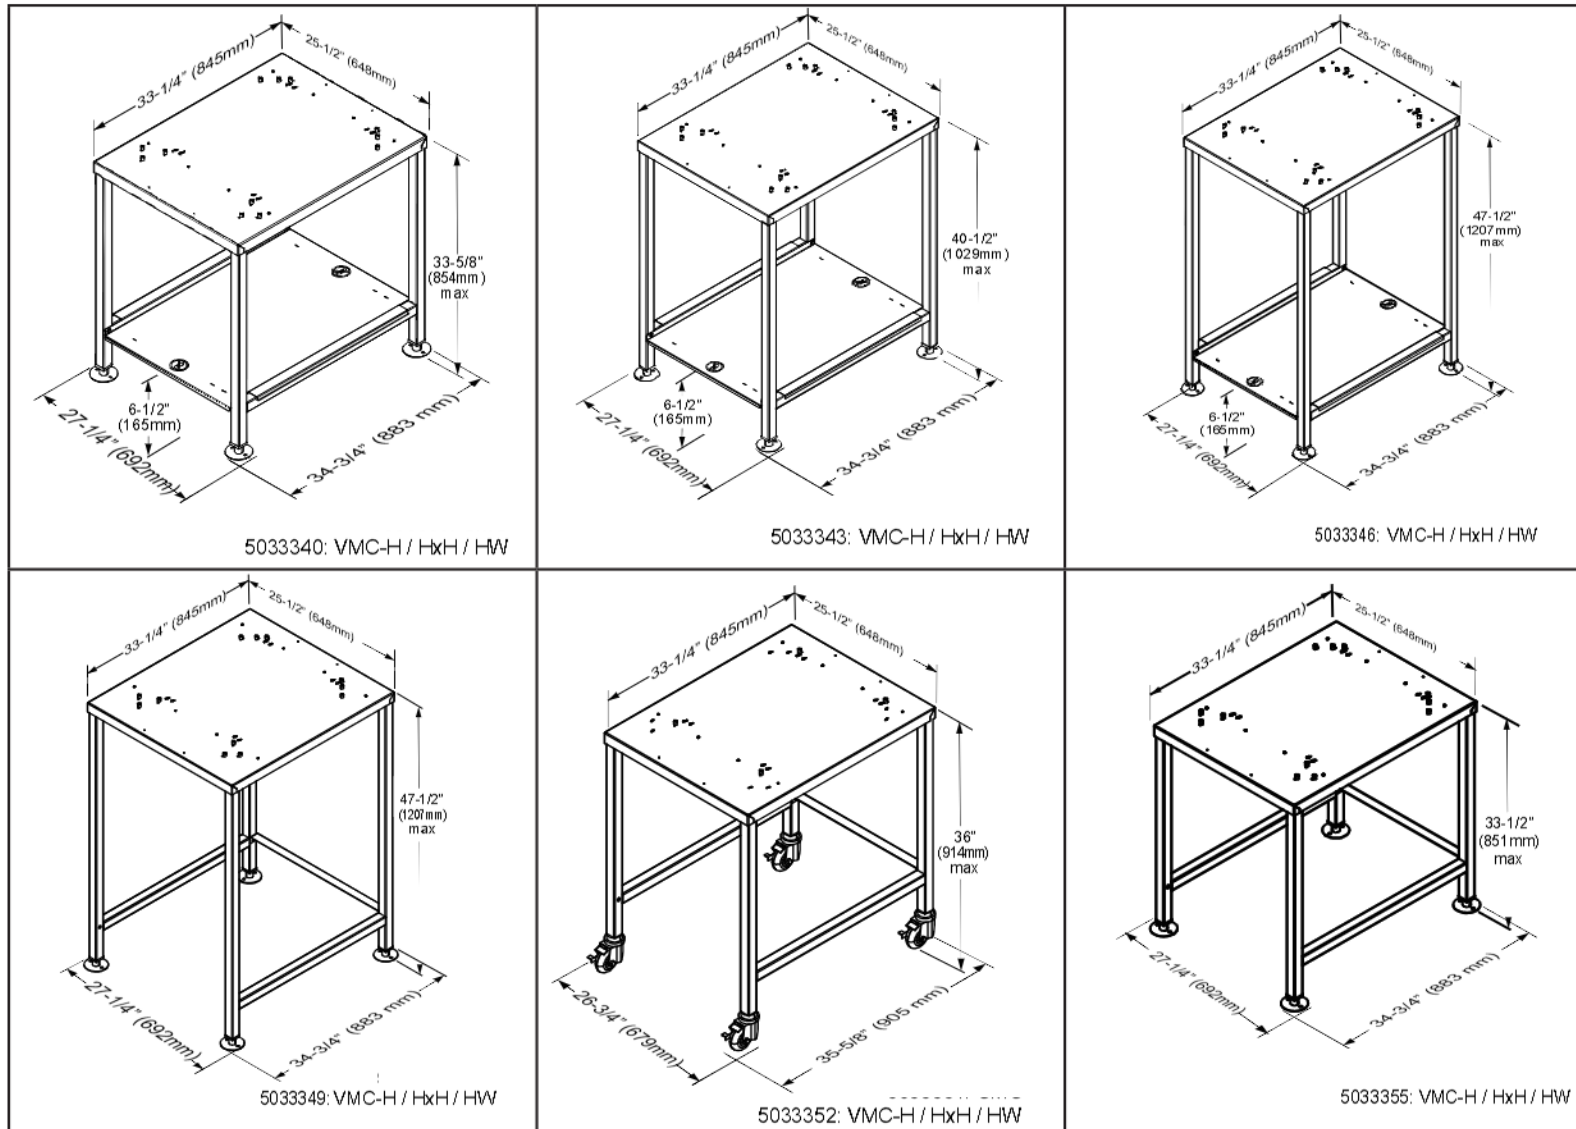


Stand Dimensions [continued]

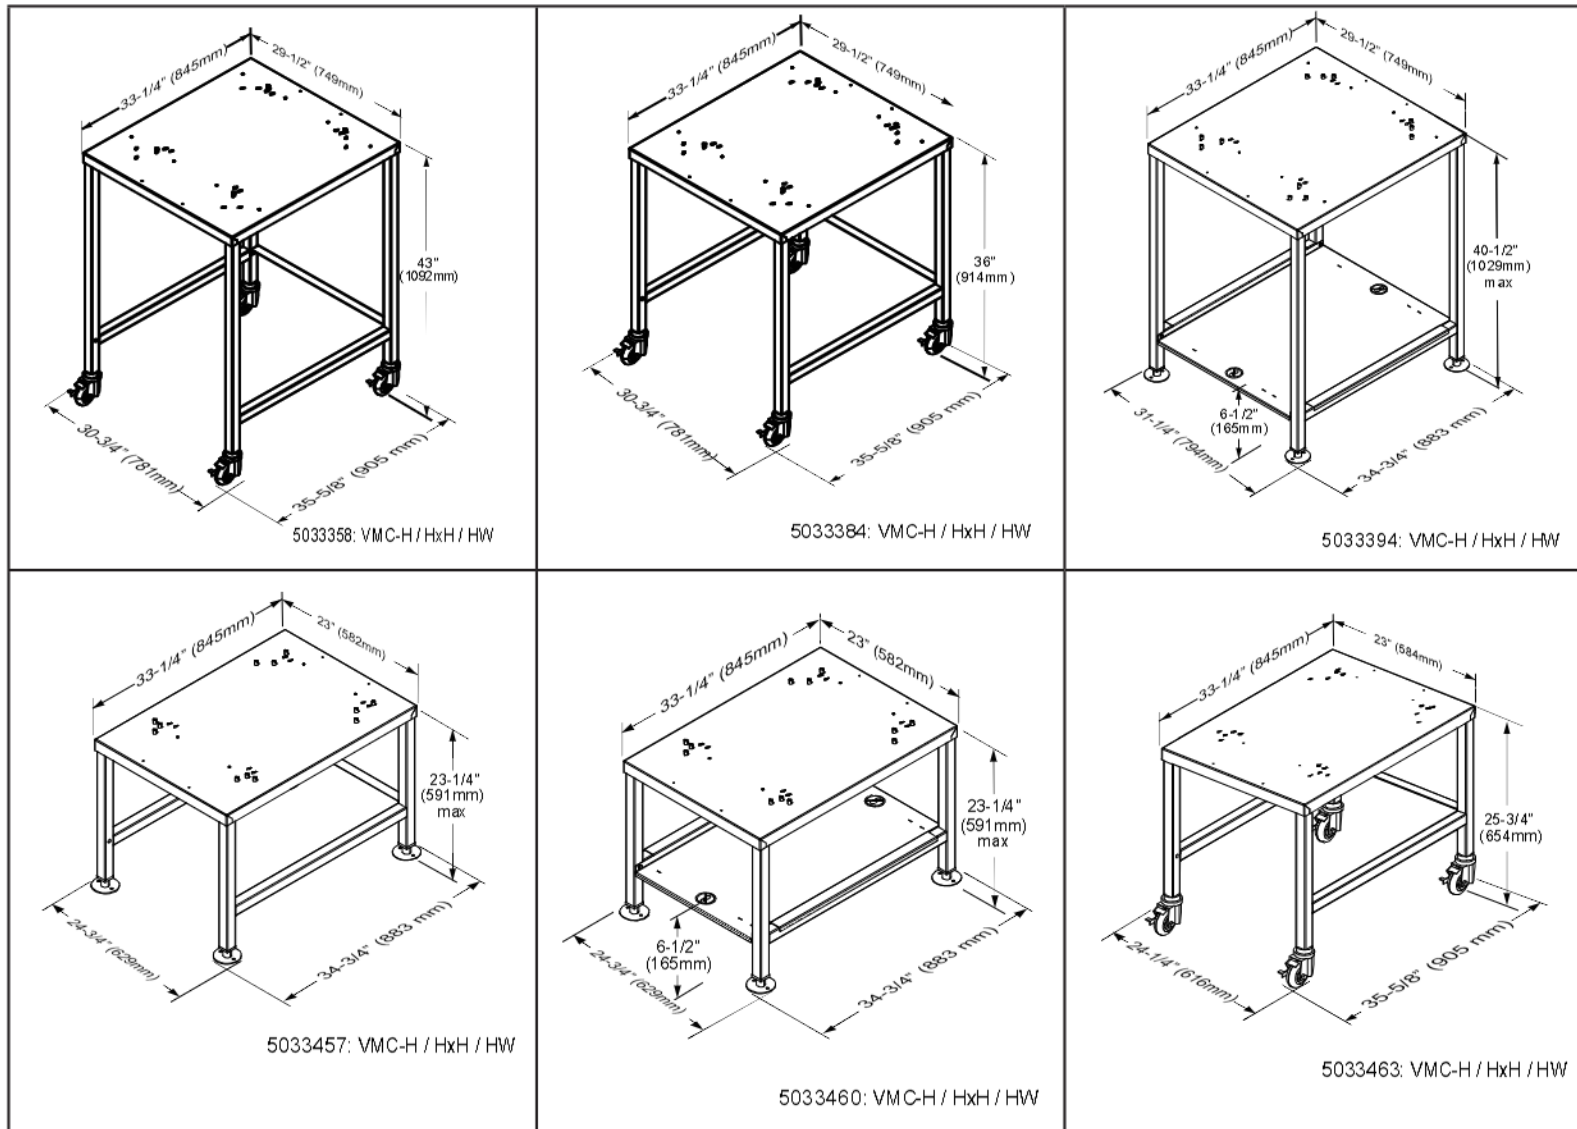


Stand Dimensions [continued]

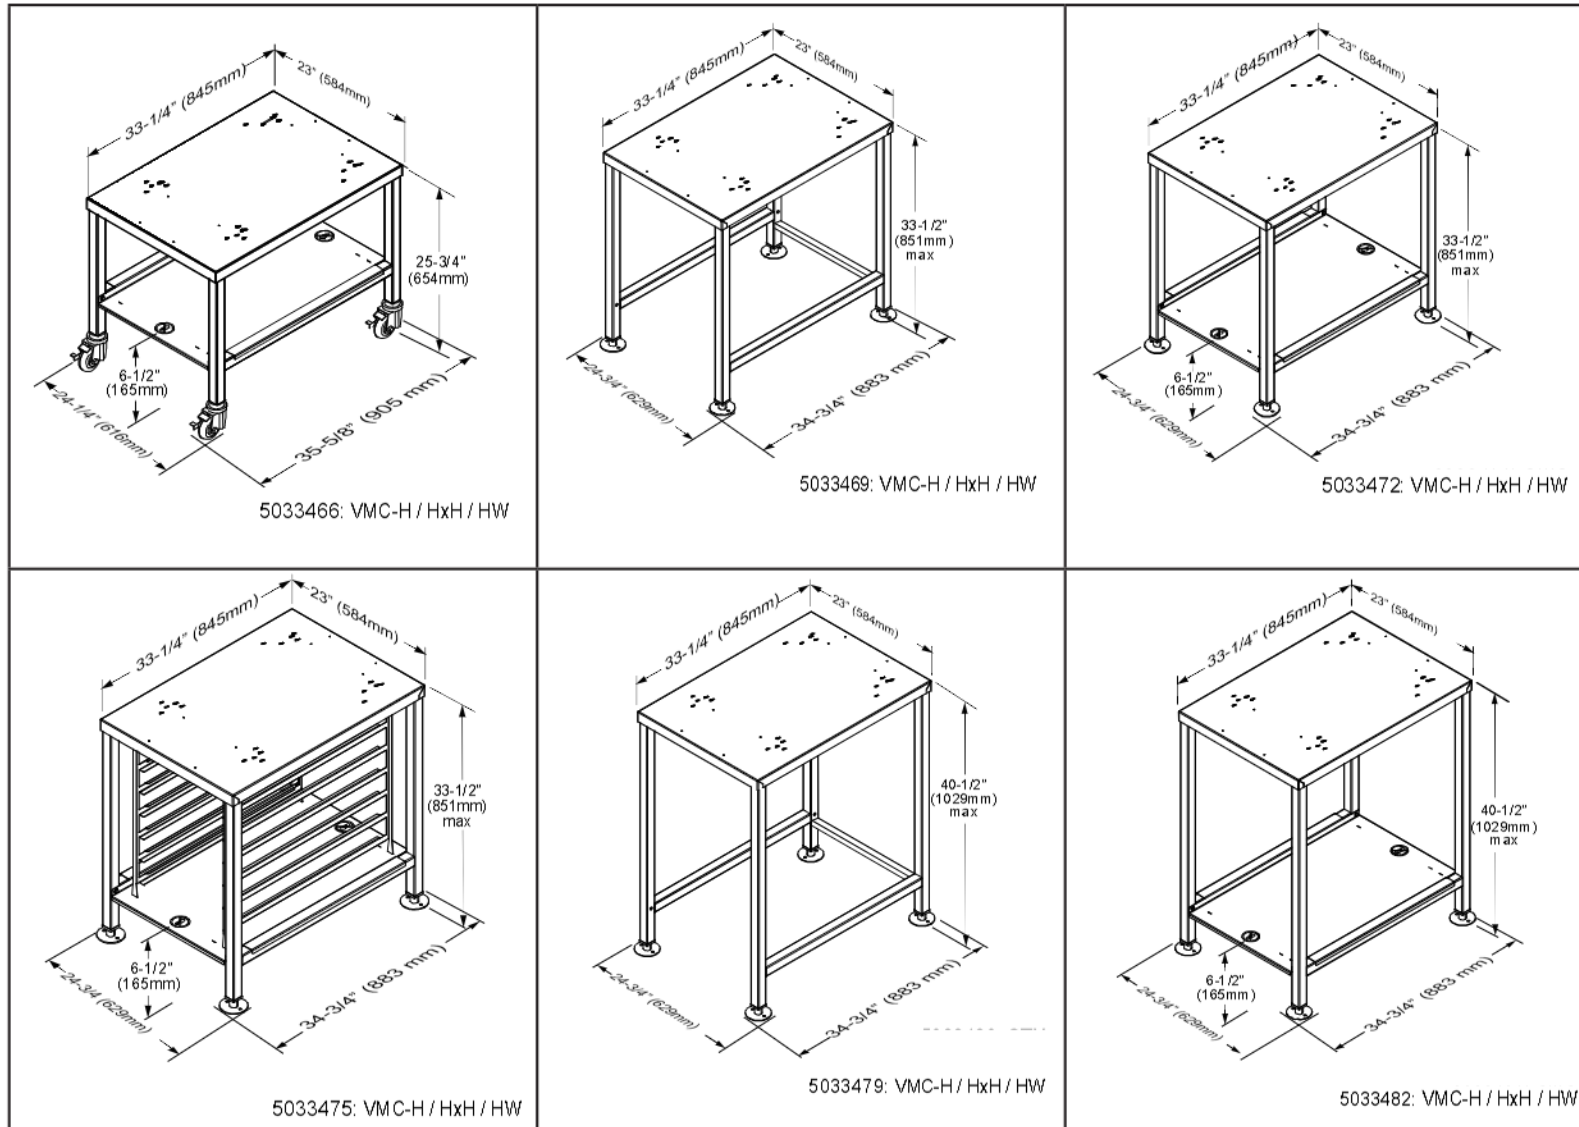


Stand Dimensions [continued]

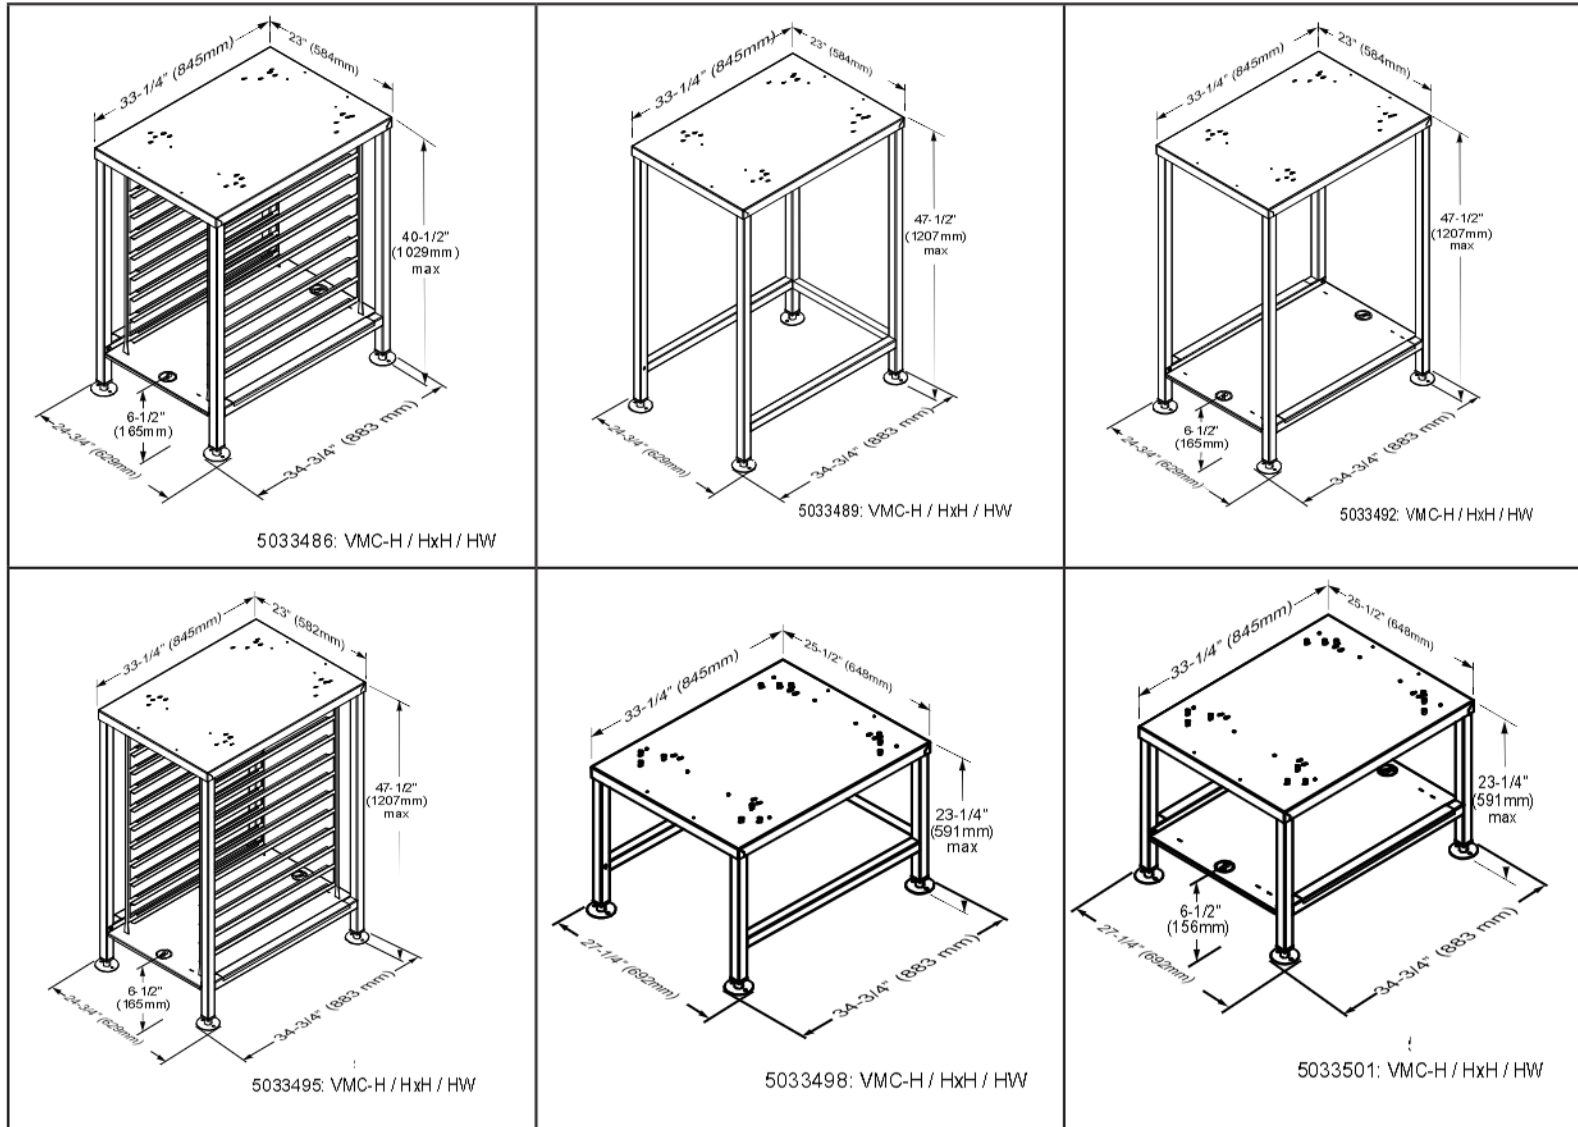


Stand Dimensions [continued]

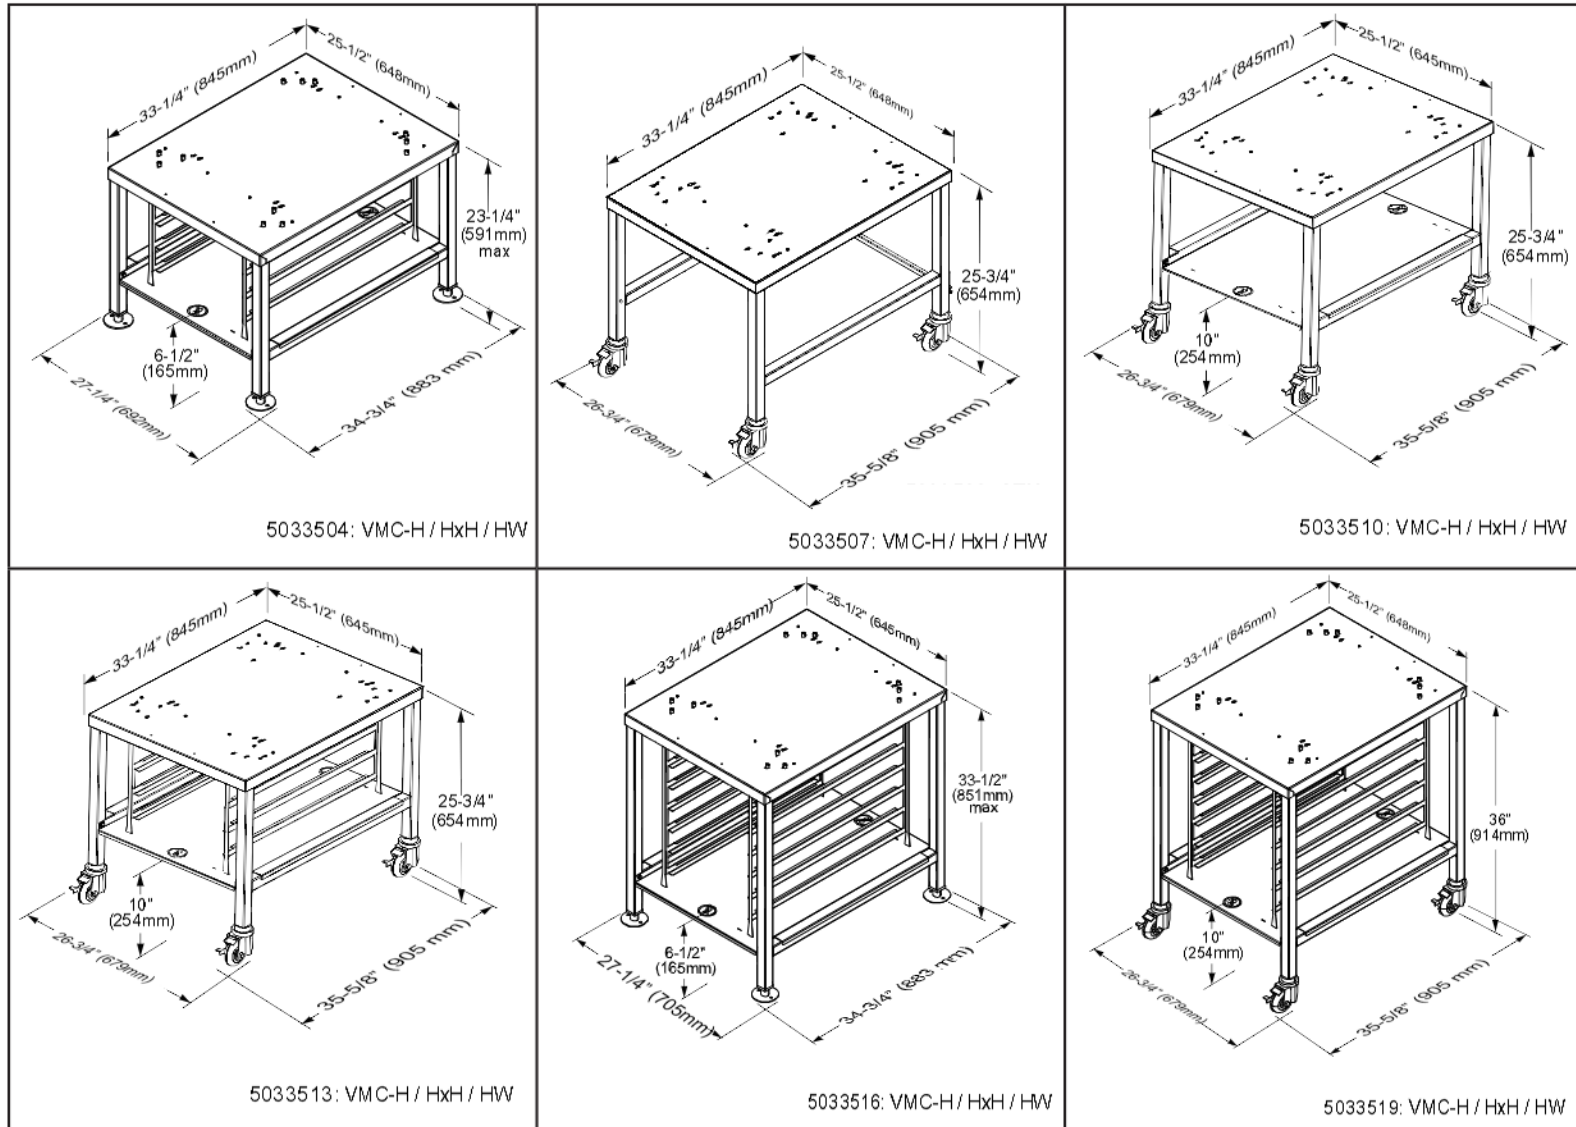


Stand Dimensions [continued]

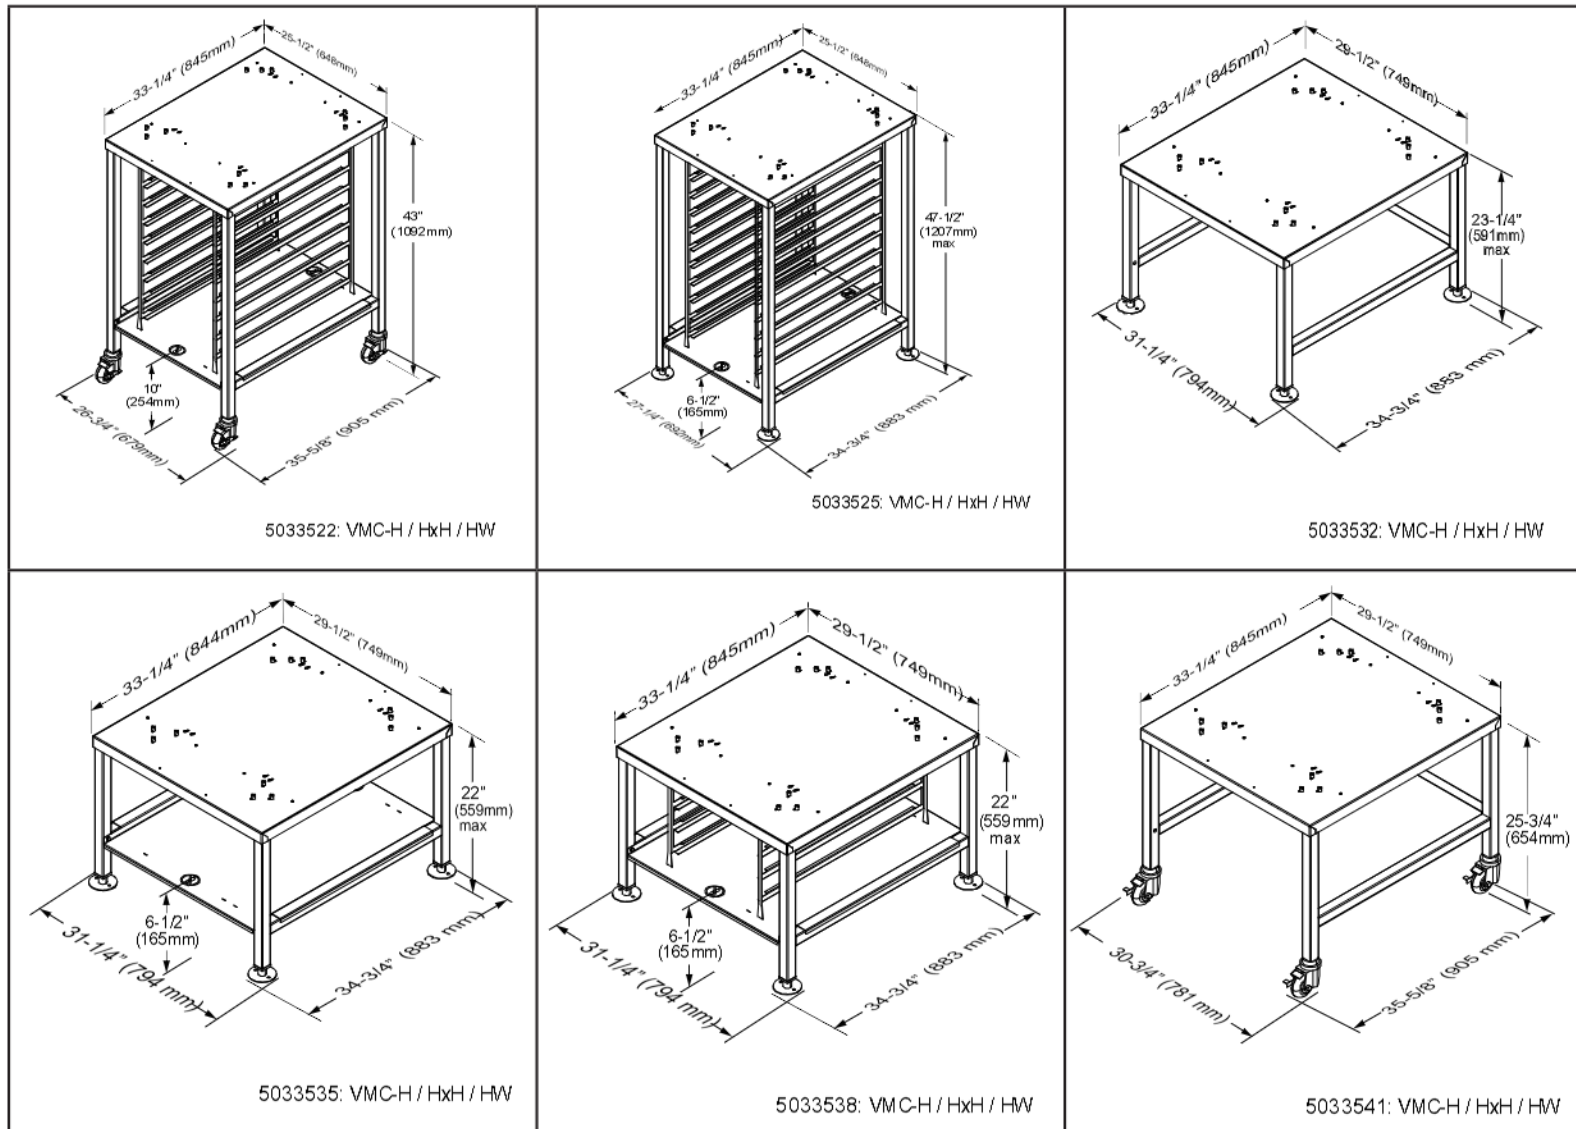


Stand Dimensions [continued]

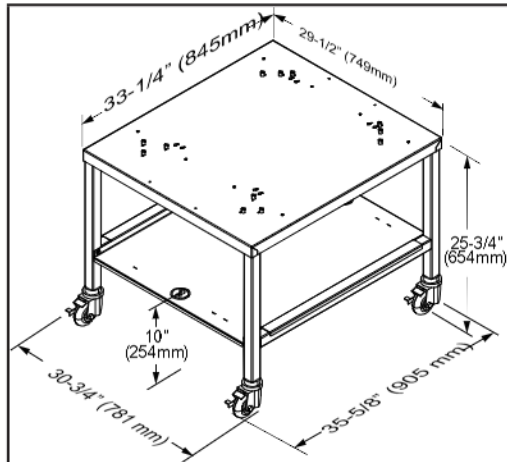


5033544: VMC-H / HxH / HW

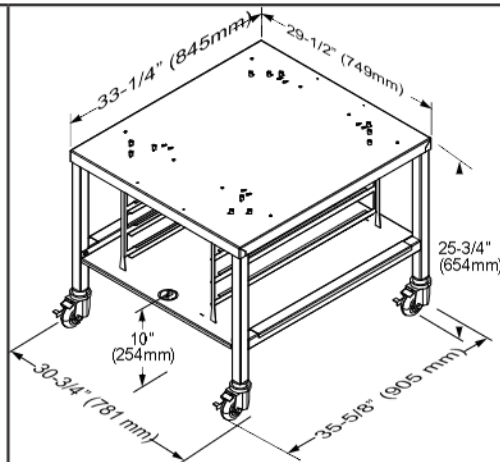


5033547: VMC-H / HxH / HW

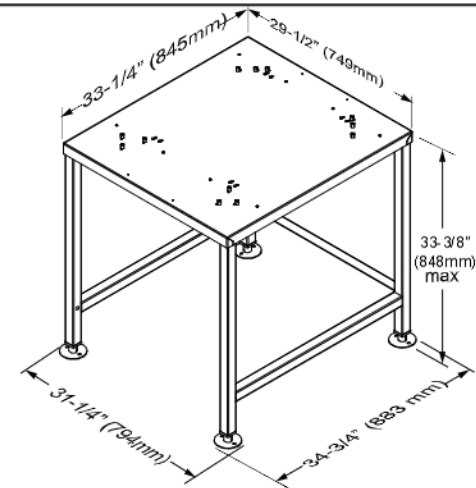


5033549: VMC-H / HxH / HW

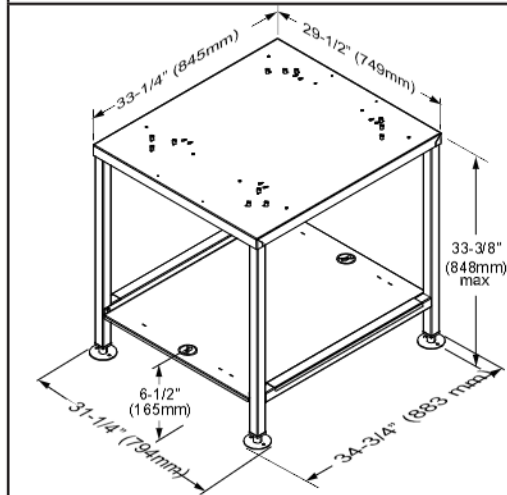

5033553: VMC-H / HxH / HW

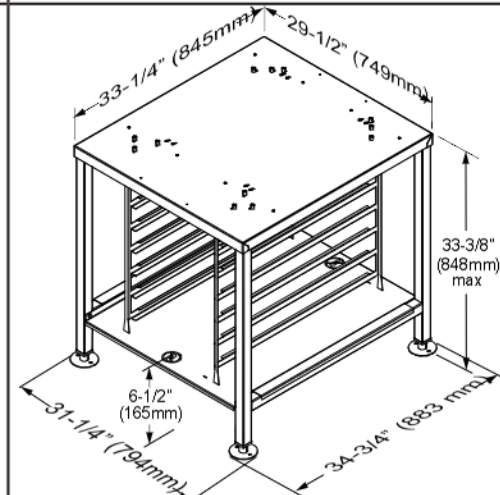


5033556: VMC-H / HxH / HW

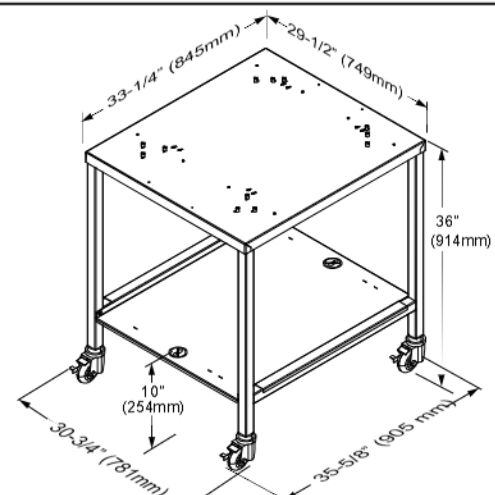

5033559: VMC-H / HxH / HW

Stand Dimensions [continued]

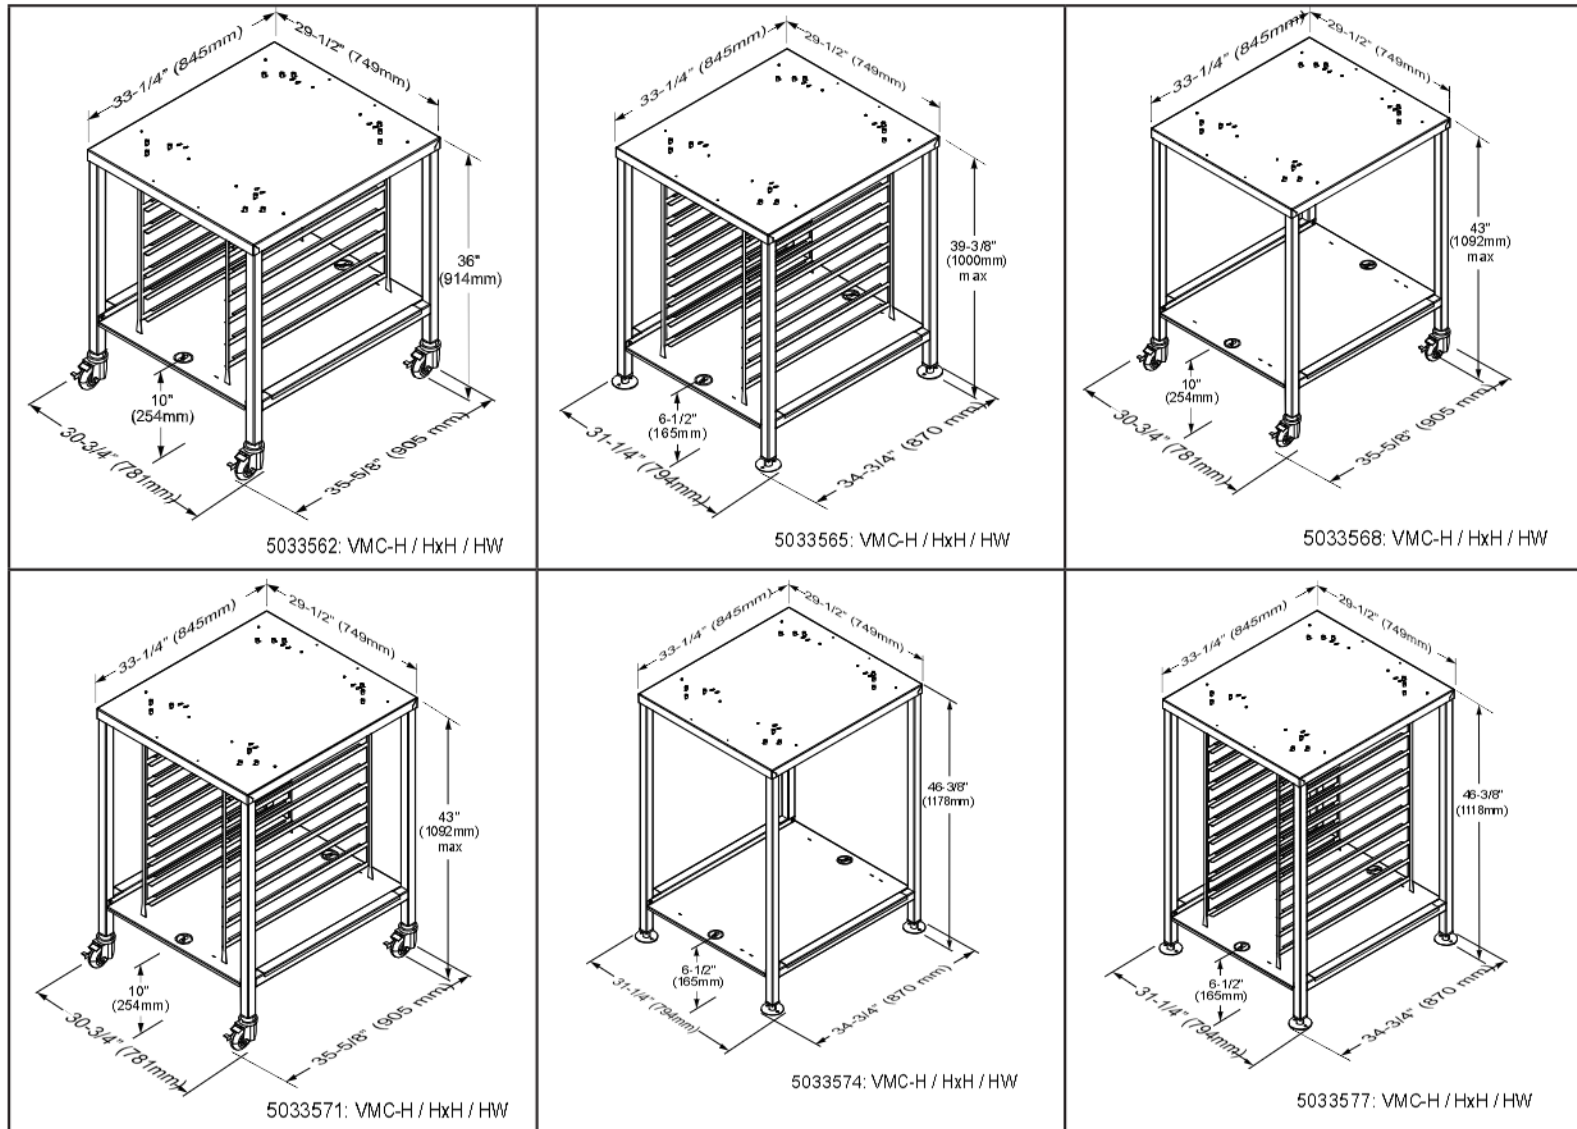



Menomonee Falls, WI U.S.A.

Phone 800-558-8744 | +1-262-251-3800 | alto-shaam.com