

Visit telephone transmitter

BE1431



Features

Works for most phone types
Both landline and mobile phones*

Multiple connections
Three separate trigger inputs

Customizable notification
Choose one for each trigger

Long lasting power
Up to 5 years of battery life

Secure radio link
Up to 80 m operating range

* Mobile phone sensor accessory required

Stay in touch with your loved ones.

The telephone transmitter from Bellman & Symfon is part of the Visit smart home system that helps you to keep tabs on your home. It can be used to detect both your landline and mobile phone – or even an incoming message on your tablet (accessory required).

How it works

When the telephone transmitter is activated, it signals your Visit receiver that notifies you with sound, flashes or vibrations (depending on the receiver).

It is equipped with three triggers that, aside from telephone detection, can be used for:

- A contact mat accessory
- A magnetic switch accessory
- An existing doorbell, etc.

The telephone transmitter allows you to choose an individual alert for each trigger and it uses a robust radio link that covers your entire home. It is very easy to set up, virtually maintenance free and operates for years on standard batteries.






Technical specifications

Size and weight

Height:	100 mm, 4.0"
Width:	65 mm, 2.6"
Depth:	27 mm, 1.1"
Weight:	120 g, 4.2 oz. (incl. batteries)



Buttons and connectors

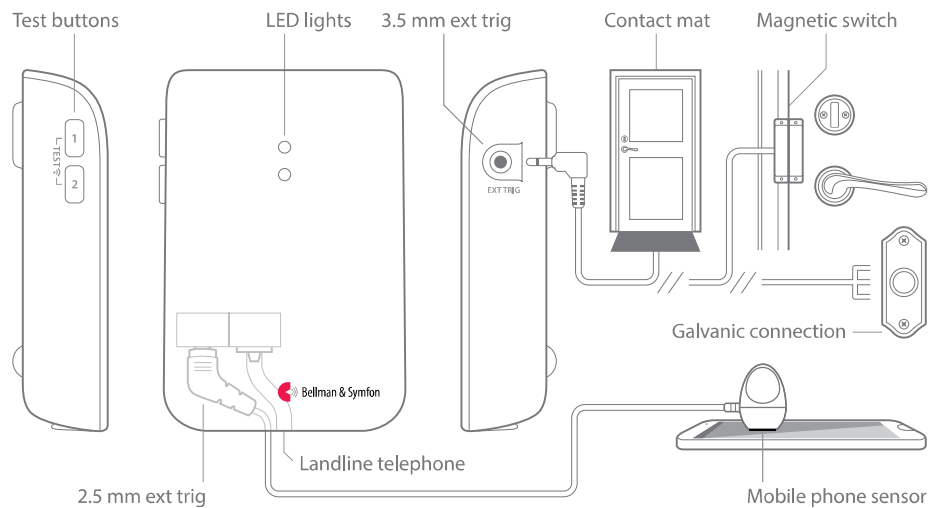

Inputs/outputs

- RJ11 input to analogue telephone network
- 2.5 mm ext trig input for the mobile phone sensor
- 3.5 mm ext trig input for other accessories

Activation

- The test buttons and the landline telephone
- A smartphone/tablet via the mobile phone sensor
- The contact mat or magnetic switch accessory
- A doorbell, etc. connected to the ext trig

Frequency and coverage

- Radio frequency: 433.92 MHz
- Coverage: 30 – 80 m (98 – 260 ft), depending on the building's characteristics and the combination of transmitters and receivers.

Power and battery

- Power supply
Battery power 2 x 1.5 V AA lithium or alkaline
- Power consumption
Active < 70 mA, idle position < 15 μ A
- Operation time
Alkaline ~ 5 years, lithium ~ 10 years

Number of radio keys

- 64 as standard. Up to 256 with optional software.

Maintenance and cleaning

- Maintenance free. Clean with a dry cloth.
- Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
- Not reusable.

Environmental requirements

- For indoor use only.
- Temperature: 0° to 35° C , 32° to 95° F
- Relative humidity: 15% to 90% (non condensing)

In the box

- BE1431 Visit telephone transmitter
- 2 x 1.5V AA alkaline batteries
- Velcro for wall mounting
- Alcohol wipe
- Screw and plug
- User manual



Accessories

The following accessories are available:

- BE9250 Mobile phone sensor
- BE9023 Magnetic switch
- BE9026 Contact mat
- BE9253 Ext trig cable (3.5 mm connector)

© 2021 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1431_001DAS003 (US)

bellman.com