

EZ-PRO™ 2/3/5 (EZP2746/EZP2135/EZP2883)

Your **EZ-PRO™ 2/3/5 Table-Top Dispenser** comes with the **PRO-6W Silicon Portion Wheel (1 oz)**. This portion wheel is perfect for dispensing items such as medium grind cookies, cereals & granolas, trail mixes and coffee beans!

SETTING UP YOUR PRODUCT




1. Carefully remove all parts from packaging and poly bags.

- Depending on your model, you will have 2, 3 or 5 EZ-PRO™ containers each with:

- Lid
- PRO-6W Silicon Portion Wheel
- Regular Nozzle
- Container
- Label Holder
- PRO Fresh Lid
- Handle
- Handle Clip

- 1 Stainless Steel Stand with detachable Base and Tray

EZ-PRO™ 2: ITEM # EZP2746
EZ-PRO™ 3: ITEM # EZP2135
EZ-PRO™ 5: ITEM # EZP2883

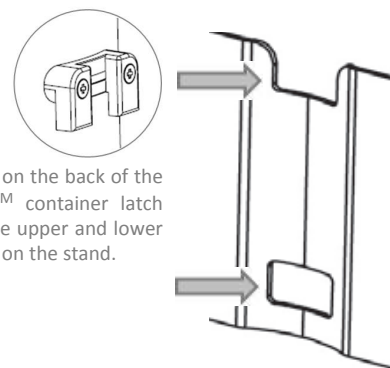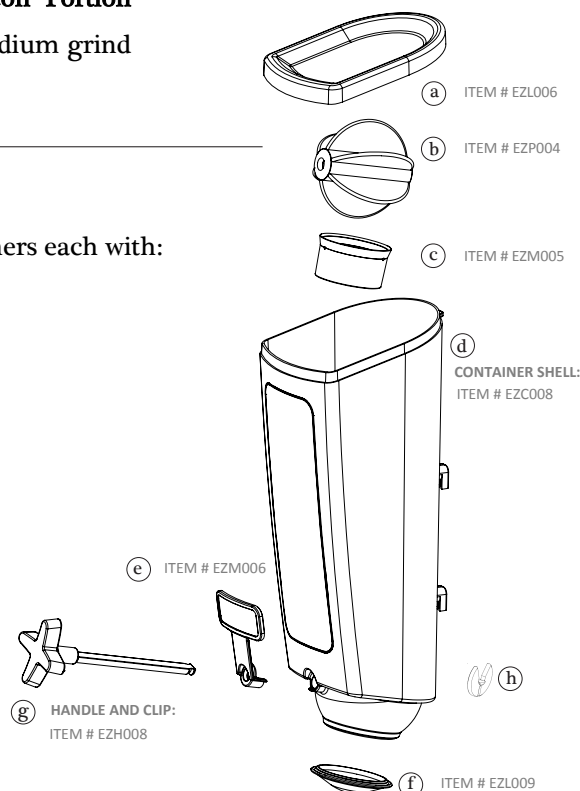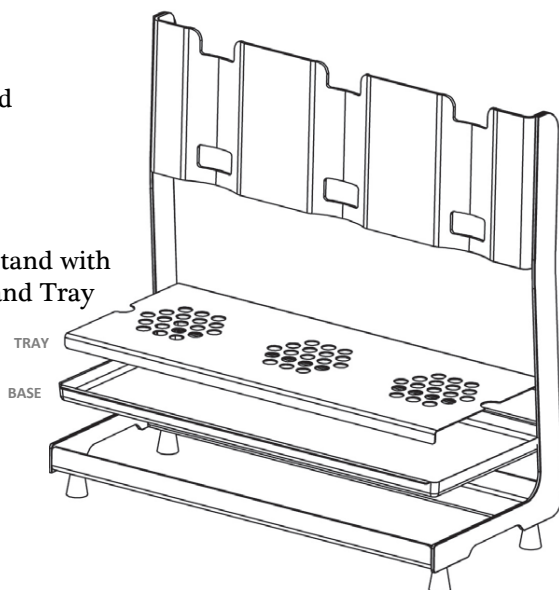

- Make sure you have all parts listed above before discarding packaging.
- Place the stand on a flat surface facing you.
- Set the base on the stand and place the tray on top of it.
- Fill an EZ-PRO™ container with desired product and seal with the lid.
- On the back of each container are 2 hooks that fit snugly onto the allotted notches on the stand. Install a container by securing both hooks on the upper and lower notches. Make sure it locks into place.
- If desired, you may place an identifying label on the label holder.
- Repeat steps 5 thru 7 for the remaining containers.
- Dispense as you please!

NEED ASSISTANCE?

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712
Visit our website at: www.rosseto.com

CARING FOR YOUR CONTAINER

CLEANING INSTRUCTIONS:

1. To maintain the quality of your EZ-PRO™ container, wash all parts daily in warm soapy water. Use a non-abrasive sponge.
2. When disassembling the container, handle all parts gently. Please refrain from using too much force.
3. Reassemble the unit only after all parts are completely dry.

HOW TO DISASSEMBLE:

1. Remove the container from the stand by holding it securely and lifting directly upward, clearing the hooks from the notches on the stand.
2. Remove lid from top of container. Make sure there is no remaining product inside that can spill over.
3. Remove handle clip at the back of the container.
4. Gently pull the handle from the front of the container. Set aside both handle and label holder.
5. Reach into container and remove portion wheel by gently pulling upwards or turning container upside down. Do the same to remove the nozzle.



HOW TO ASSEMBLE:

1. Place nozzle into container, followed by the portion wheel.
2. Adjust the portion wheel inside the container, so that its holes align with the container's holes (both front and back).
3. Position the label holder so that it matches the hole on the front of the container.
4. Insert handle through the label holder and front hole. Push the shaft through the portion wheel, all the way to the back of the container.
5. Place handle clip on the back end of the shaft. Make sure the words "This Side Out" are facing out.
6. Fill container with desired dry product and place lid securely on the container.
7. Follow steps 6 and 7 on Page 1.

Need a different-sized portion wheel? We have 6 more options for you to choose from!

Other portion wheels available:

- Pro6-SM – 1 tablespoon
- EZIP007 – 1 teaspoon
- EZIP008 – 2 teaspoons
- EZIP010 – 3 teaspoons
- EZIP011 – 4.5 teaspoons

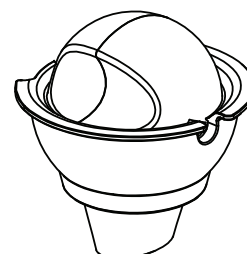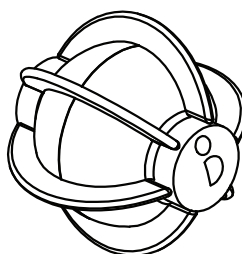

The Rosseto interchangeable portion wheels deliver just the right amount of product every time. Test each wheel with your dry foods to determine which works best for you!

NEED ASSISTANCE?

Please contact our customer support at (847)763-1215 and we'll be happy to assist with any assembly questions, comments or concerns.

ROSSETO® 3600 W. Pratt Avenue. Lincolnwood, IL 60712

Visit our website at: www.rosseto.com